FITTING DIAGRAM

AUDI RS3 8V FL SEDAN: FRONT SPLITTER

INSTALLATION AND FITTING SERVICES


If you are having any difficulties please seek professional advice from the listed International and Domestic Authorised Dealers on our website.

www.flowdesignsaustralia.com

BUMPER REMOVAL NOT REQUIRED

HANDY HINTS

 For mounting brace installation, slip each mounting brace onto the attached undertray portion of the

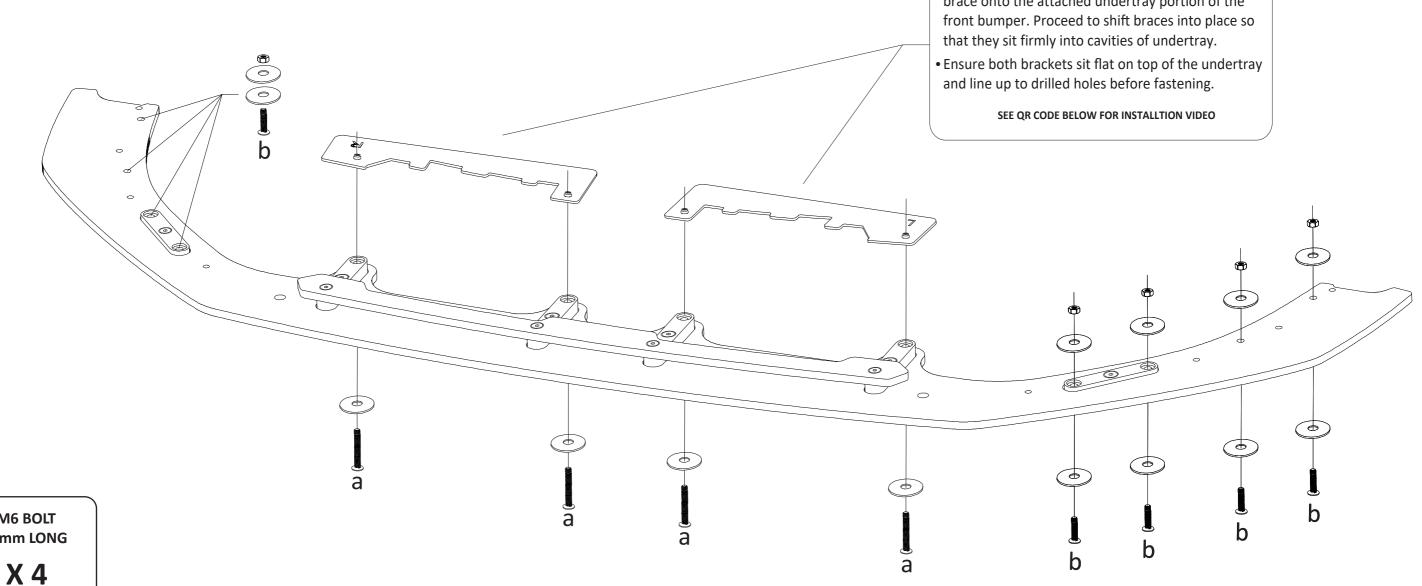

a

M6 BOLT 45mm LONG

OD 25

DRILLING REQUIRED TO FASTEN TO BUMPER


PLEASE USE 8mm DRILL BIT

b OD 25)D 25 (O

M6 BOLT 30mm LONG

X 8

PLEASE NOTE: DRILLING REQUIRED TO FASTEN TO BUMPER PLEASE USE 8mm DRILL BIT FLOW DESIGNS MOUNTING BRACE



MOUNTING BRACE VIDEO QR CODE











TERMS AND CONDITIONS: MISUSE OF GOODS

This Product application is not intended for public road registe Regulatons may vary from Countries outide of Australia. Please check your Country's and State's road regulatons before the contribution of th