

FITTING DIAGRAM


AUDI RS3 8V SPORTBACK PFL V3: REAR DIFFUSER + FLOW LOCK FINS

INSTALLATION AND FITTING SERVICES

If you are having any difficulties please seek professional advise from the listed International and Domestic Authorised Dealers on our website.


www.flowdesignsaustralia.com

**BUMPER REMOVAL
NOT REQUIRED**

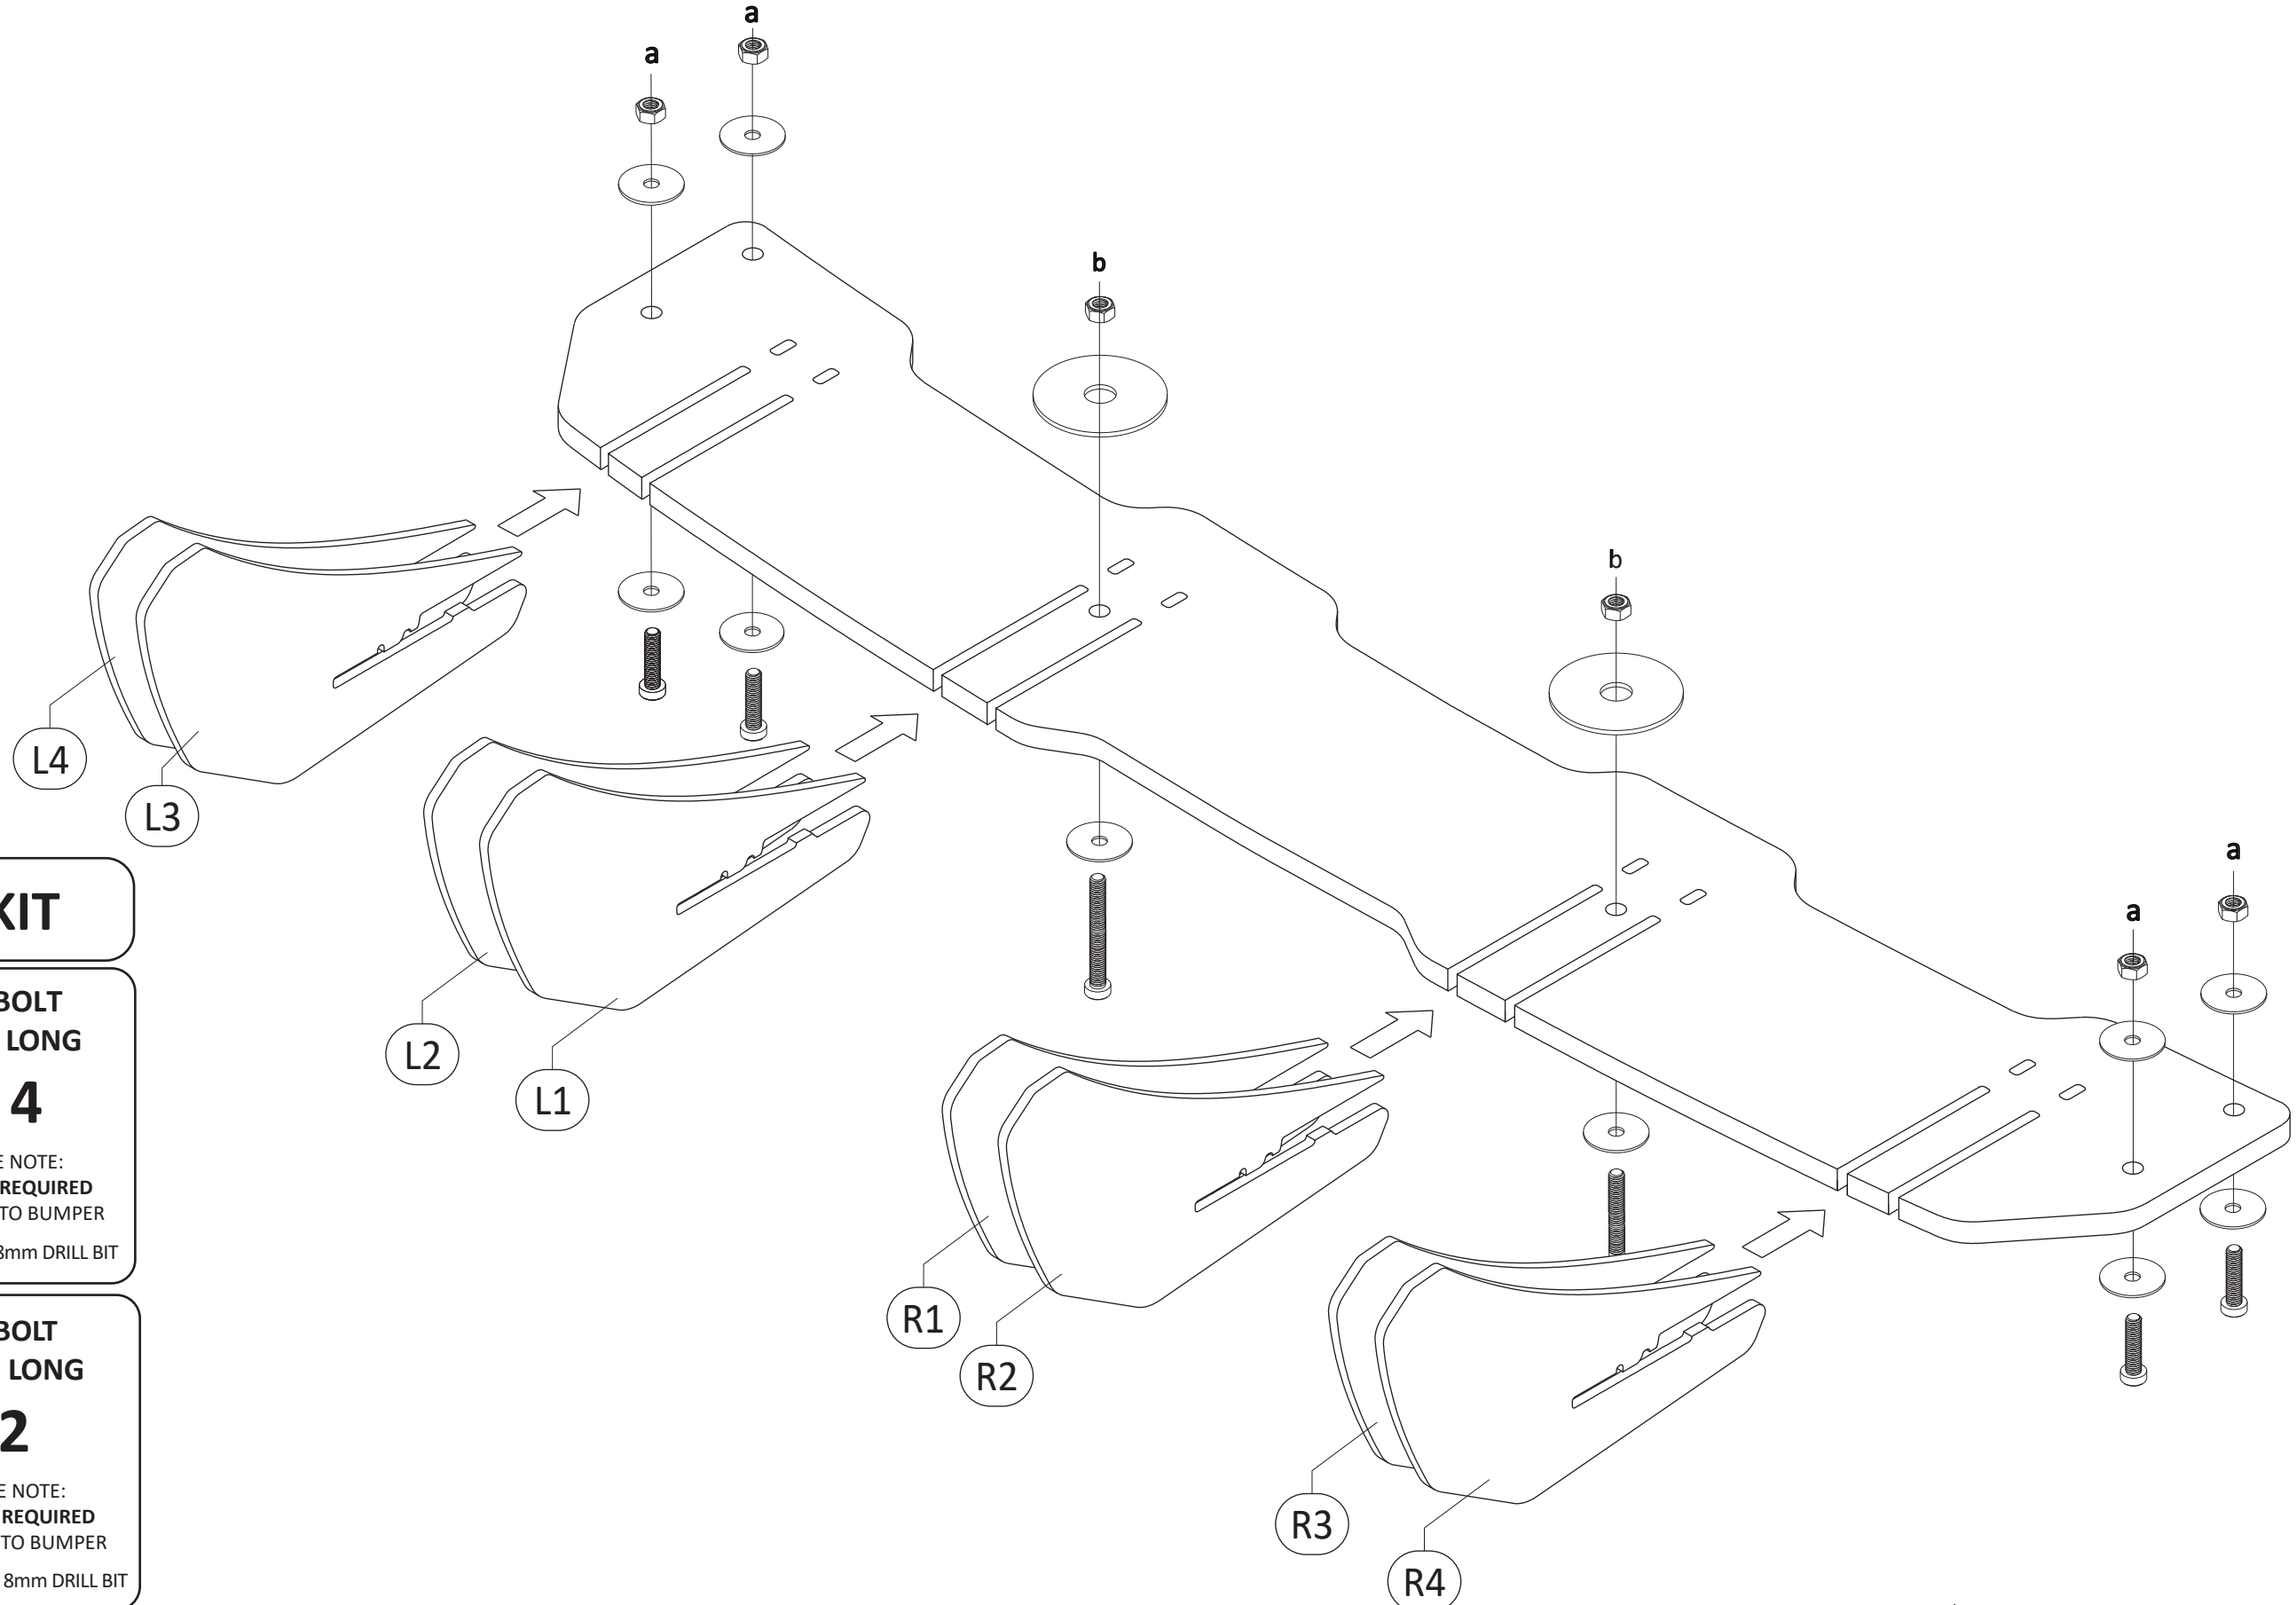

FITTING KIT

a

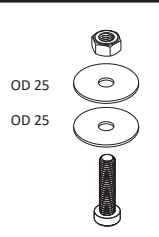


**M6 BOLT
25mm LONG**

X 4

PLEASE NOTE:
DRILLING REQUIRED
TO FASTEN TO BUMPER
PLEASE USE 8mm DRILL BIT

b

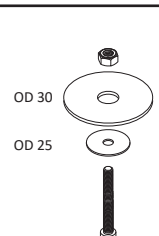

**M6 BOLT
55mm LONG**

X 2

PLEASE NOTE:
DRILLING REQUIRED
TO FASTEN TO BUMPER
PLEASE USE 8mm DRILL BIT