

FITTING INSTRUCTIONS


AUDI RS3 8V SPORTBACK PFL V3: SIDE EXTENSIONS

INSTALLATION AND FITTING SERVICES

If you are having any difficulties please seek professional advise from the listed International and Domestic Authorised Dealers on our website.

www.flowdesignsaustralia.com

**SIDE SKIRT REMOVAL
NOT REQUIRED**

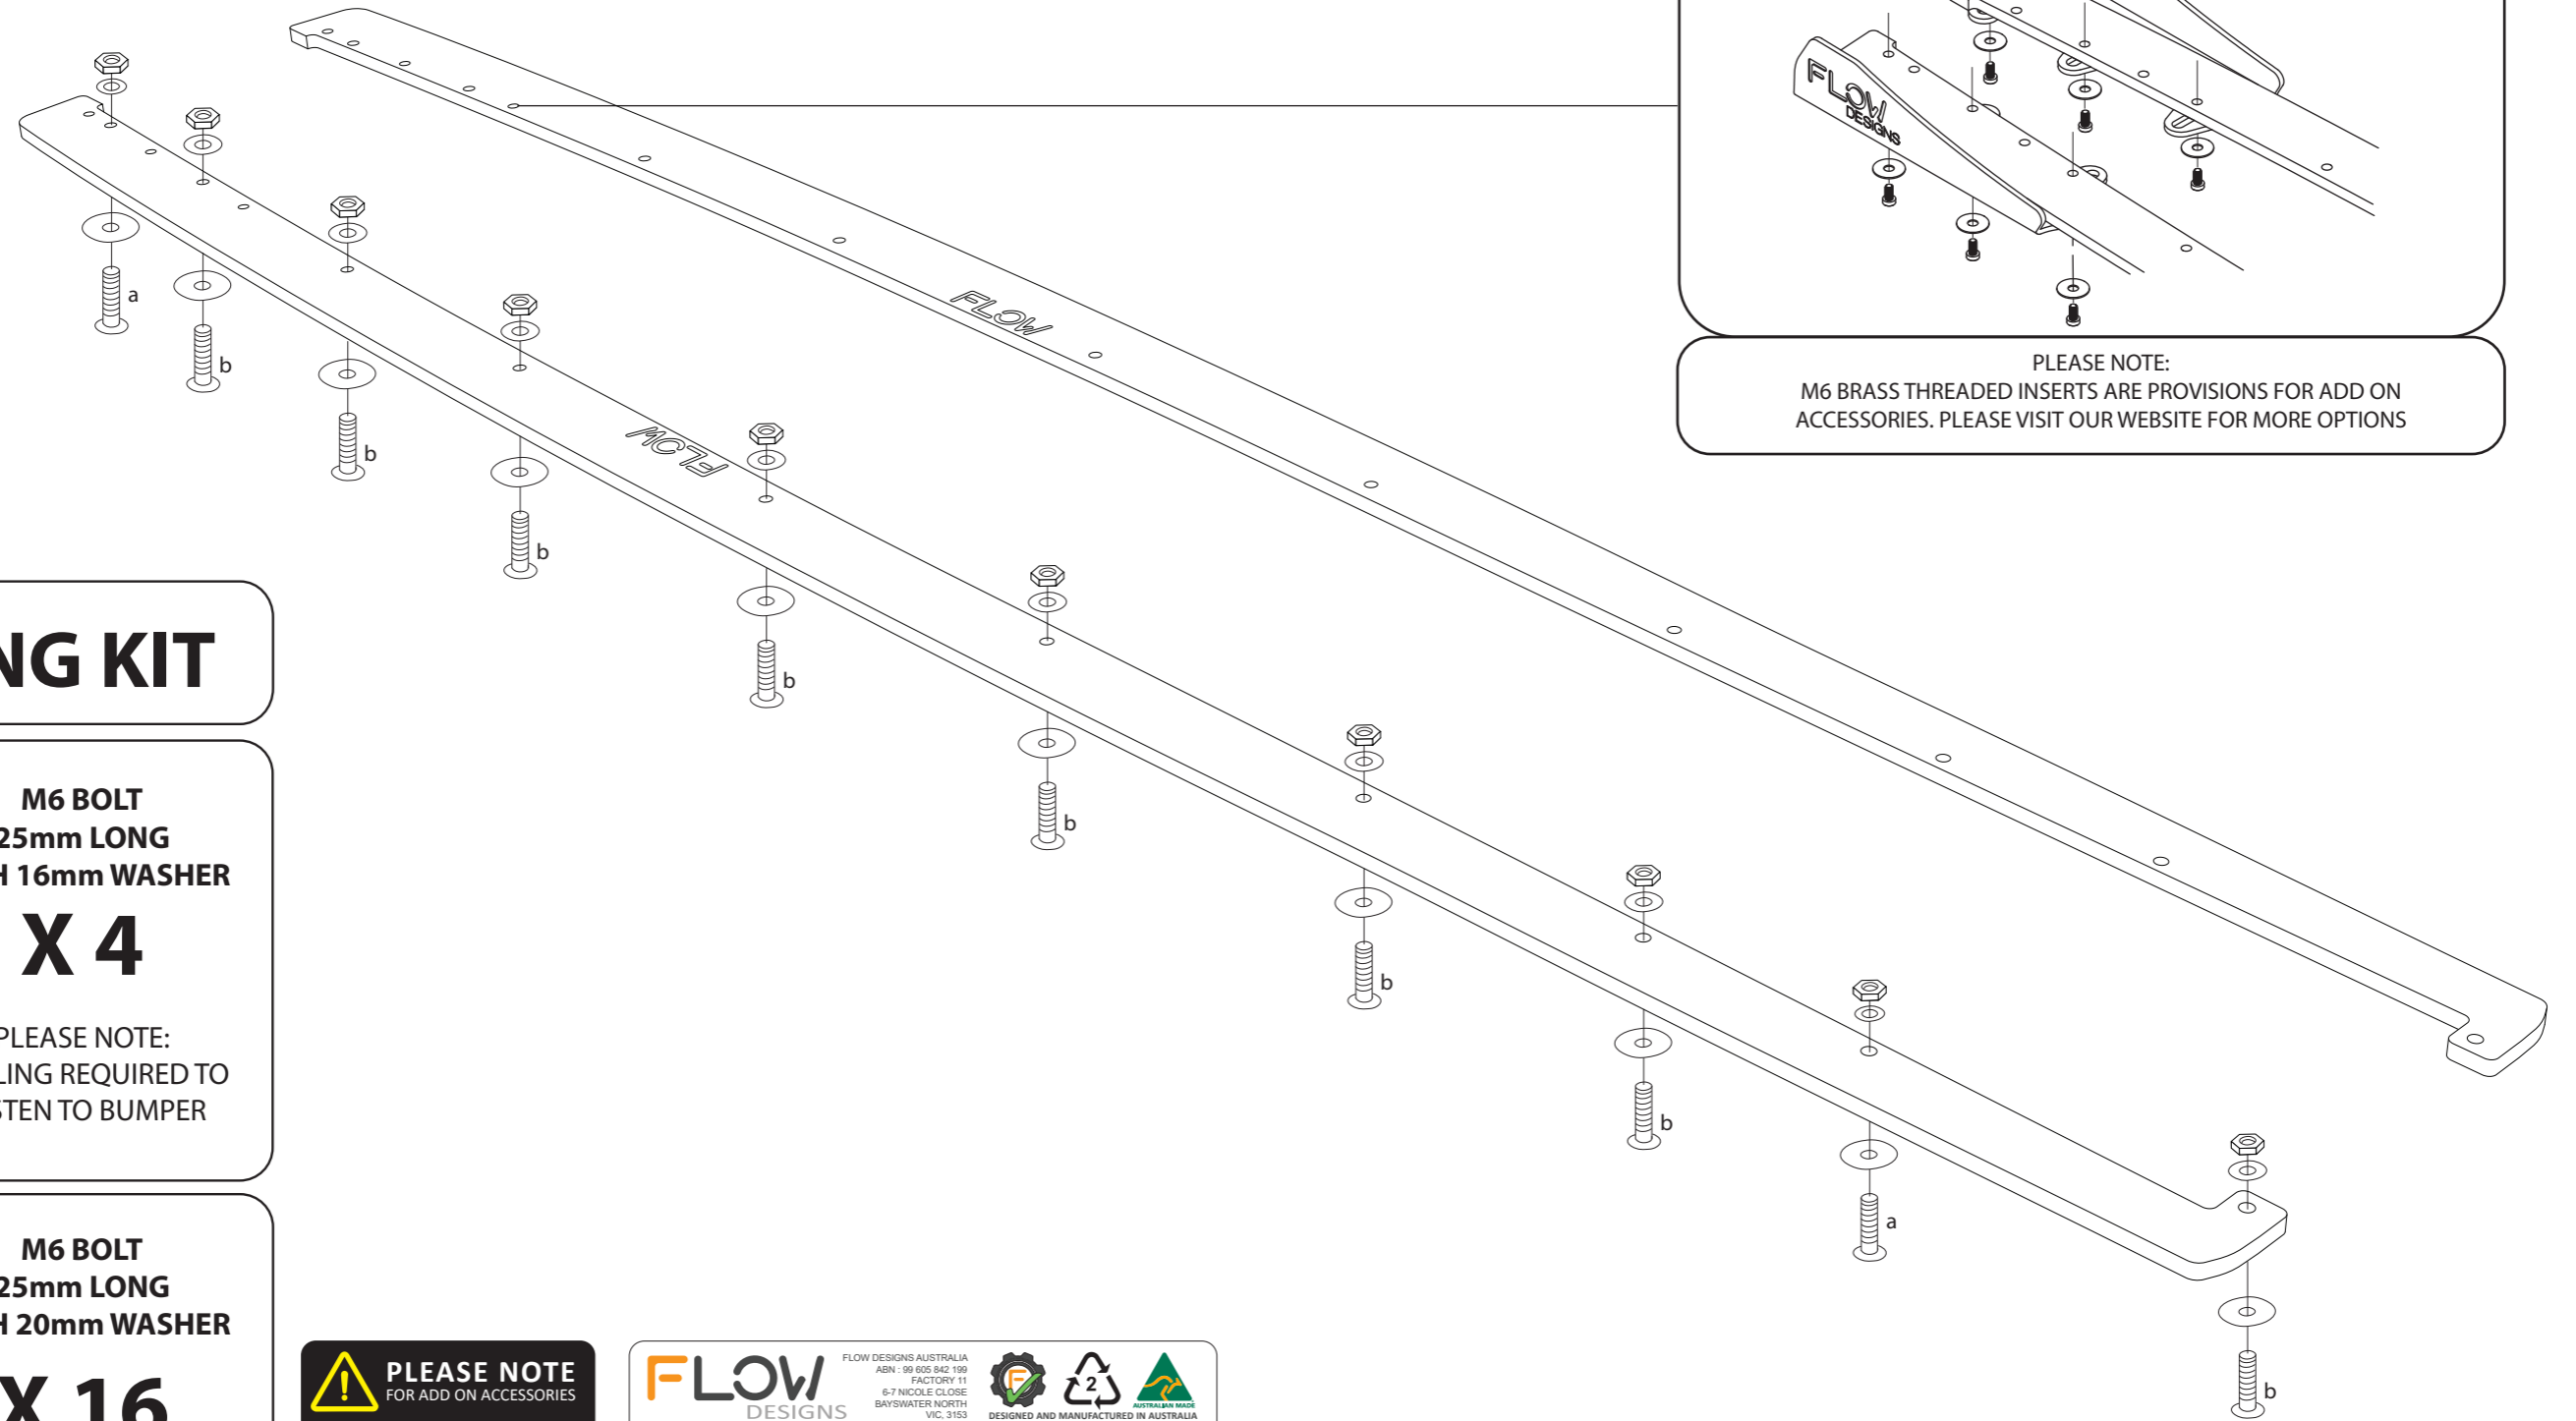

PLEASE NOTE:
M6 BRASS THREADED INSERTS ARE PROVISIONS FOR ADD ON ACCESSORIES. PLEASE VISIT OUR WEBSITE FOR MORE OPTIONS

FITTING KIT

a

**M6 BOLT
25mm LONG
WITH 16mm WASHER**

X 4

PLEASE NOTE:
DRILLING REQUIRED TO
FASTEN TO BUMPER



b

**M6 BOLT
25mm LONG
WITH 20mm WASHER**

X 16

PLEASE NOTE:
DRILLING REQUIRED TO
FASTEN TO BUMPER



PLEASE NOTE
FOR ADD ON ACCESSORIES

DO NOT
OVERTIGHTEN FASTENERS
INTO BRASS FITTINGS

HAND TIGHTEN ONLY

FLOW DESIGNS

FLOW DESIGNS AUSTRALIA
ABN : 99 626 842 199
FACTORY 11
6-7 NICOLE CLOSE
BAYSWATER NORTH
VIC, 3153

DESIGNED AND MANUFACTURED IN AUSTRALIA

TERMS AND CONDITIONS : MISUSE OF GOODS

By taking possession of this Flow Designs Australia product, you (the buyer) agree that you have read, understood and will comply with the following disclaimer:

- This product may not be suitable for road use in your area. We cannot be held liable for any penalties or infringements that may occur as a result of installing any of our products.
- We cannot guarantee that this product will comply with subsequent aftermarket products you have applied to your vehicle.
- It is not legal to fit parts onto a road registered vehicle unless it carries and meets the design rules and public road regulations of your area, region and/or country.
- We do make our best effort to consider safety when designing our products, we want the scene to be a safe place for everyone!

This disclaimer absolves us (Flow Designs Australia) of any and all liability for breaches to any requirement as a result of installation of our products.

www.flowdesignsaustralia.com