


FITTING INSTRUCTIONS

AUDI RS3 8V PREFACELIFT SPORTBACK FRONT SPLITTER

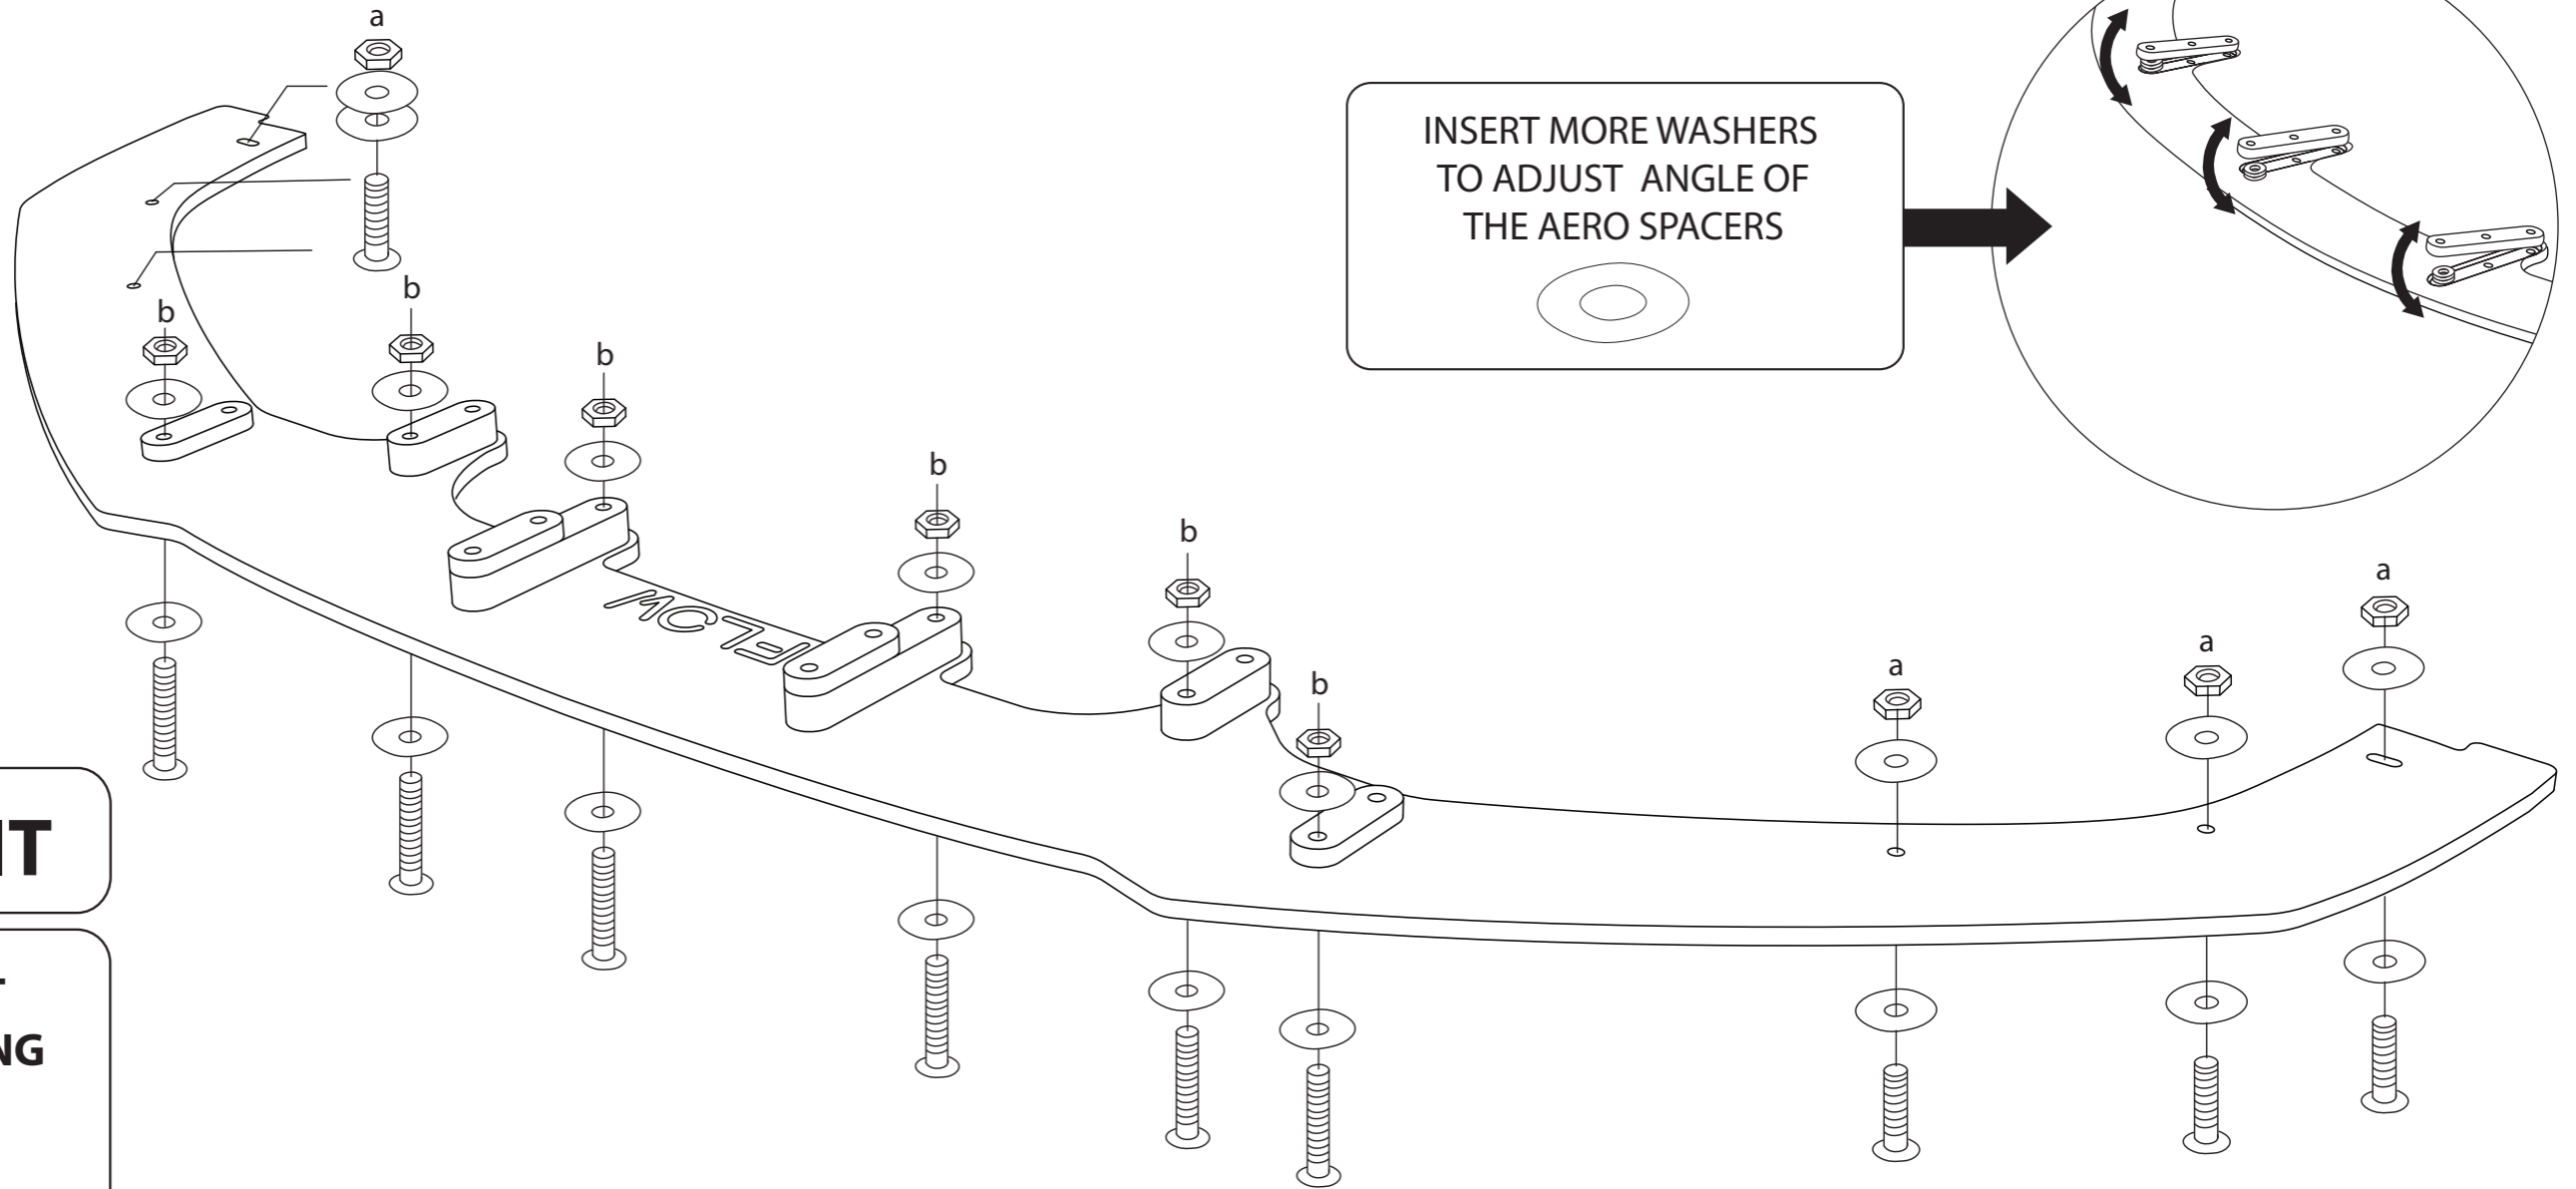

FITTING KIT

a

M6 BOLT
30mm LONG

X 6

PLEASE NOTE:
DRILLING REQUIRED TO
FASTEN TO BUMPER



b

M6 BOLT
40mm LONG

X 6

PLEASE NOTE:
DRILLING REQUIRED TO
FASTEN TO BUMPER

