



FITTING INSTRUCTIONS

AUDI RS3 8V PREFACELIFT REAR SPATS

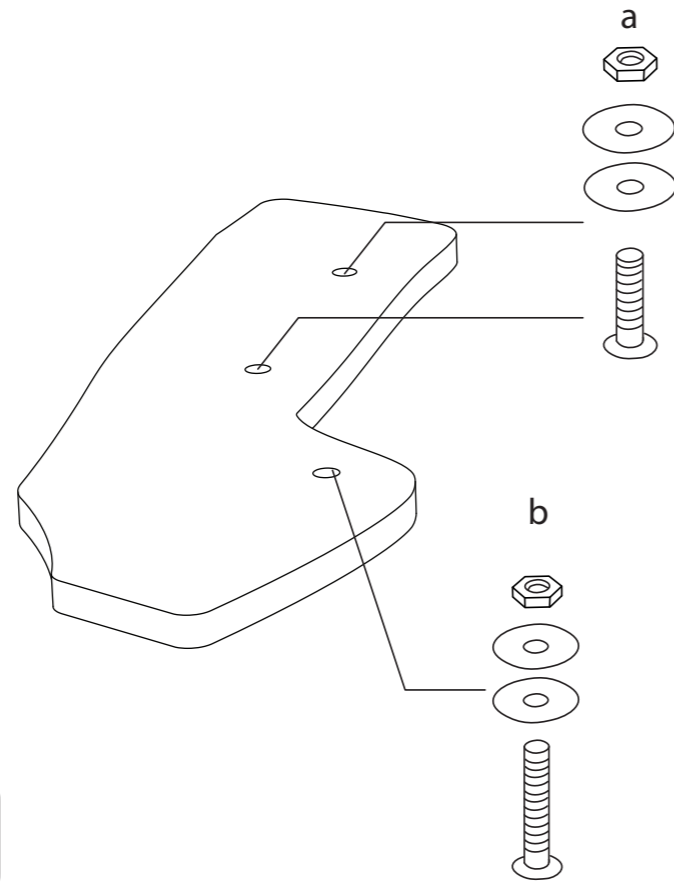

FITTING KIT

a




**M6 BOLT
25mm LONG**

X 4

PLEASE NOTE:
DRILLING REQUIRED TO
FASTEN TO BUMPER

b



**M6 BOLT
30mm LONG**

X 2

PLEASE NOTE:
DRILLING REQUIRED TO
FASTEN TO BUMPER

