


FITTING INSTRUCTIONS

AUDI RS3 8V PREFACELIFT SPORTBACK SIDE SPLITTERS

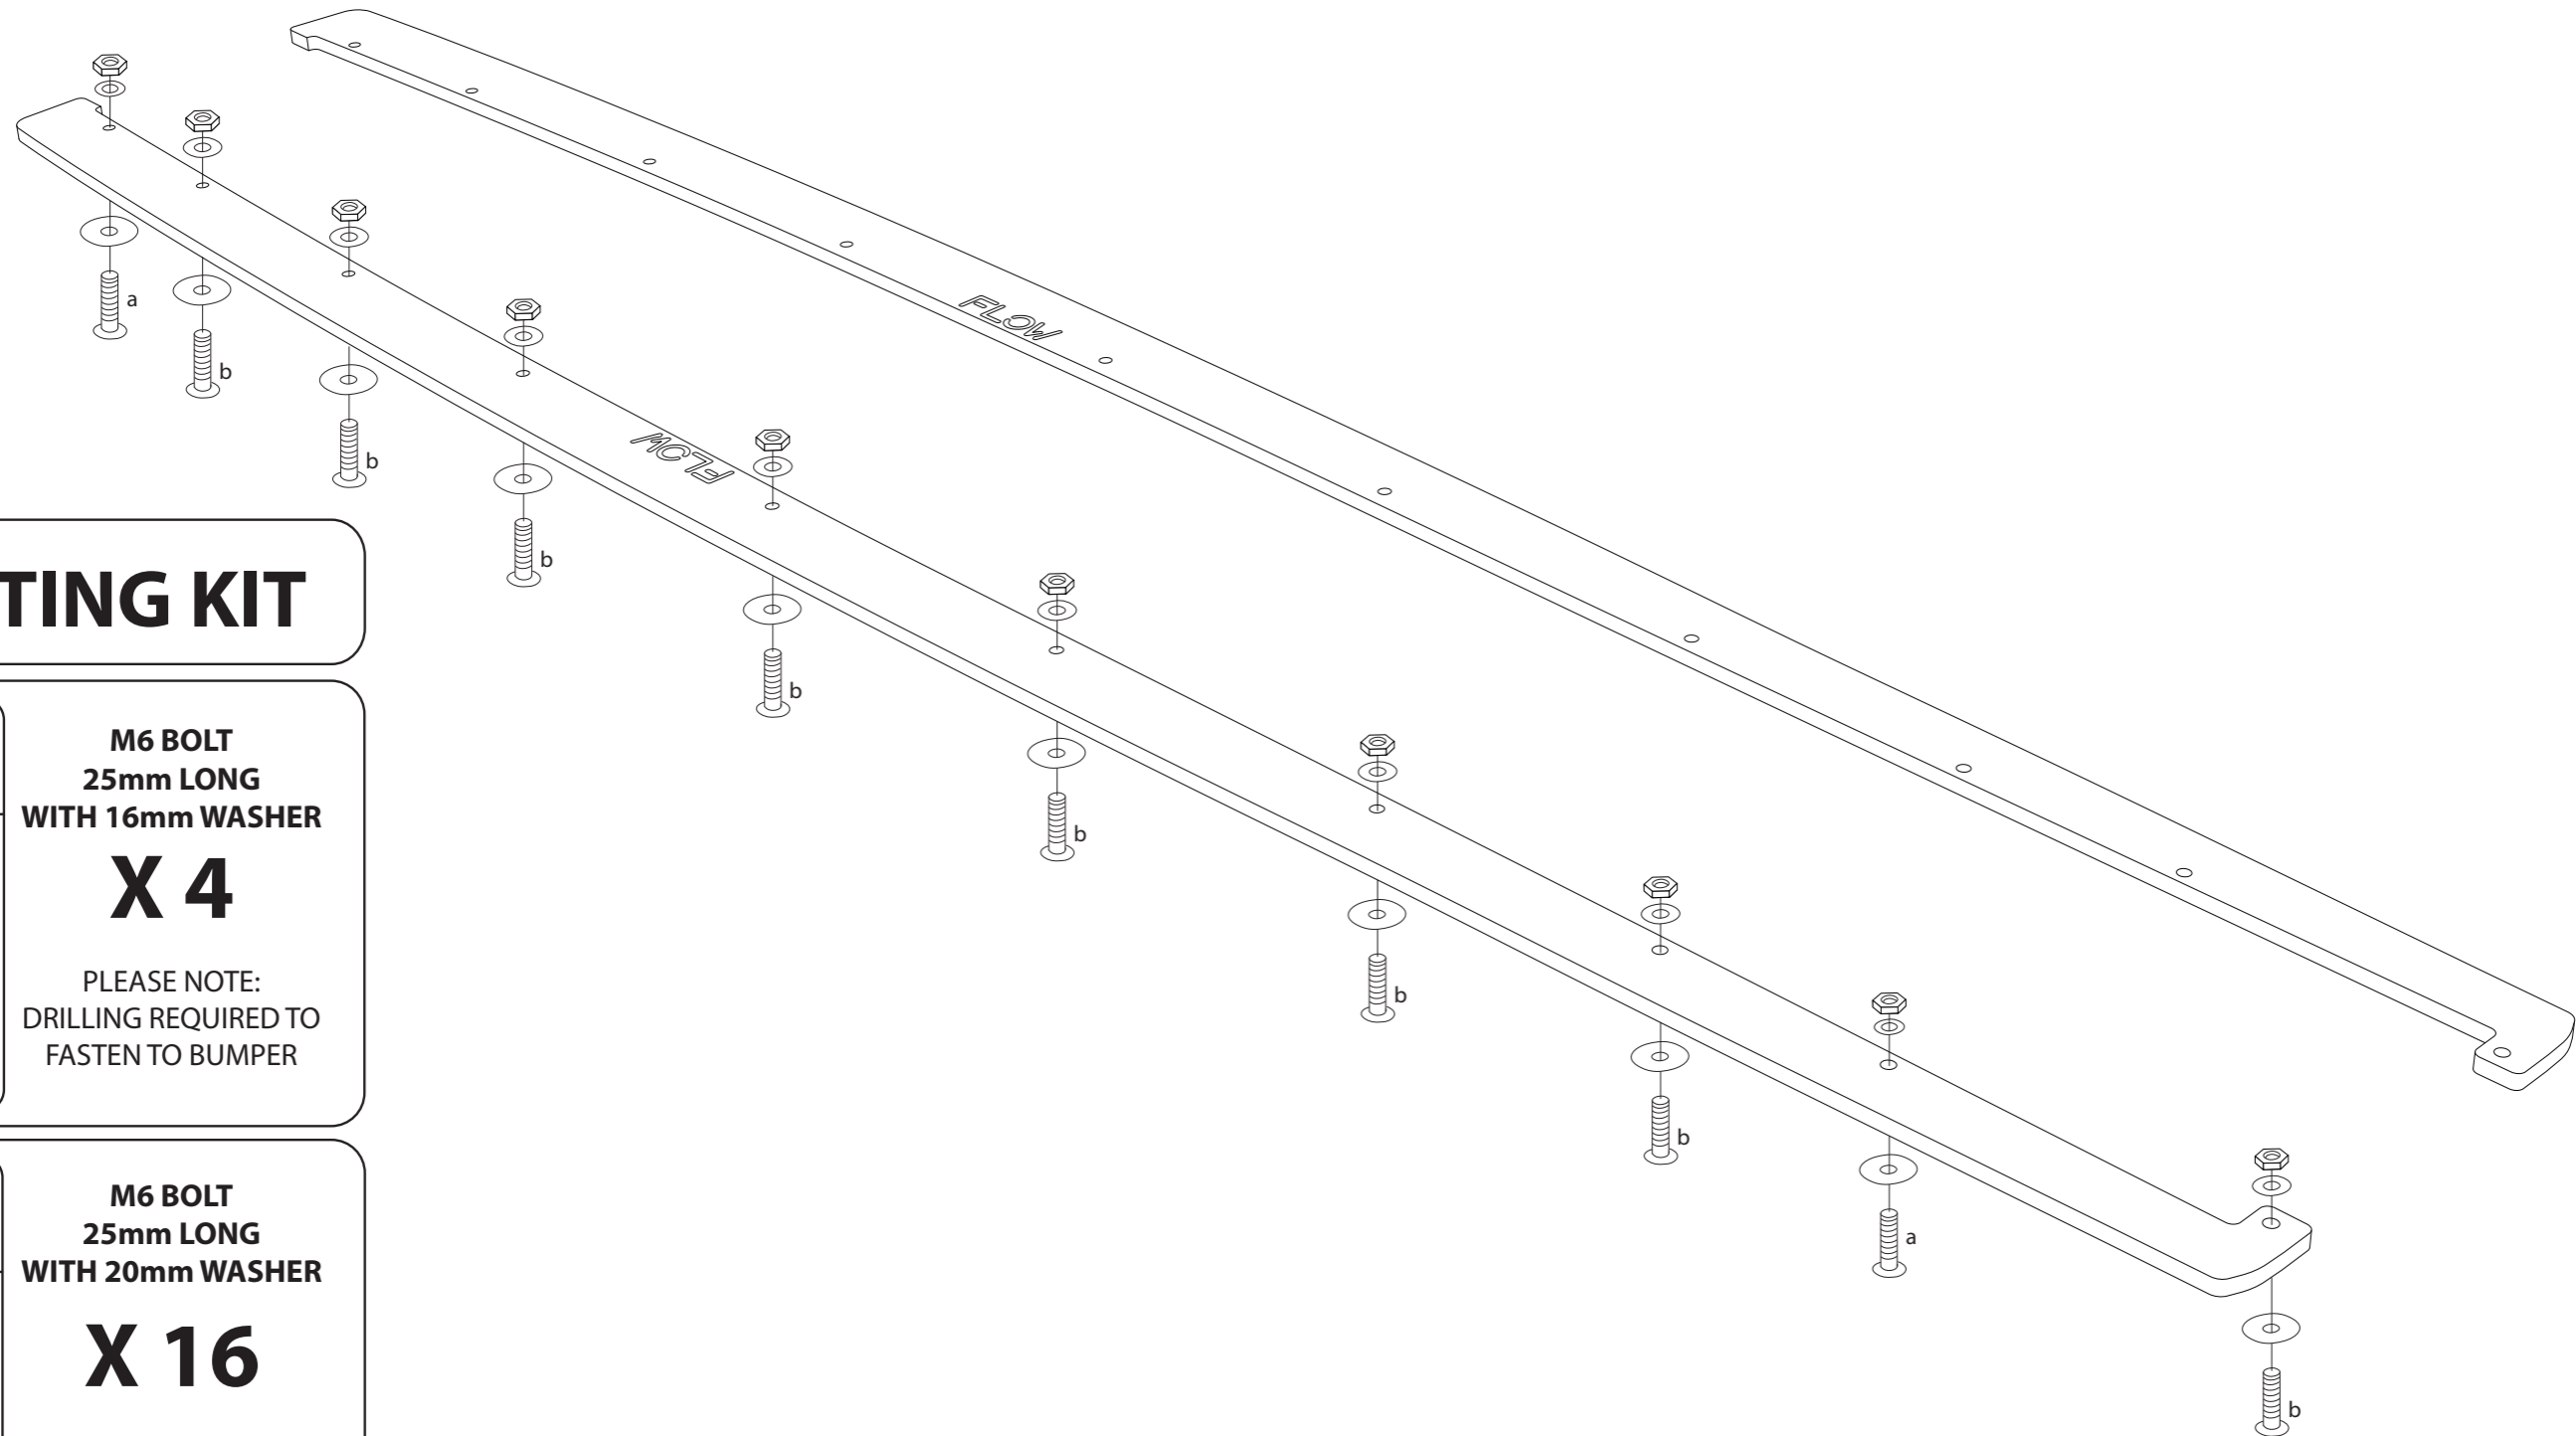

FITTING KIT

a

M6 BOLT
25mm LONG
WITH 16mm WASHER

X 4

PLEASE NOTE:
DRILLING REQUIRED TO
FASTEN TO BUMPER



b

M6 BOLT
25mm LONG
WITH 20mm WASHER

X 16

PLEASE NOTE:
DRILLING REQUIRED TO
FASTEN TO BUMPER

