

FITTING DIAGRAM

AUDI S3 8P1 & 8P2 V3: SIDE SPLITTERS


INSTALLATION AND FITTING SERVICES

If you are having any difficulties please seek professional advice from the listed International and Domestic Authorised Dealers on our website.

www.flowdesignsaustralia.com

BUMPER REMOVAL

NOT REQUIRED

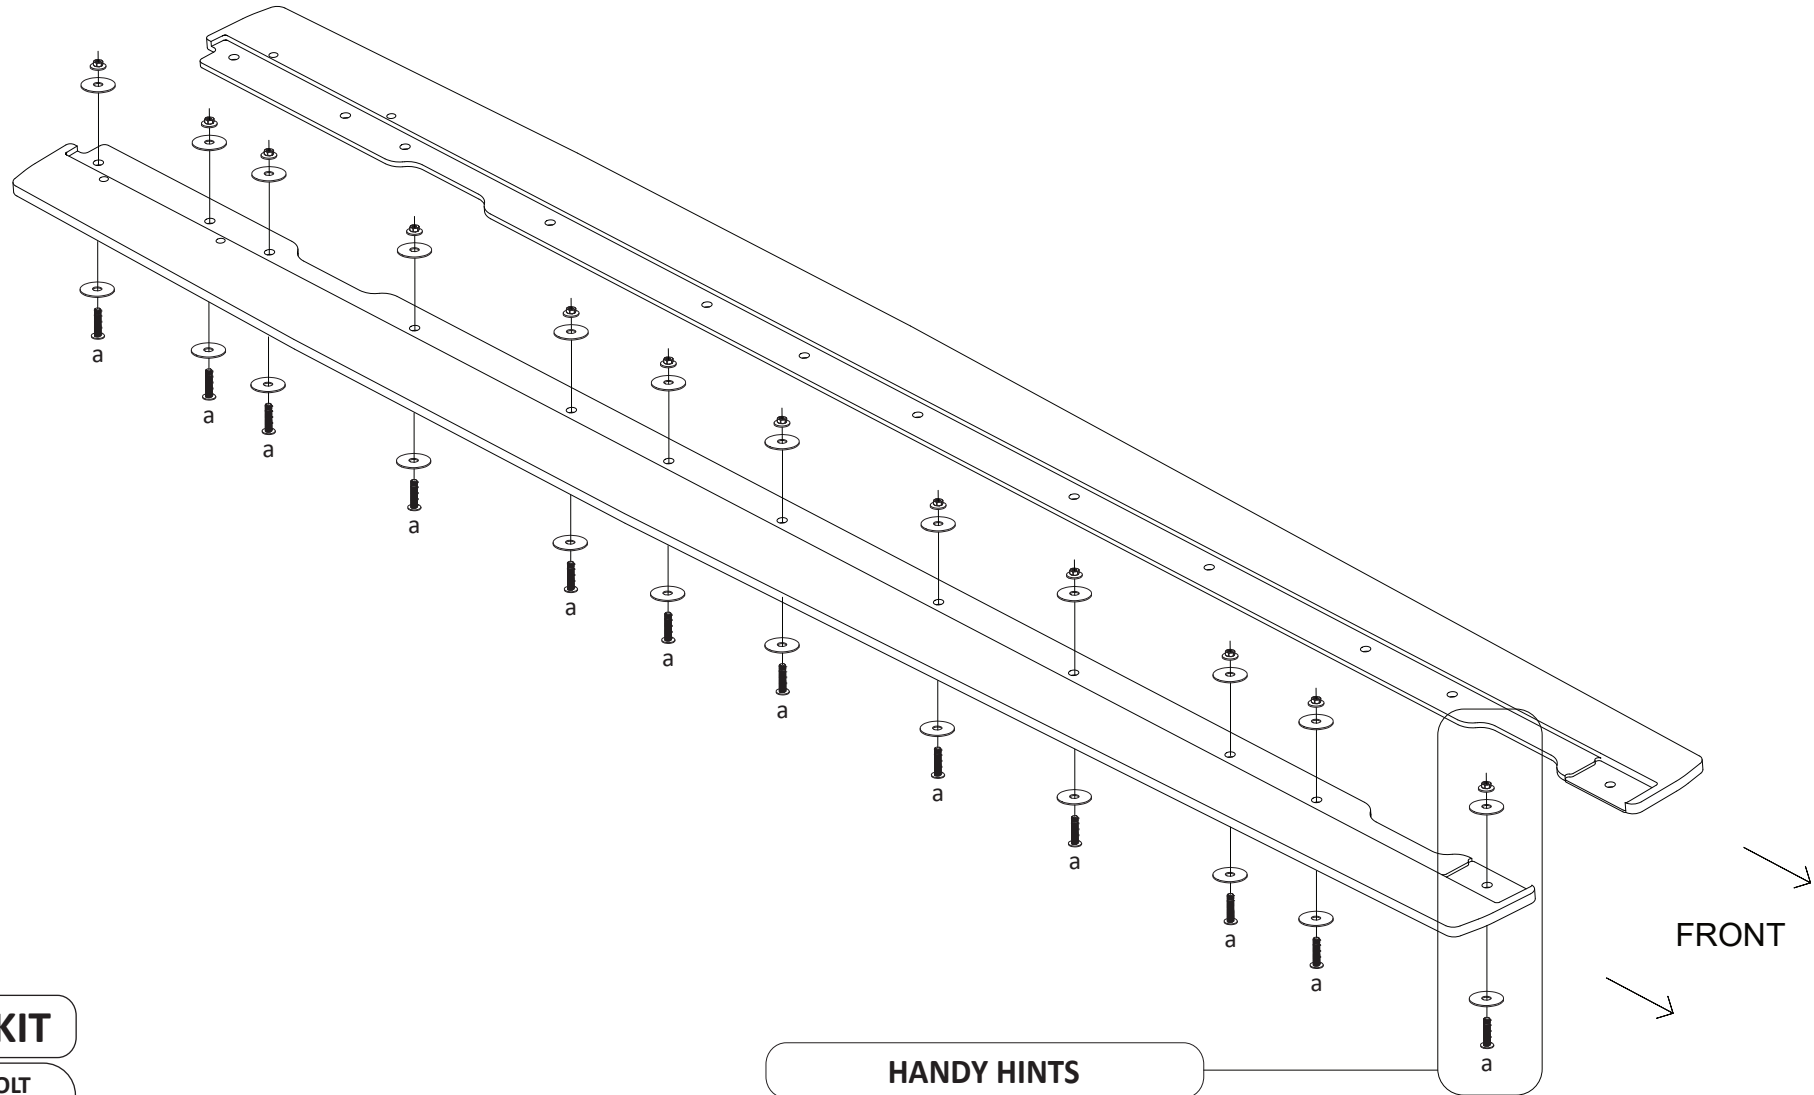


FITTING KIT

a

M6 BOLT
25mm LONG

X 24



PLEASE NOTE:
DRILLING REQUIRED
TO FASTEN TO BUMPER

PLEASE USE 8mm DRILL BIT

HANDY HINTS

Before tightening front bolts, clip the front portion of the OEM sideskirt back into place to ensure correct fitment.

FLOW
DESIGNS

FLOW DESIGNSAUSTRALIA
ABN 58 60542 100
13 LOGGERSHIP RD
SAVANNAH
VIC 3105



TERMS AND CONDITIONS : MISUSE OF GOODS

This Product application is not intended for public road registered vehicles within Australia. Regulations may vary from Countries outside of Australia. Please check your Country's and State's road regulations before installing on a vehicle intended for public road use.

Flow Designs Australia PTY LTD without be liable for any liability in relation to any use of the goods other than in strict accordance with the Company's instructions and for the purpose and application for which the goods are supplied by the Company. The Client undertakes with the Company:
• That it will acquaint itself with the requirements of all relevant government or statutory and other authorities, bodies or corporations relating to the goods and/or services and to the applications to which the goods and/or services are to be put.
• That it will ensure while the goods are in its possession or under its control it will comply with such requirements.
• That it will procure that any purchaser of goods from it will also acquaint itself with, and will comply with, such requirements.
• That it will indemnify the Company against any liability resulting from breach of any such requirements.

www.flowdesignsaustralia.com