## FITTING DIAGRAM

**AUDI S3 8P1 V3: FRONT BOLT-ON INSTRUCTIONS** 

#### INSTALLATION AND FITTING SERVICES

If you are having any difficulties please seek professional advice from the listed International and Domestic Authorised Dealers on our website.

www.flowdesignsaustralia.com


# **BUMPER REMOVAL NOT REQUIRED**

#### **CONFIGURATION 1**

FRONT EXTENSIONS ONLY


### **CONFIGURATION 2**

FRONT WINGLETS ONLY

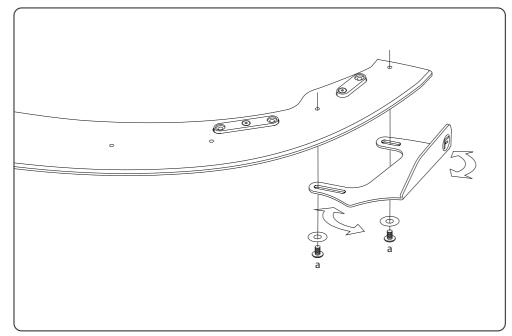



FRONT EXTENSIONS AND WINGLETS

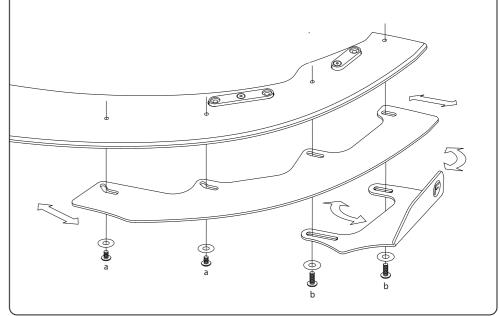

- Insert bolts loosely into allocated brass thread locations.
- Slide extensions in and out to your liking.
- Use a 4mm hex key to hand tighten.

PLEASE NOTE: DO NOT OVERTIGHTEN - These bolts do not need to be very tight.

- Insert bolts loosely into allocated brass thread locations.
- Slide and pivot winglets to your liking.
- Use a 4mm hex key to hand tighten.

PLEASE NOTE: DO NOT OVERTIGHTEN - These bolts do not need to be very tight.

- Insert bolts loosely into allocated brass thread locations.
- Slide and pivot extensions and winglets to your liking.
- Use a 4mm hex key to hand tighten.

**PLEASE NOTE**: DO **NOT** OVERTIGHTEN - These bolts do not need to be very tight.

# **FITTING KIT**

M6 BOLT a 10mm LONG X 8  $\circ$ PLEASE NOTE: DRILLING NOT REQUIRED

M6 BOLT b 20mm LONG **X4**  $\circ$ PLEASE NOTE: DRILLING NOT REQUIRED TO FASTEN TO SPLITTER TO FASTEN TO SPLITTER DO NOT OVERTIGHTEN DO NOT OVERTIGHTEN



