FITTING DIAGRAM

AUDI S3 8P2 V3: FRONT BOLT-ON INSTRUCTIONS

INSTALLATION AND FITTING SERVICES


If you are having any difficulties please seek professional advice from the listed International and Domestic Authorised Dealers on our website.

www.flowdesignsaustralia.com

BUMPER REMOVAL NOT REQUIRED


CONFIGURATION 1

FRONT EXTENSIONS ONLY

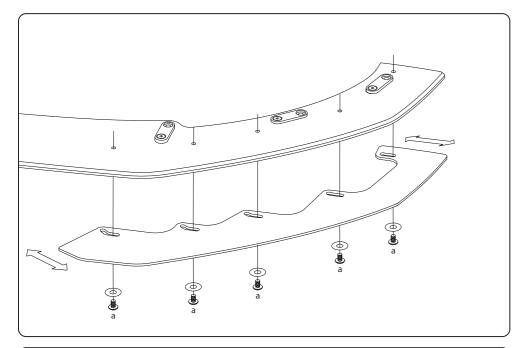


CONFIGURATION 2

FRONT WINGLETS ONLY

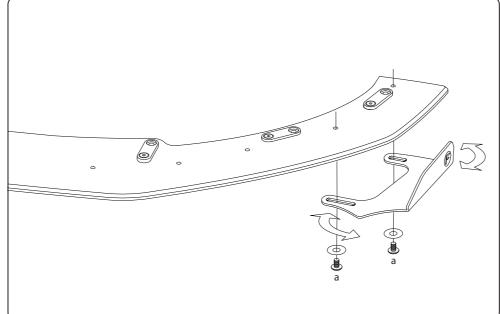



FRONT EXTENSIONS AND WINGLETS

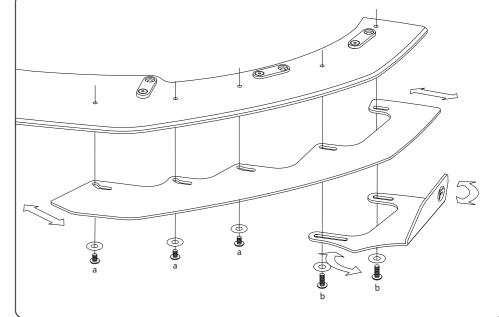

- Insert bolts loosely into allocated brass thread locations.
- Slide extensions in and out to your liking.
- Use a 4mm hex key to hand tighten.

PLEASE NOTE: DO NOT OVERTIGHTEN - These bolts do not need to be very tight.

- Insert bolts loosely into allocated brass thread locations.
- Slide and pivot winglets to your liking.
- Use a 4mm hex key to hand tighten.

PLEASE NOTE: DO NOT OVERTIGHTEN - These bolts do not need to be very tight.

- Insert bolts loosely into allocated brass thread locations.
- Slide and pivot extensions and winglets to your liking.
- Use a 4mm hex key to hand tighten.

PLEASE NOTE: DO **NOT** OVERTIGHTEN - These bolts do not need to be very tight.

FITTING KIT

M6 BOLT a 10mm LONG X 10 \circ PLEASE NOTE: DRILLING NOT REQUIRED

M6 BOLT b 20mm LONG **X4** \circ PLEASE NOTE: DRILLING NOT REQUIRED TO FASTEN TO SPLITTER TO FASTEN TO SPLITTER DO NOT OVERTIGHTEN DO NOT OVERTIGHTEN



