

# FITTING DIAGRAM

## AUDI RS3\S3 8V SEDAN : SIDE SPLITTERS

INSTALLATION AND FITTING SERVICES

If you are having any difficulties please seek professional advice from the listed International and Domestic Authorised Dealers on our website.

[www.flowdesignsaustralia.com](http://www.flowdesignsaustralia.com)

# SIDE SKIRT REMOVAL NOT REQUIRED

### HANDY HINT

For correct alignment, back edge of side splitter should sit flush with with back of OEM retaining bracket

REAR OF CAR


FRONT OF CAR

### FITTING KIT

a

M6 BOLT  
25mm LONG

X 22

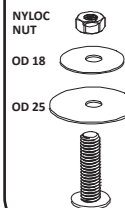

PLEASE NOTE: DRILLING  
REQUIRED TO FASTEN TO  
BUMPER  
PLEASE USE AN 8mm DRILL  
BIT

**PLEASE NOTE**  
FOR ADD ON ACCESSORIES

**DO NOT**  
OVERTIGHTEN FASTENERS  
INTO BRASS FITTINGS

HAND TIGHTEN ONLY

FLOW  
DESIGNS

**FLOW** DESIGNS  
FLOW DESIGNS AUSTRALIA  
ABN : 99 605 842 199  
FACTORY 11  
6-7 NICOLE CLOSE  
BAYSWATER NORTH  
VIC. 3153  
DESIGNED AND MANUFACTURED IN AUSTRALIA

**TERMS AND CONDITIONS : MISUSE OF GOODS**  
By taking possession of this Flow Designs Australia product, you (the buyer) agree that you have read, understood and will comply with the following disclaimer:  
This product may not be suitable for road use in your area. We cannot be held liable for any penalties or infringements that may occur as a result of installing any of our products.  
We cannot guarantee that this product will comply with subsequent aftermarket products you have applied to your vehicle. It is not legal to fit parts onto a road registered vehicle unless it carries and meets the design rules and public road regulations of your area, region and/or country.  
We do make our best effort to consider safety when designing our products, we want the scene to be a safe place for everyone! This disclaimer absolves us (Flow Designs Australia) of any and all liability for breaches to any requirement as a result of installation of our products.

[www.flowdesignsaustralia.com](http://www.flowdesignsaustralia.com)