FITTING DIAGRAM

AUDI S3 8V SPORTBACK PFL V3: FRONT SPLITTER

INSTALLATION AND FITTING SERVICES


If you are having any difficulties please seek professional advise from the listed International and Domestic Authorised Dealers on our website.


www.flowdesignsaustralia.com

BUMPER REMOVAL REQUIRED


HANDY HINTS

- Remove bumper.
- Ensure undertray bracket is aligned with the correct OEM cavity before fastening to undertray.
- Align front splitter and install using fitting kit provided.
- Use stainless steel brackets as drilling templates

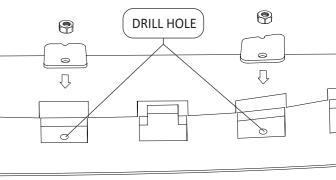

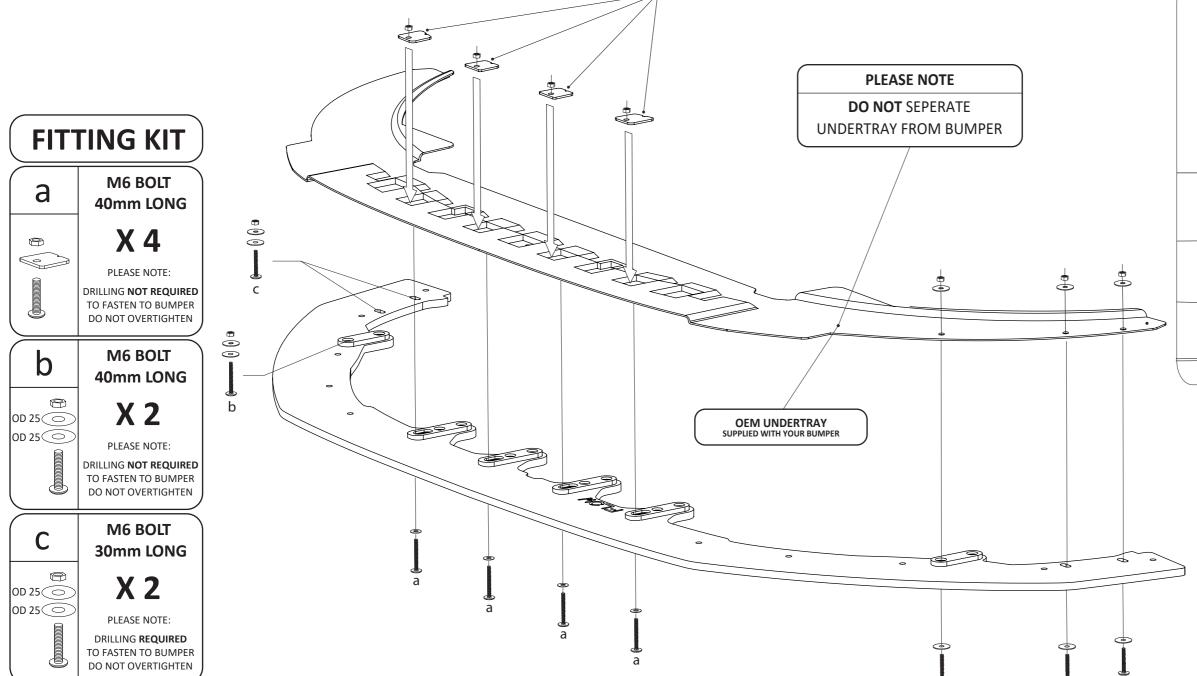

STAINLESS STEEL UNDERTRAY BRACKETS



X 1

PLEASE NOTE:

DRILLING' REQUIRED TO FASTEN TO UNDERTRAY DO NOT OVERTIGHTEN











TERMS AND CONDITIONS : MISUSE OF GOODS