FITTING DIAGRAM

AUDI S3 8V PFL SEDAN V3: FRONT BOLT-ON INSTRUCTIONS

INSTALLATION AND FITTING SERVICES


If you are having any difficulties please seek professional advice from the listed International and Domestic Authorised Dealers on our website.

www.flowdesignsaustralia.com

BUMPER REMOVAL NOT REQUIRED


CONFIGURATION 1

FRONT EXTENSIONS ONLY

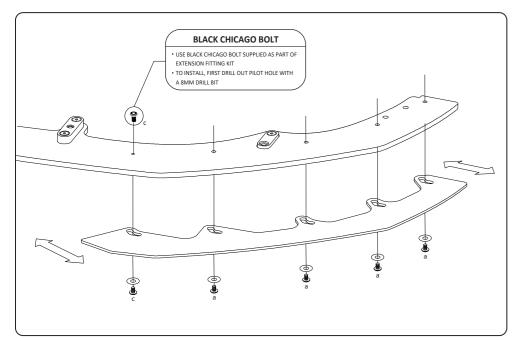


CONFIGURATION 2

FRONT WINGLETS ONLY

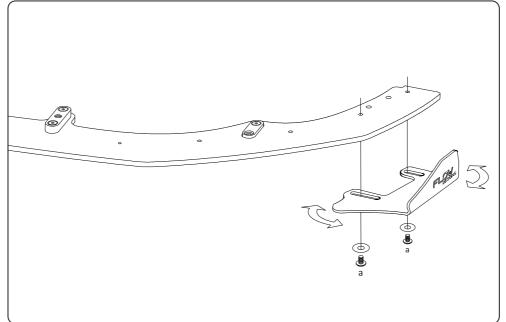

CONFIGURATION 3

FRONT EXTENSIONS AND WINGLETS

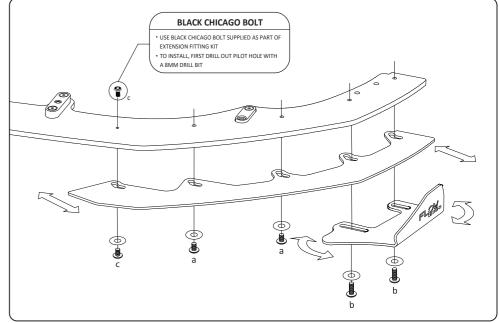

- Insert bolts loosely into alocated brass thread locations.
- Slide extensions in and out to your liking.
- Use a 4mm hex key to hand tighten.

PLEASE NOTE: DO NOT OVERTIGHTEN - These bolts do not need to be very tight.

- Insert bolts loosely into alocated brass thread locations.
- Slide and pivot winglets to your liking.
- Use a 4mm hex key to hand tighten.

PLEASE NOTE: DO NOT OVERTIGHTEN - These bolts do not need to be very tight.

- Insert bolts loosely into alocated brass thread locations.
- Slide and pivot extensions and winglets to your liking.
- · Use a 4mm hex key to hand tighten.

PLEASE NOTE: DO **NOT** OVERTIGHTEN - These bolts do not need to be very tight.

FITTING KIT

M6 BOLT a 12mm LONG X 10 \circ PLEASE NOTE: DRILLING NOT REQUIRED

b TO FASTEN TO SPLITTER DO NOT OVERTIGHTEN

M6 BOLT 20mm LONG

X4 \bigcirc

PLEASE NOTE: DRILLING NOT REQUIRED TO FASTEN TO SPLITTER DO NOT OVERTIGHTEN

M6 10mm BOLT **BLACK CHICAGO BOLT**

> PLEASE NOTE: DRILLING REQUIRED TO FASTEN TO SPLITTER DO NOT OVERTIGHTEN

PLEASE NOTE DO **NOT OVERTIGHTEN FASTENERS INTO BRASS FITTINGS** HAND TIGHTEN ONLY







TERMS AND CONDITIONS: MISUSE OF GOODS

This Product application is not intended for public road reging Regulatons may vary from Countries outide of Australia. Please check your Country's and State's road regulatons be