

FITTING DIAGRAM


AUDI S3 8V PFL SEDAN V3: REAR VALANCE

INSTALLATION AND FITTING SERVICES

If you are having any difficulties please seek professional advice from the listed International and Domestic Authorised Dealers on our website.

www.flowdesignsaustralia.com

**BUMPER REMOVAL
NOT REQUIRED**

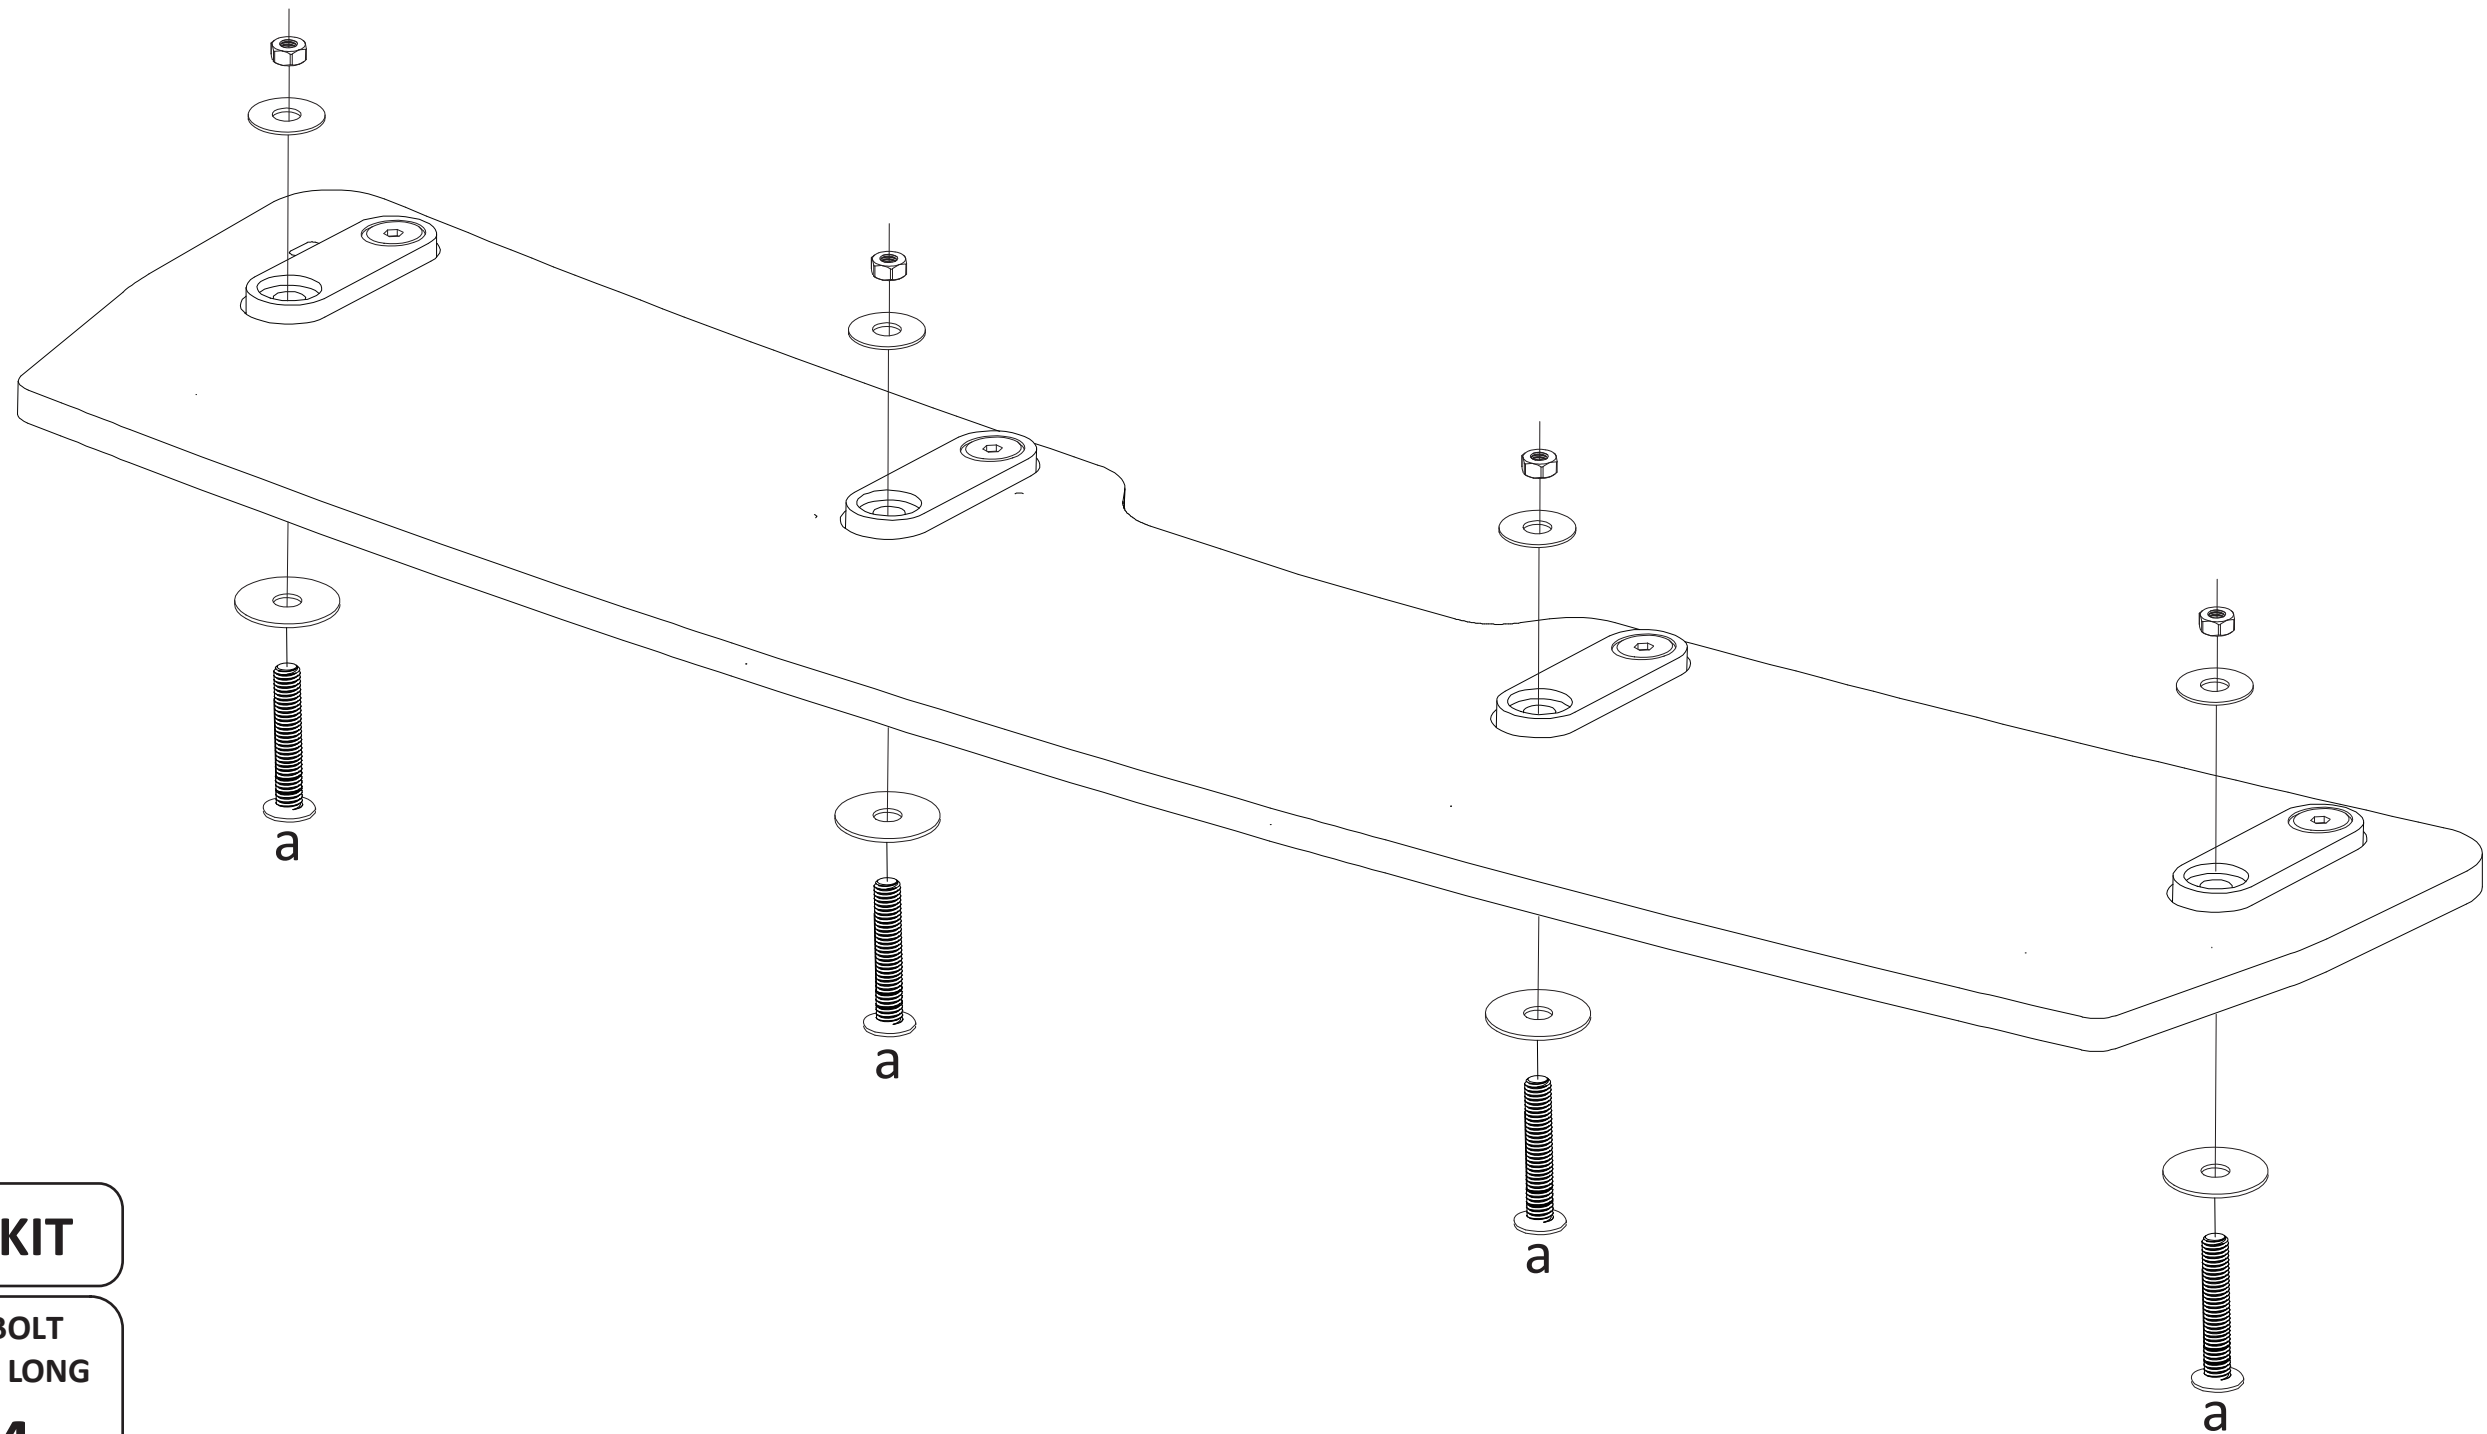


FITTING KIT

a

M6 BOLT
40mm LONG

X 4

NYLOC
NUT
OD 18
OD 25



PLEASE NOTE:
DRILLING REQUIRED
TO FASTEN TO BUMPER
DO NOT OVERTIGHTEN
PLEASE USE 8mm DRILL BIT