


FITTING INSTRUCTIONS

AUDI S3 8V FRONT SPLITTER

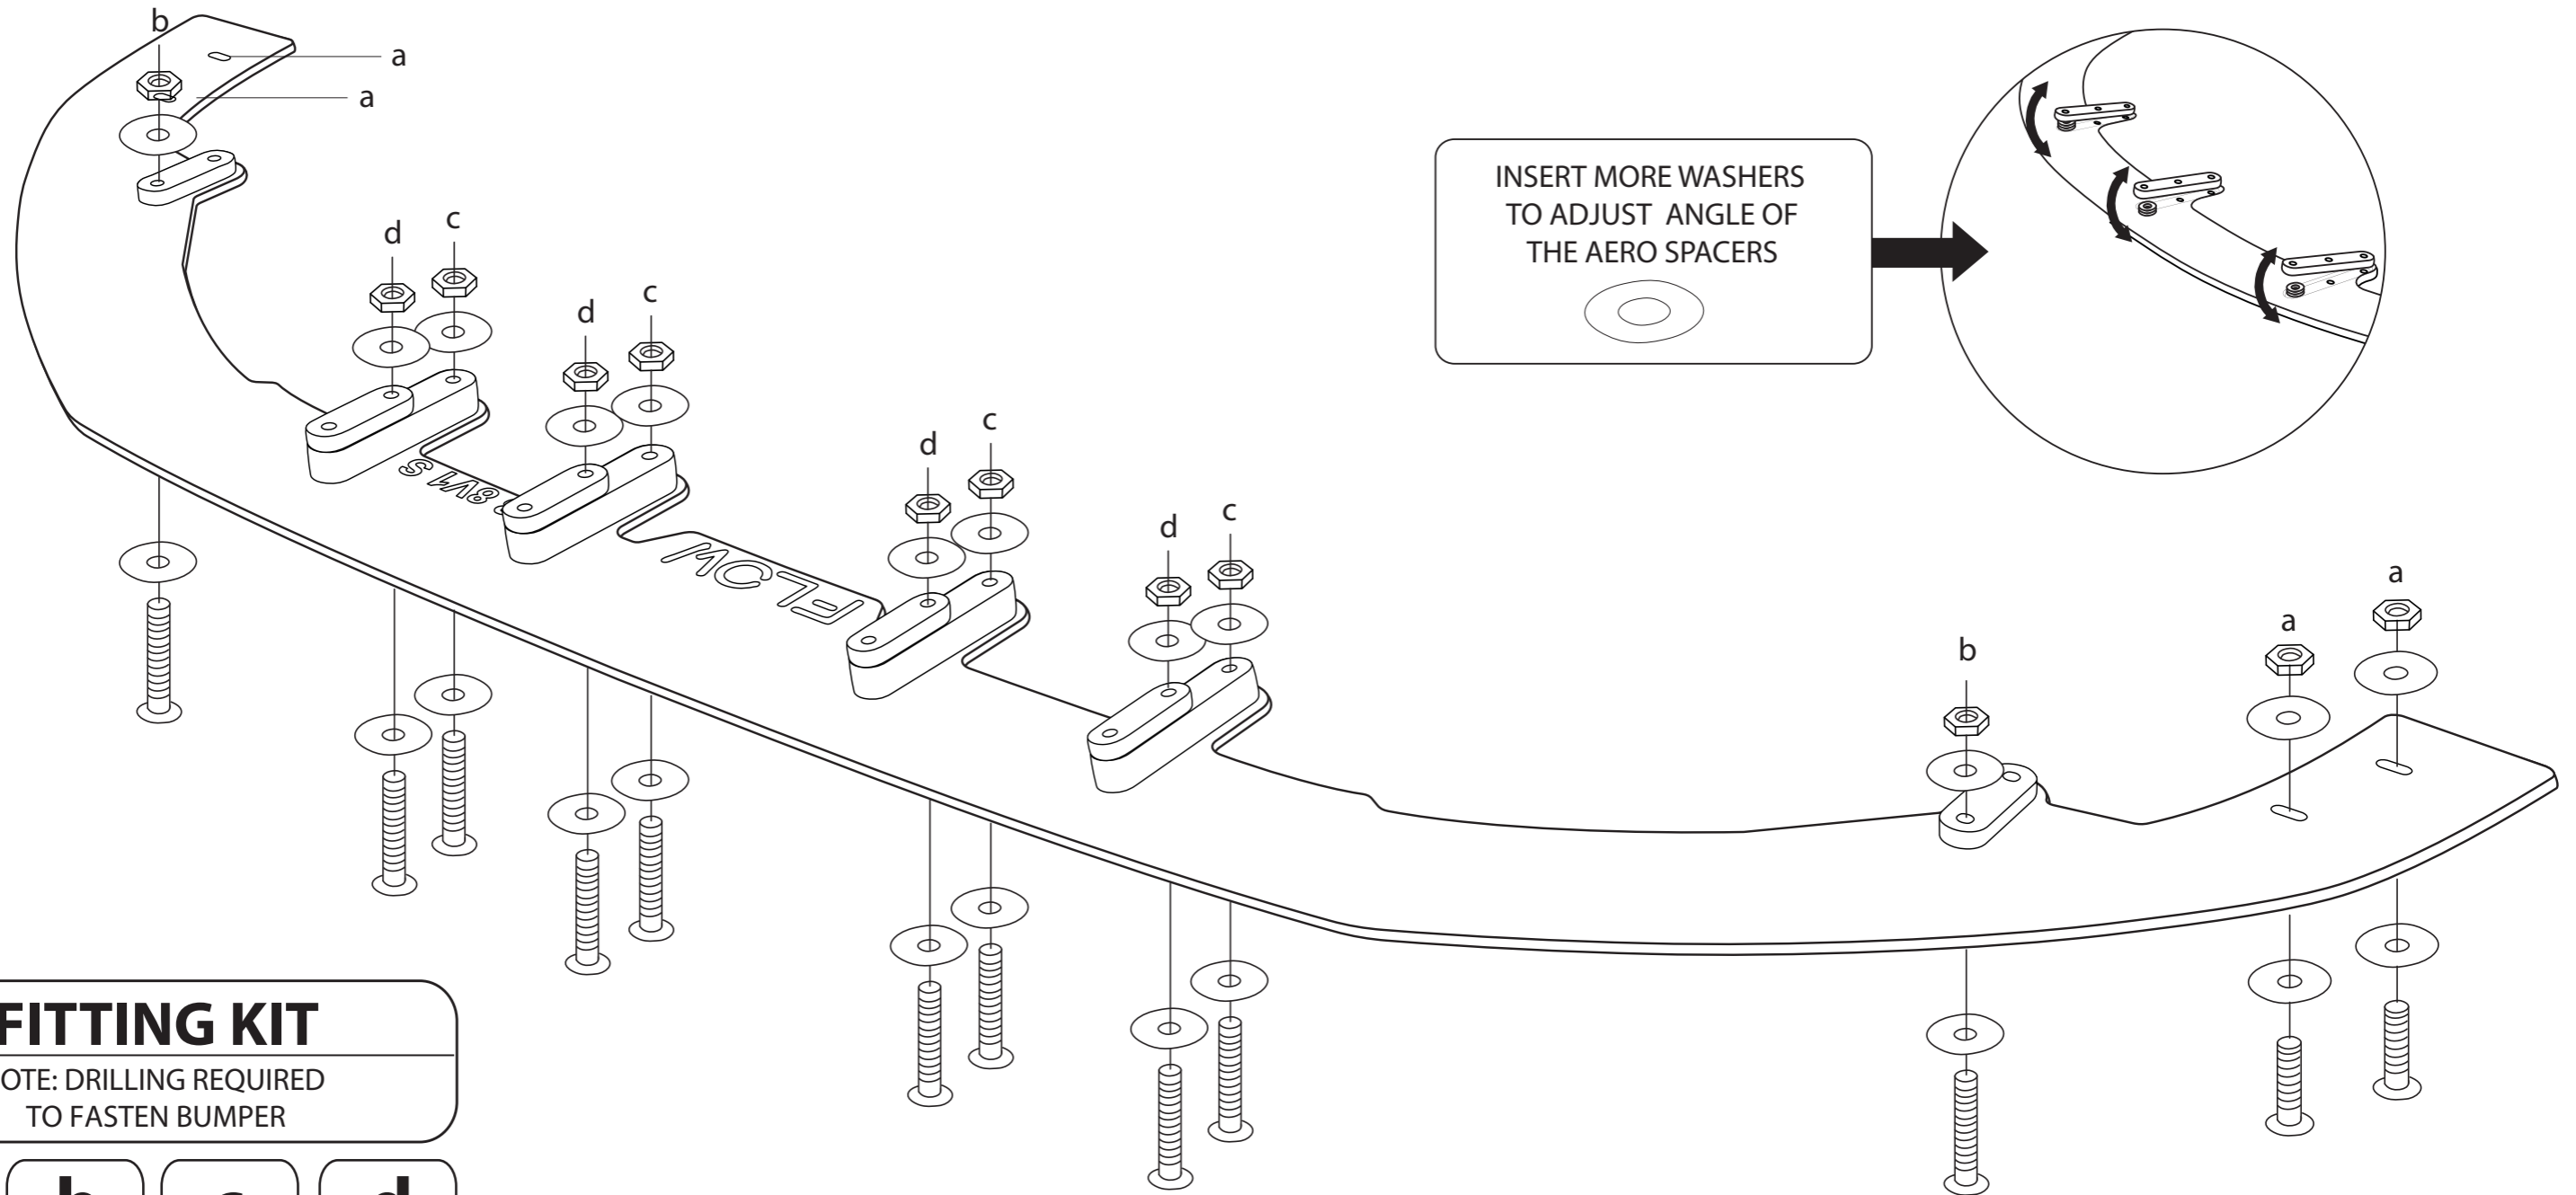

INSERT MORE WASHERS
TO ADJUST ANGLE OF
THE AERO SPACERS

FITTING KIT

NOTE: DRILLING REQUIRED
TO FASTEN BUMPER

a	b	c	d
30mm x4	40mm x2	50mm x4	80mm x4