

# FITTING INSTRUCTIONS

## BMW E82 135i M SPORT: FRONT SPLITTER

### FITTING KIT

**a**

**M6 BOLT  
40mm LONG**

**X 2**

PLEASE NOTE:  
DRILLING REQUIRED TO  
FASTEN TO BUMPER



**b**

**M6 BOLT  
30mm LONG**

**X 4**

PLEASE NOTE:  
DRILLING REQUIRED TO  
FASTEN TO BUMPER




**c**

**8G SELF TAPPING  
SCREW  
38mm LONG**

**X 14**

PLEASE NOTE:  
REPLACE OEM SCREW  
WITH LONGER SCREWS

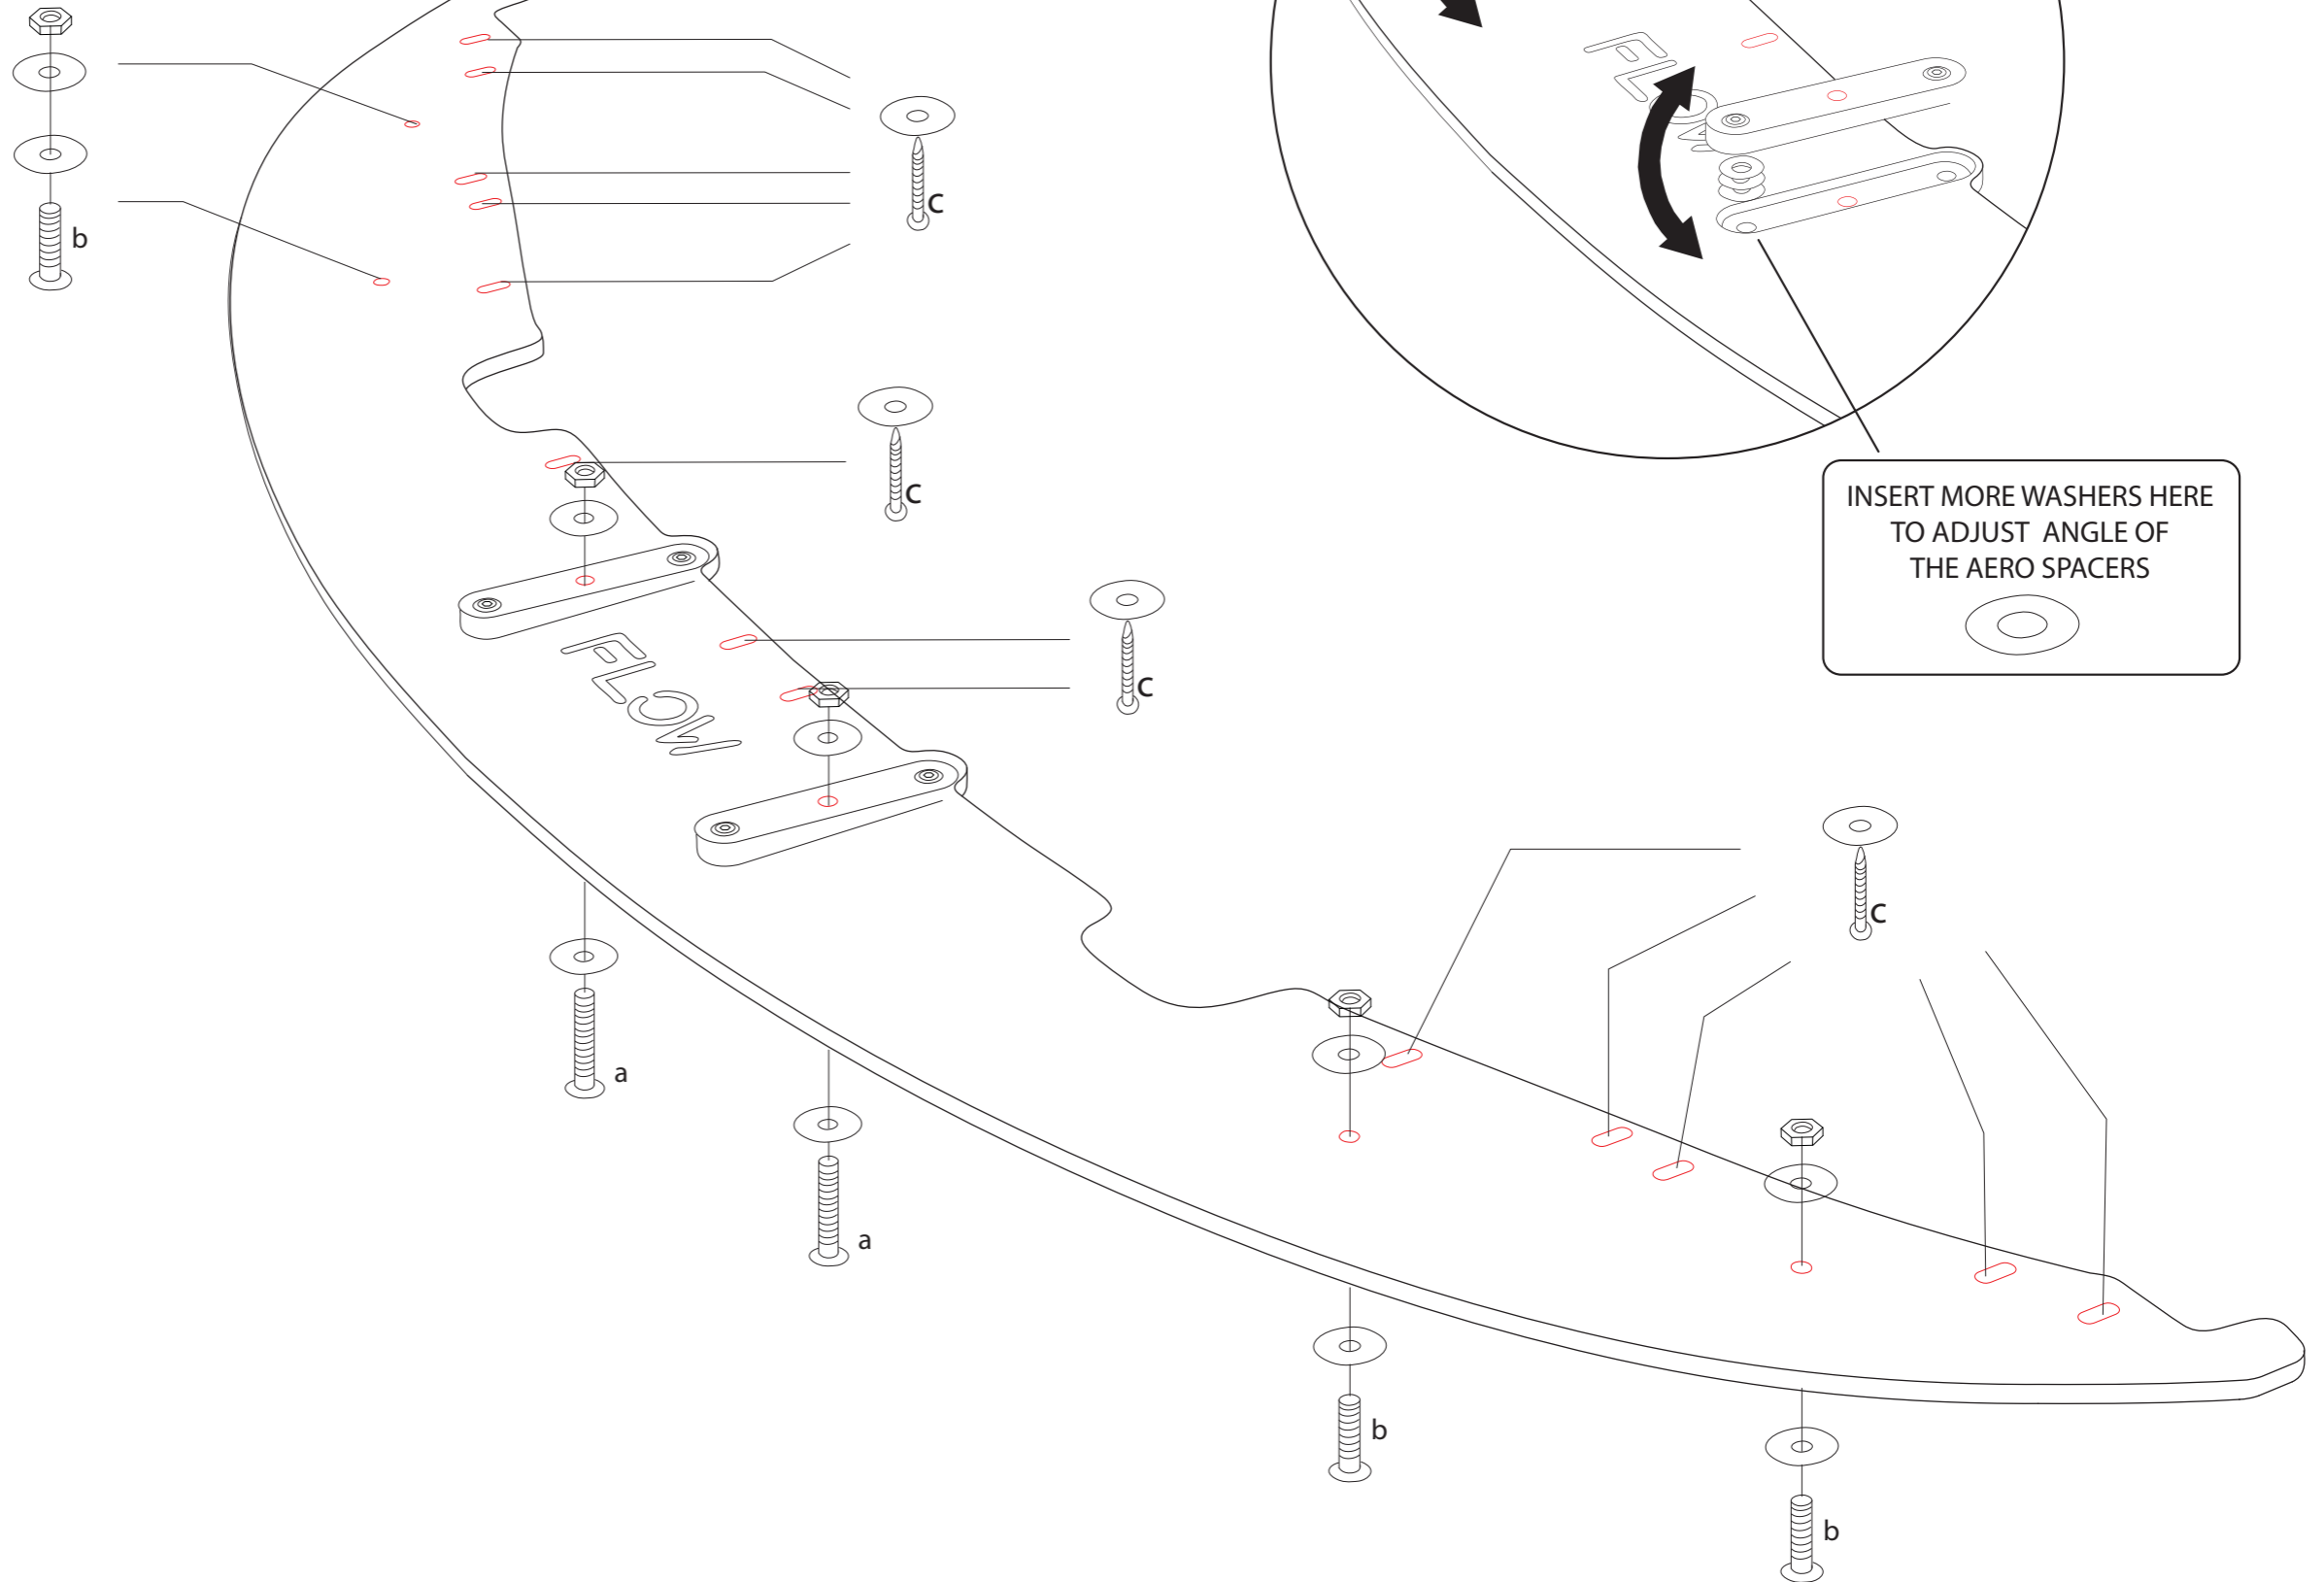

INSERT MORE WASHERS HERE  
TO ADJUST ANGLE OF  
THE AERO SPACERS