

FITTING DIAGRAM

BMW E46 M3 : FRONT SPLITTER


INSTALLATION AND FITTING SERVICES

If you are having any difficulties please seek professional advice from our many International and Domestic Authorised Dealers listed on our website.

www.flowdesignsaustralia.com

BUMPER REMOVAL REQUIRED

CAUTION
Optional fasteners may be used in this area
Beware of washer fluid bottle location
Do NOT drill into washer fluid bottle.

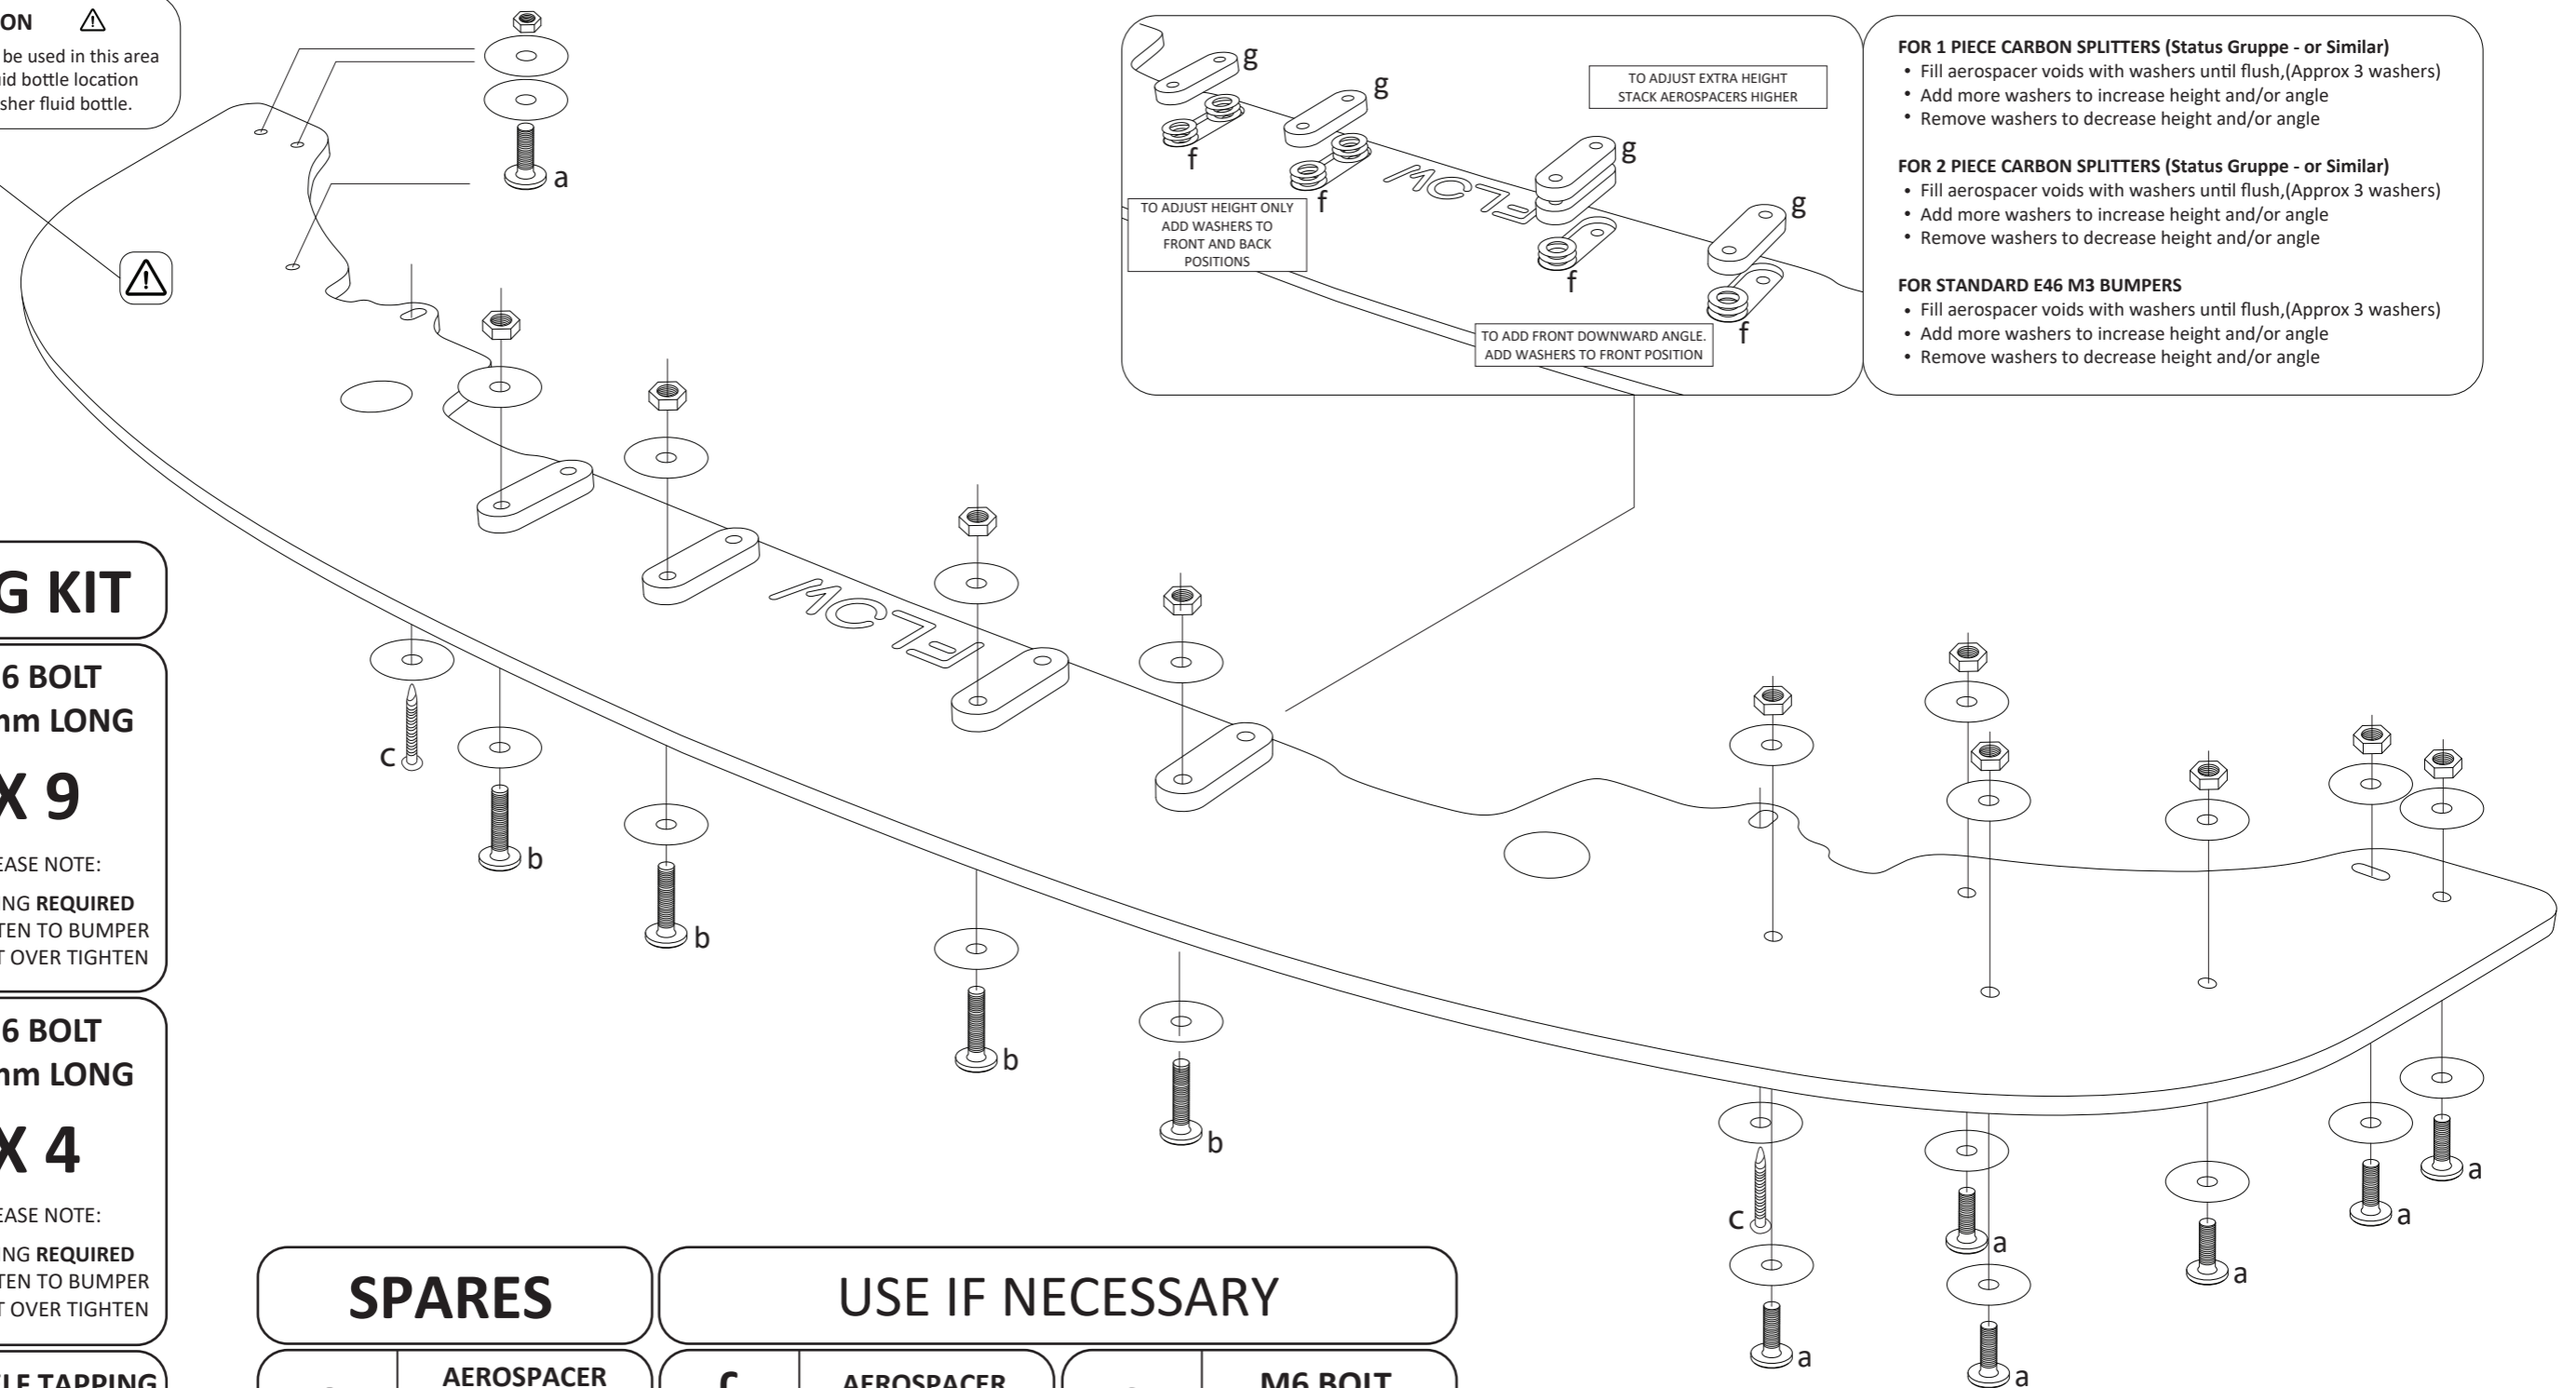

FOR 1 PIECE CARBON SPLITTERS (Status Gruppe - or Similar)

- Fill aerospacer voids with washers until flush, (Approx 3 washers)
- Add more washers to increase height and/or angle
- Remove washers to decrease height and/or angle

FOR 2 PIECE CARBON SPLITTERS (Status Gruppe - or Similar)

- Fill aerospacer voids with washers until flush, (Approx 3 washers)
- Add more washers to increase height and/or angle
- Remove washers to decrease height and/or angle

FOR STANDARD E46 M3 BUMPERS

- Fill aerospacer voids with washers until flush, (Approx 3 washers)
- Add more washers to increase height and/or angle
- Remove washers to decrease height and/or angle

FITTING KIT

a	M6 BOLT 30mm LONG
	X 9
PLEASE NOTE: DRILLING REQUIRED TO FASTEN TO BUMPER DO NOT OVER TIGHTEN	

b	M6 BOLT 50mm LONG
	X 4
PLEASE NOTE: DRILLING REQUIRED TO FASTEN TO BUMPER DO NOT OVER TIGHTEN	

c	10g SELF TAPPING SCREW 38mm LONG
	X 2
PLEASE NOTE: REPLACE OEM SCREW WITH SUPPLIED LONGER SCREW	

SPARES

e	AEROSPACER 2 HOLE SINGLE STACK
	X 4
PLEASE NOTE: STACK AEROSPACERS HIGHER IF THE VOID BETWEEN THE SPLITTER AND THE BUMPER IS TOO BIG	

USE IF NECESSARY

f	AEROSPACER WASHERS
	X 24
PLEASE NOTE: STACK WASHERS UNDER AEROSPACERS TO ADJUST HEIGHT AND/OR ANGLE	

g	M6 BOLT 40mm LONG
	X 6
PLEASE NOTE: USE THIS SIZE BOLT IF THE 50mm ARE TOO LONG	

