

FITTING INSTRUCTIONS

BMW 330CI : FRONT SPLITTER

FITTING KIT

PLEASE NOTE:
BUMPER REMOVAL RECOMMENDED
FOR BETTER FITMENT

a

**M6 BOLT
40mm LONG
X 2**

PLEASE NOTE:
DRILLING REQUIRED TO
FASTEN TO BUMPER



b

**M6 BOLT
30mm LONG
X 10**


PLEASE NOTE:
DRILLING REQUIRED TO
FASTEN TO BUMPER



c

**8G SELF TAPPING
SCREW
38mm LONG
X 2**

PLEASE NOTE:
REPLACE OEM SCREWS
WITH LONGER SCREWS

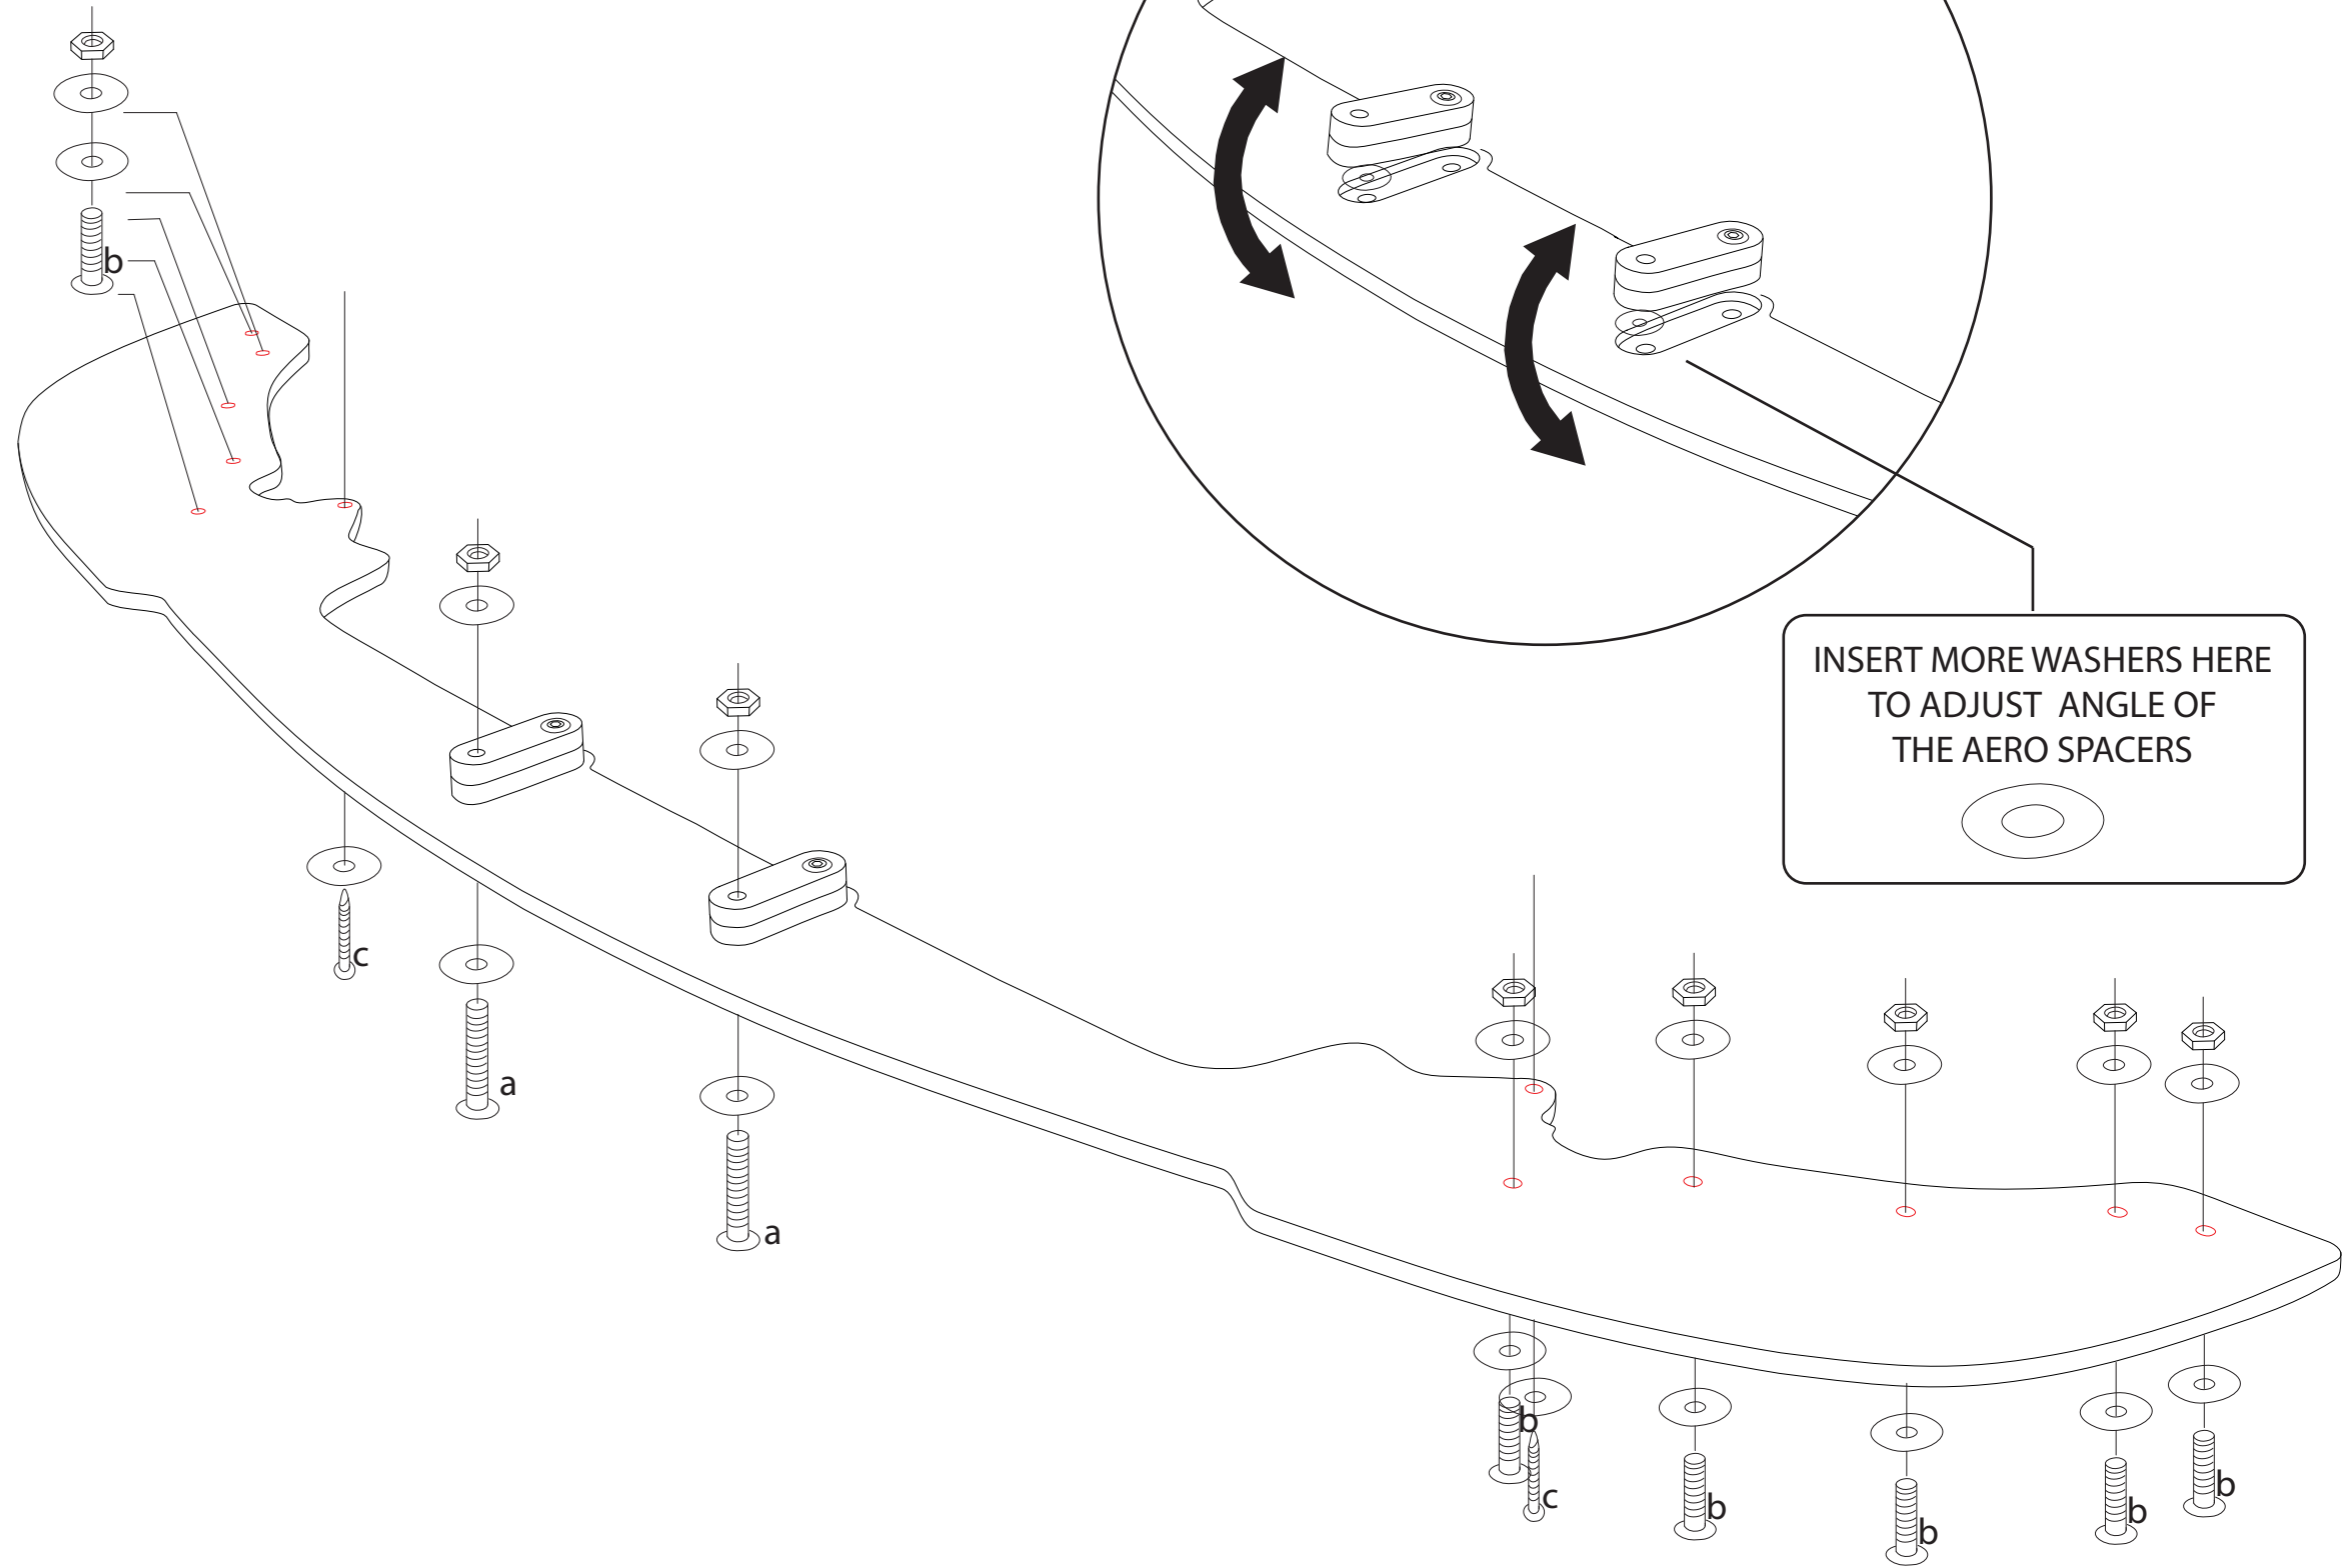

INSERT MORE WASHERS HERE
TO ADJUST ANGLE OF
THE AERO SPACERS

