

# FITTING DIAGRAM


## BMW E82 M-SPORT - FRONT EXTENSIONS

**INSTALLATION AND FITTING SERVICES**

If you are having any difficulties please seek professional advise from the listed International and Domestic Authorised Dealers on our website.

[www.flowdesignsaustralia.com](http://www.flowdesignsaustralia.com)

**BUMPER REMOVAL NOT REQUIRED**

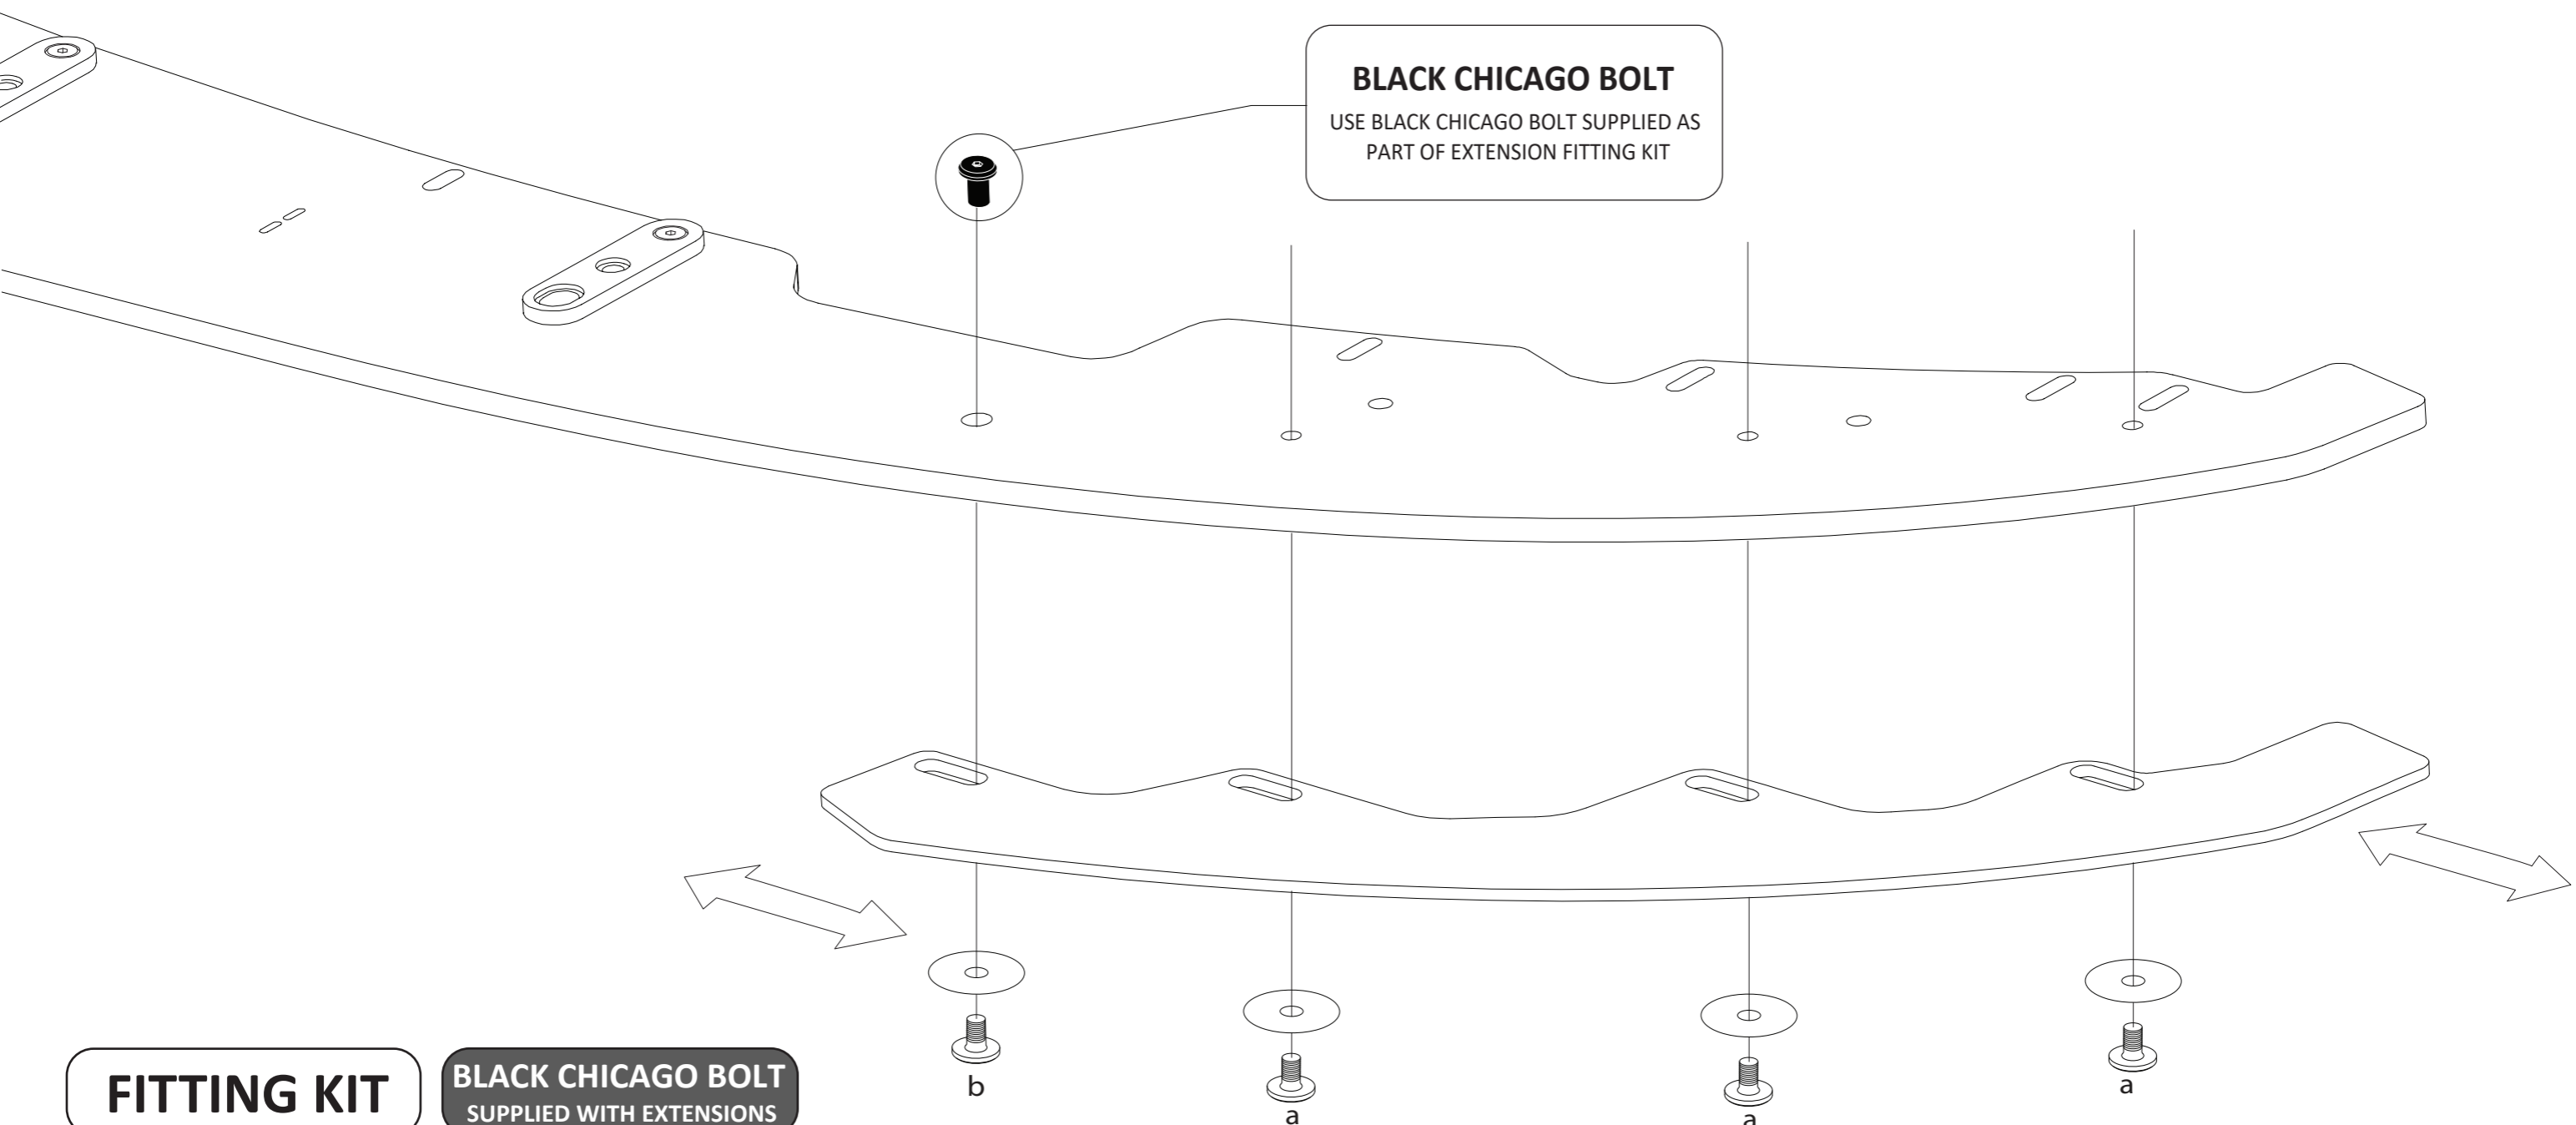

### FITTING KIT

<b>a</b>	<b>M6 BOLT</b> <b>12mm LONG</b>  <b>X 8</b>  PLEASE NOTE: HAND TIGHTEN DO NOT OVERTIGHTEN
----------	--

### BLACK CHICAGO BOLT SUPPLIED WITH EXTENSIONS

<b>c</b>	<b>BLACK CHICAGO BOLT</b> <b>X 2</b>  PLEASE NOTE: DRILLING NOT REQUIRED TO FASTEN TO SPLITTER DO NOT OVERTIGHTEN
----------	---

**PLEASE NOTE FOR ADD ON ACCESSORIES**

**DO NOT OVERTIGHTEN FASTENERS INTO BRASS FITTINGS**

**HAND TIGHTEN ONLY**

**FLOW DESIGNS**

**FLOW DESIGNS**

FLOW DESIGNS AUSTRALIA  
 ABN - 99 605 942 199  
 FACTORY 11  
 6-7 NICOLE CLOSE  
 BAYSWATER NORTH VIC. 3153

DESIGNED AND MANUFACTURED IN AUSTRALIA

**TERMS AND CONDITIONS : MISUSE OF GOODS**

By taking possession of this Flow Designs Australia product, you (the buyer) agree that you have read, understood and will comply with the following disclaimer:

- This product may not be suitable for road use in your area. We cannot be held liable for any penalties or infringements that may occur after installing any of our products.
- We cannot guarantee that this product will comply with subsequent aftermarket products you have applied to your vehicle.
- It is not legal to fit parts onto a road registered vehicle unless it carries and meets the design rules and public road regulations of your area, region and/or country.
- We do make our best effort to consider safety when designing our products, we want the scene to be a safe place for everyone!

This disclaimer absolves us (Flow Designs Australia) of any and all liability for breaches to any requirement as a result of installation of our products.

[www.flowdesignsaustralia.com](http://www.flowdesignsaustralia.com)