FITTING DIAGRAM


BMW F20 LCI 1/LCI 2 M-SPORT - FRONT SPLITTER

INSTALLATION AND FITTING SERVICES

If you are having any difficulties please seek professional advise from the listed International and Domestic Authorised Dealers on our website.

www.flowdesignsaustralia.com

BUMPER REMOVAL REQUIRED

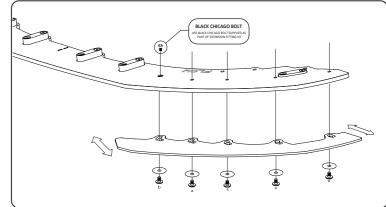

OPTIONAL ACCESSORIES AVAILABLE SEPARATELY. SEE WWW.FLOWDESIGNSAUSTRALIA.COM

FITTING KIT

a

8g SELF DRILLING 50mm LONG



PLEASE NOTE:

DRILLING NOT REQUIRED TO FASTEN TO BUMPER DO NOT OVERTIGHTEN

b

8g SELF DRILLING 40mm LONG



X6

PLEASE NOTE:

DRILLING NOT REQUIRED TO FASTEN TO BUMPER DO NOT OVERTIGHTEN




M6 BOLT 40mm LONG



X4

PLEASE NOTE:

DRILLING REQUIRED TO FASTEN TO BUMPER DO NOT OVERTIGHTEN

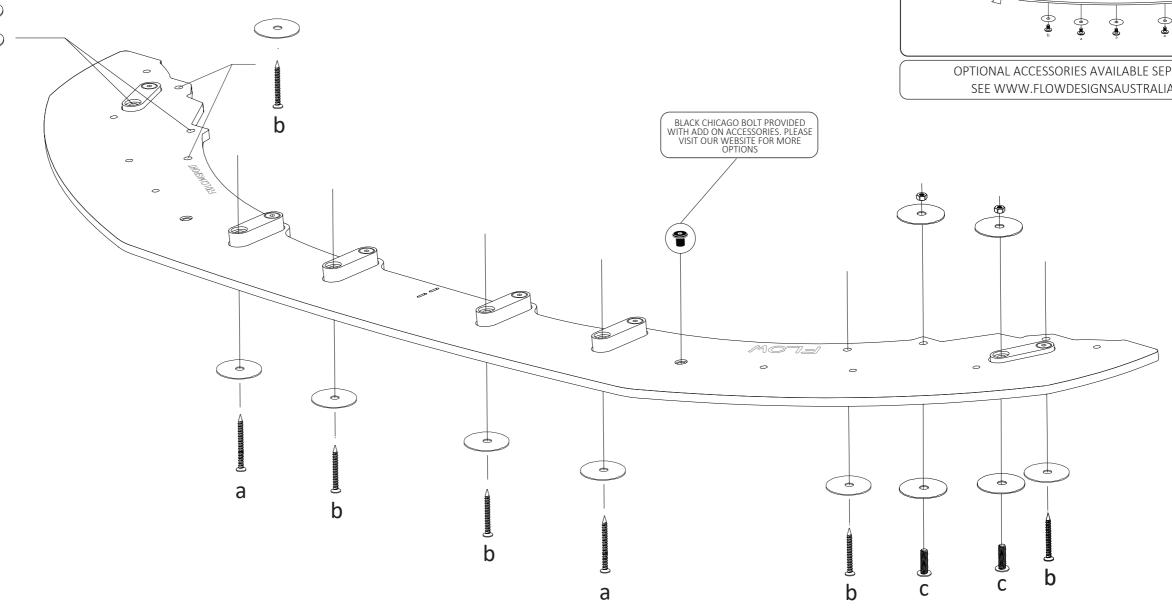









TERMS AND CONDITIONS : MISUSE OF GOODS

This disclaimer absolves us (Flow Designs Australia) of any and all liability for breaches to any requirement as a result of nstalla on of our products.