

FITTING INSTRUCTIONS

BMW F20 M135i : FRONT SPLITTER

FITTING KIT

a

**M6 BOLT
30mm LONG**

X 4

PLEASE NOTE:
DRILLING REQUIRED TO
FASTEN TO BUMPER



b

**M6 BOLT
40mm LONG**

X 4

PLEASE NOTE:
DRILLING REQUIRED TO
FASTEN TO BUMPER




c

**8G SELF TAPPING
SCREW
25mm LONG**

X 3

PLEASE NOTE:
REPLACE OEM SCREW
WITH LONGER SCREWS

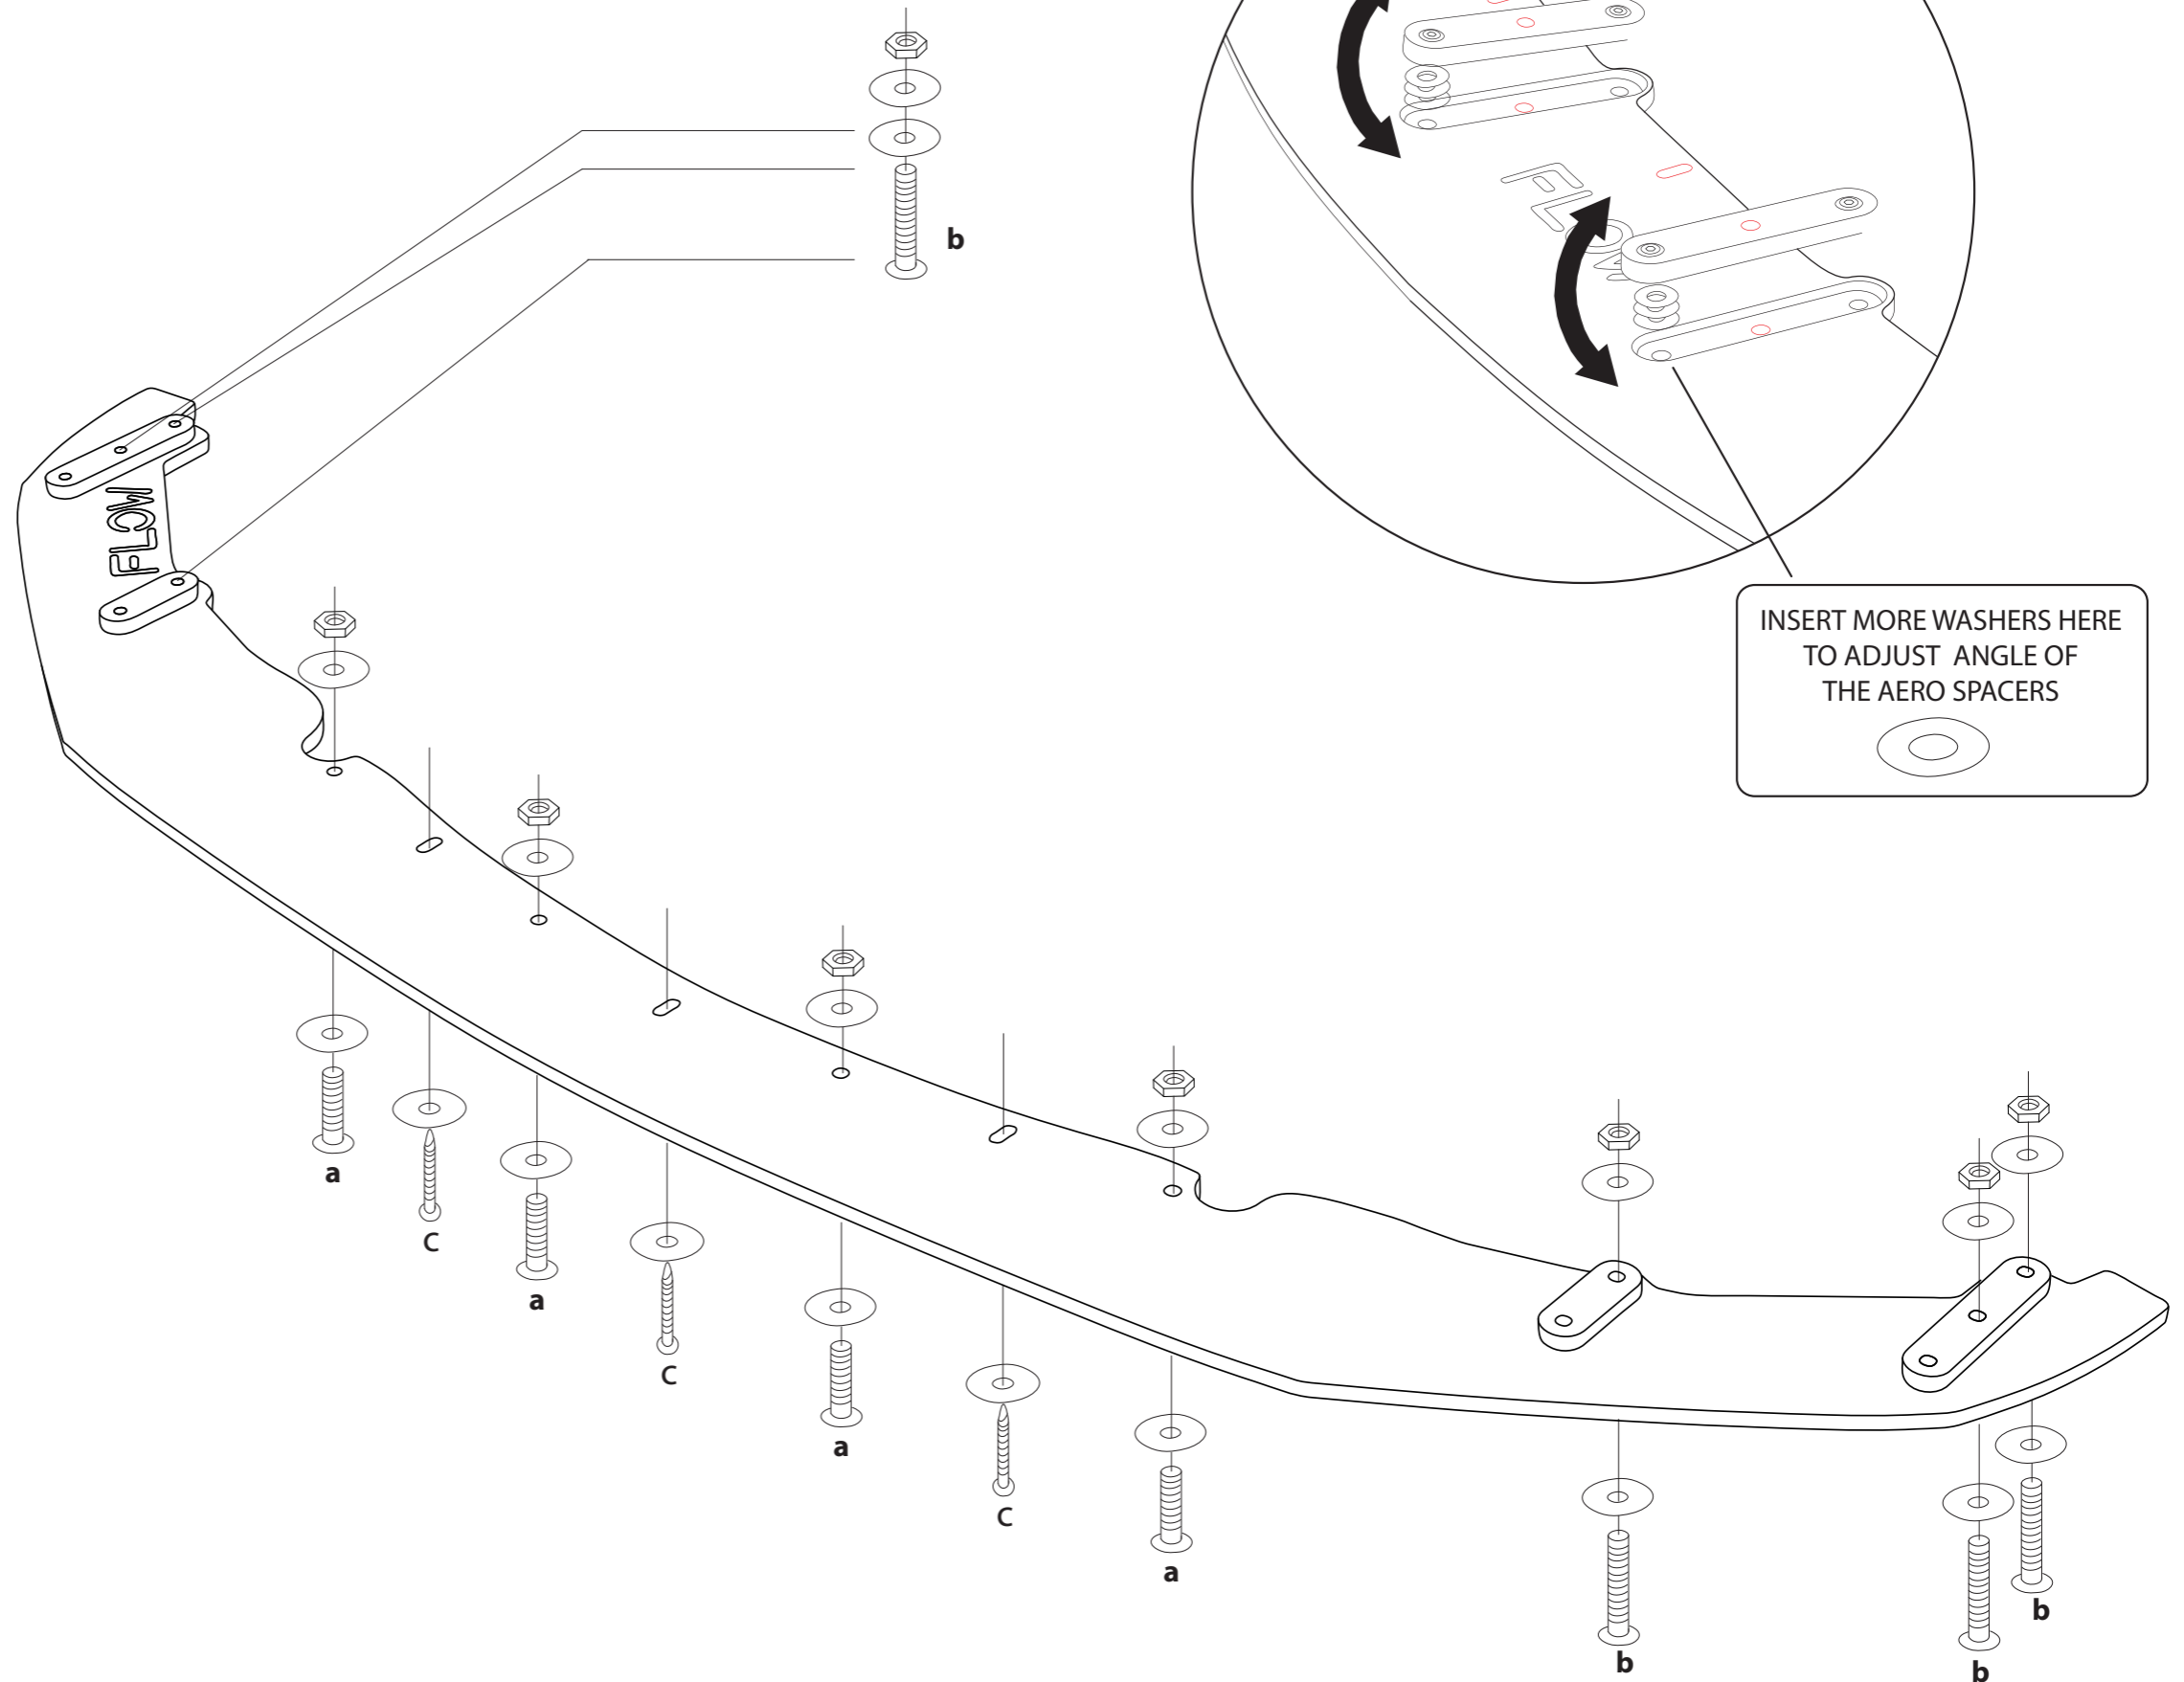

INSERT MORE WASHERS HERE
TO ADJUST ANGLE OF
THE AERO SPACERS

