## **FITTING DIAGRAM**


BMW F20 PRE LCI M135 - FRONT SPLITTER V3

## INSTALLATION AND FITTING SERVICES

If you are having any difficulties please seek professional advise from the listed International and Domestic Authorised Dealers on our website.

www.flowdesignsaustralia.com

## **BUMPER REMOVAL REQUIRED**

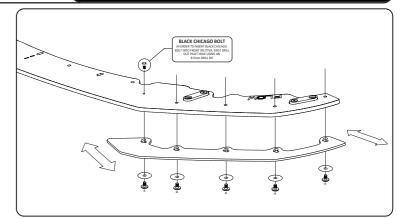

OPTIONAL ACCESSORIES AVAILABLE SEPARATELY. SEE WWW.FLOWDESIGNSAUSTRALIA.COM

## **FITTING KIT**

10g SELF DRILLING a 25mm LONG

**X4** 

PLEASE NOTE:

DRILLING NOT REQUIRED TO FASTEN TO BUMPER DO NOT OVERTIGHTEN

b

M6 BOLT 30mm LONG



M5 OD 25


**X** 5

PLEASE NOTE: DRILLING REQUIRED TO FASTEN TO BUMPER DO NOT OVERTIGHTEN

**X2** OD 18 6 PLEASE NOTE:

M6 BOLT 40mm LONG

DRILLING **REQUIRED** TO FASTEN TO BUMPER DO NOT OVERTIGHTEN

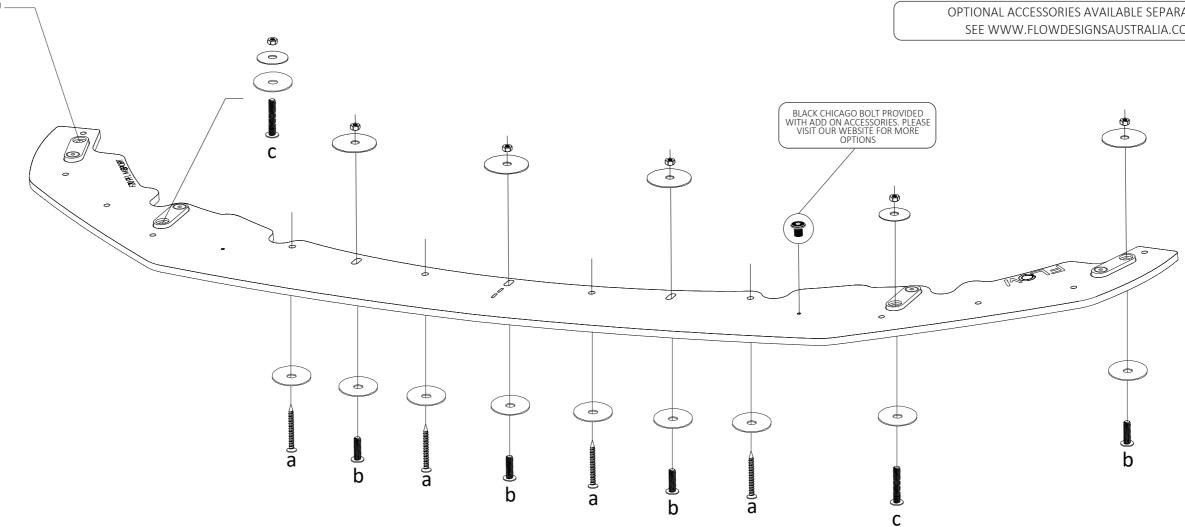







TERMS AND CONDITIONS : MISUSE OF GOODS

We cannot guarantee that this product will comply with subse

This disclaimer absolves us (Flow Designs Australia) of any and all liability for breaches to any requirement as a result of nstalla on of our products.