




# FLOW DESIGNS

## KIA CERATO BD PRE-FACELIFT INSTRUCTIONS CANARD SET

**MOUNTING  
TEMPLATE**

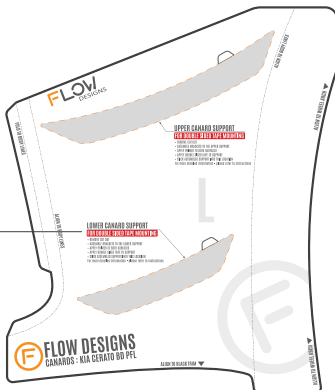


WATCH ME  
BEFORE INSTALLATION



**FLOW**  
DESIGNS

**UPPER CANARD  
DIVE PLANE**

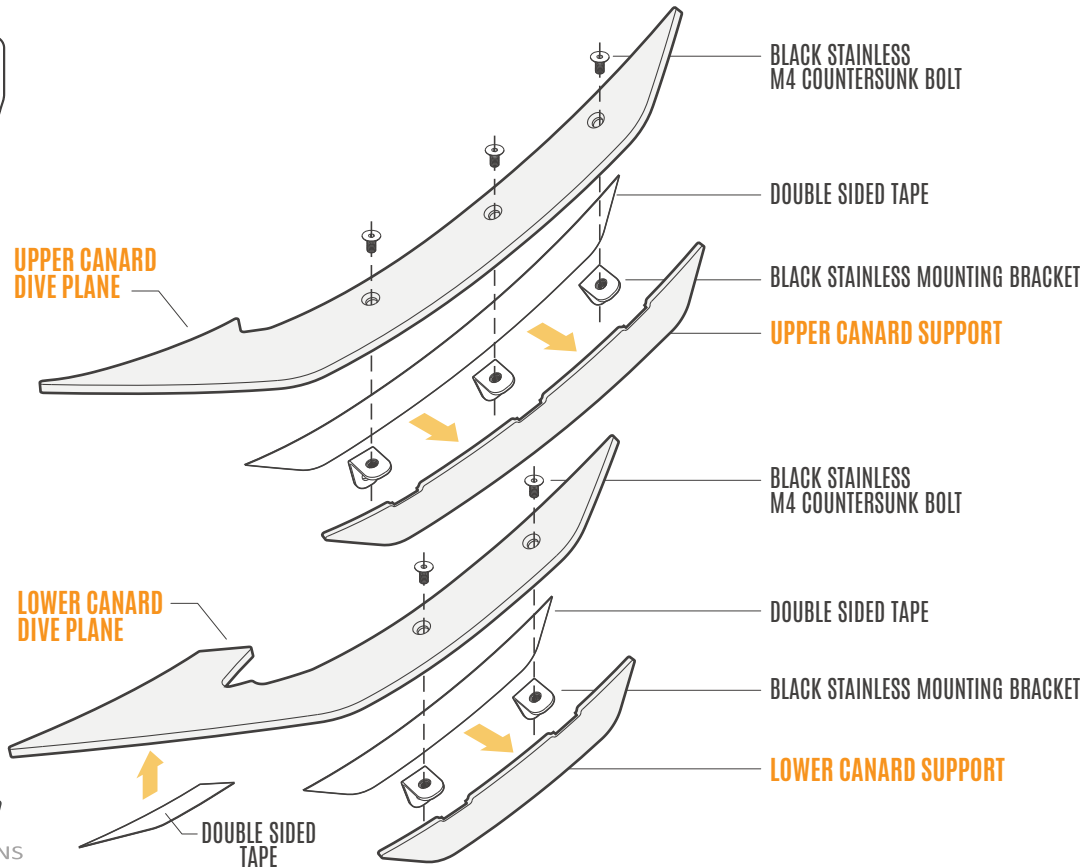


# CANARD SET INSTALLATION INSTRUCTIONS

KIA CERATO BD PRE-FACELIFT


## STEP 1

- **CLEAN THE BUMPER BEFORE INSTALLING CANARDS.**
- **Align the template to the front bumper and wheel arch.**
- Contour the template along the fold lines to suit the vehicle.
- **Tape the template to the vehicle.**
- **Peel perforated cut-out on template for both upper and lower canard supports.**

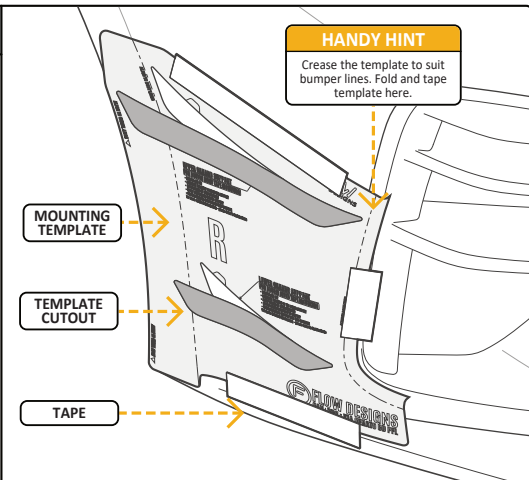


## STEP 2

- **Assemble the mounting brackets to the upper and lower canard supports.**
- Use one of the provided primer sticks and **apply primer to the back of all canard supports and area as marked on the lower dive plane.**

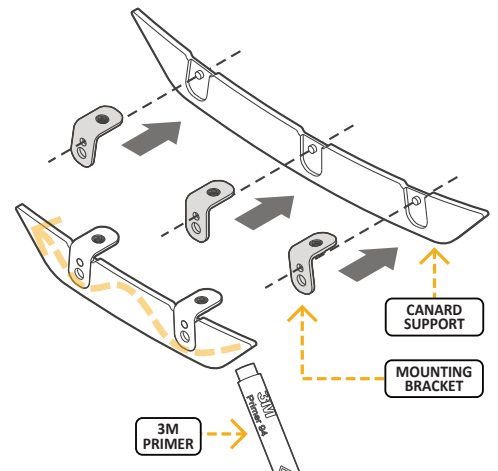


## STEP 3

- **Apply double-sided tape to the back side of the canard supports.**
- **Apply double-sided tape to lower dive plane** as shown in the installation video.

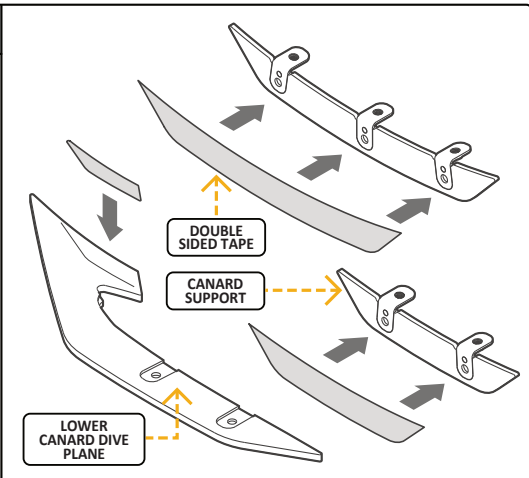


## STEP 4

- **Use the alcohol swab to clean the area within the cut-out on the template.**
- **Apply primer both sides of the vehicle within cut-out on template.**
- **Apply primer to the bumper around the vent** as shown in the installation video.

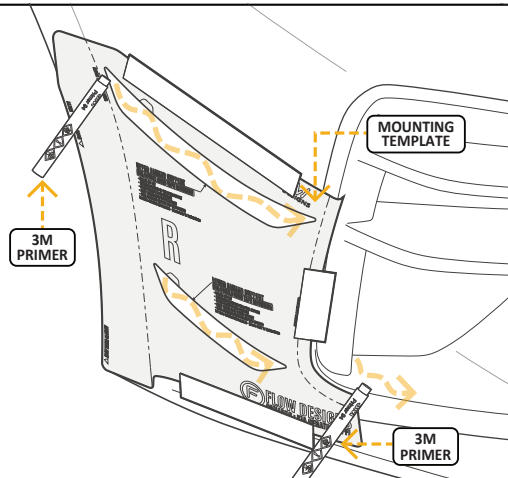


## STEP 5

- Peel backing of double-sided tape on the canard supports.
- Align the upper and lower canard supports to the template and adhere to bumper.
- Hold the canard support to the vehicle for 1-2 minutes.
- Remove template from vehicle.

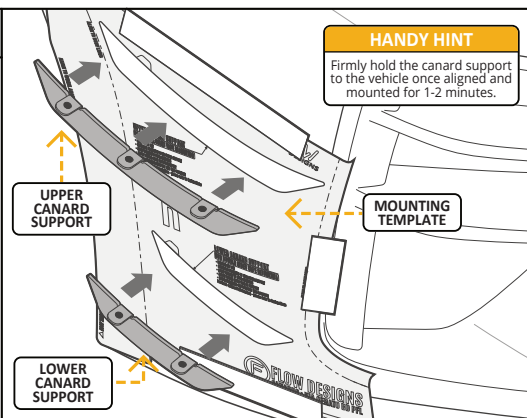


## STEP 6

- Peel the backing of the double-sided dive plane.
- Align and mount the lower canard dive plane to the lower canard support first.
- Ensure the lower canard dive plane is flush to the bumper before tightening the dive plane mounting bolts.

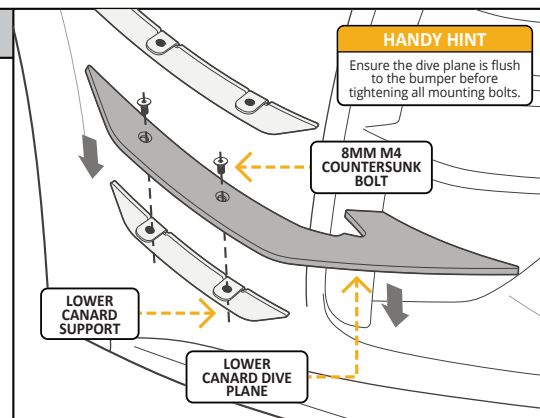


## STEP 7

- Align and mount the upper dive plane to the upper canard support.
- Ensure the upper canard dive plane is flush to the bumper before tightening the dive plane mounting bolts.

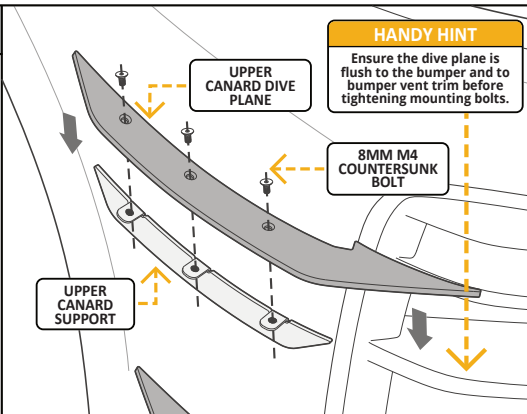

## STEP 8

- Repeat steps 6 & 7 on opposite side of vehicle to complete canard installation.

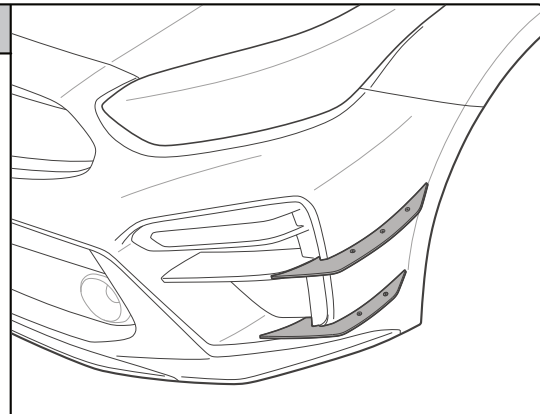

## CANARD FITTING KIT

### DIVE PLANE MOUNTING BOLTS



COUNTERSUNK BOLT  
BLACK STAINLESS  
M4 X 8MM  
X 10

### MOUNTING BRACKETS



X 10

### ALCOHOL SWAB + PRIMER



X 2

### DOUBLE SIDED TAPE




3M DOUBLE  
SIDED TAPE  
SET  
X 1

# PARTS AND FITTING KIT


KIA CERATO BD PRE-FACELIFT

## PARTS LIST


**X 2**  
MOUNTING  
BRACKETS




**X 10**  
MOUNTING  
BRACKETS




**X 2**  
ALCOHOL  
SWAB  
+  
PRIMER




**X 10**  
COUNTERSUNK  
BOLT  
BLACK STAINLESS  
M4 X 8MM




**X 2**  
UPPER CANARD  
DIVE PLANE

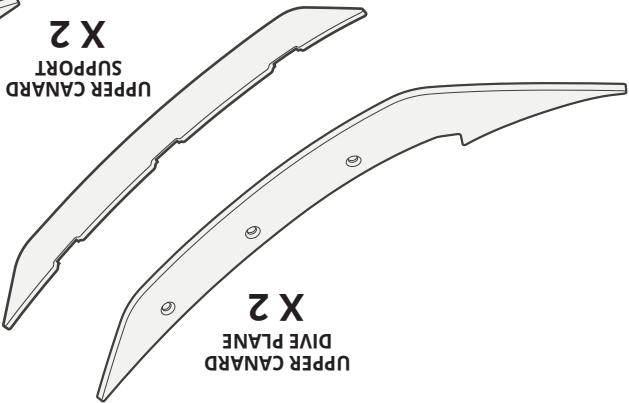


**X 2**  
UPPER CANARD  
SUPPORT




**X 2**  
LOWER CANARD  
DIVE PLANE

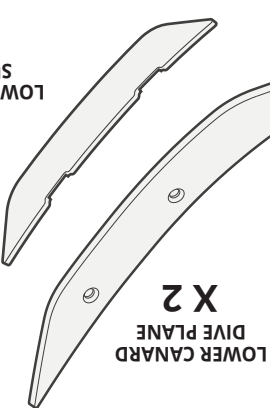


**X 2**  
LOWER CANARD  
SUPPORT

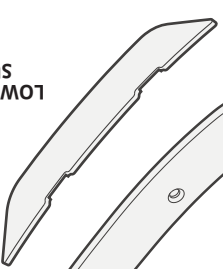

**X 1**  
2.5MM  
ALLEN KEY



**X 1**  
3M DOUBLE  
SIDED TAPE  
SET

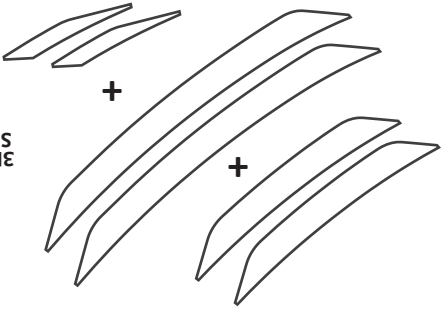

**X 2**  
MOUNTING  
TEMPLATE

