

FITTING DIAGRAM


FORD FGX - XR6 : REAR DIFFUSER + FLOW LOCK FINS INSTRUCTIONS

INSTALLATION AND FITTING SERVICES

If you are having any difficulties please seek professional advice from the listed International and Domestic Authorised Dealers on our website.

www.flowdesignsaustralia.com

BUMPER REMOVAL NOT REQUIRED

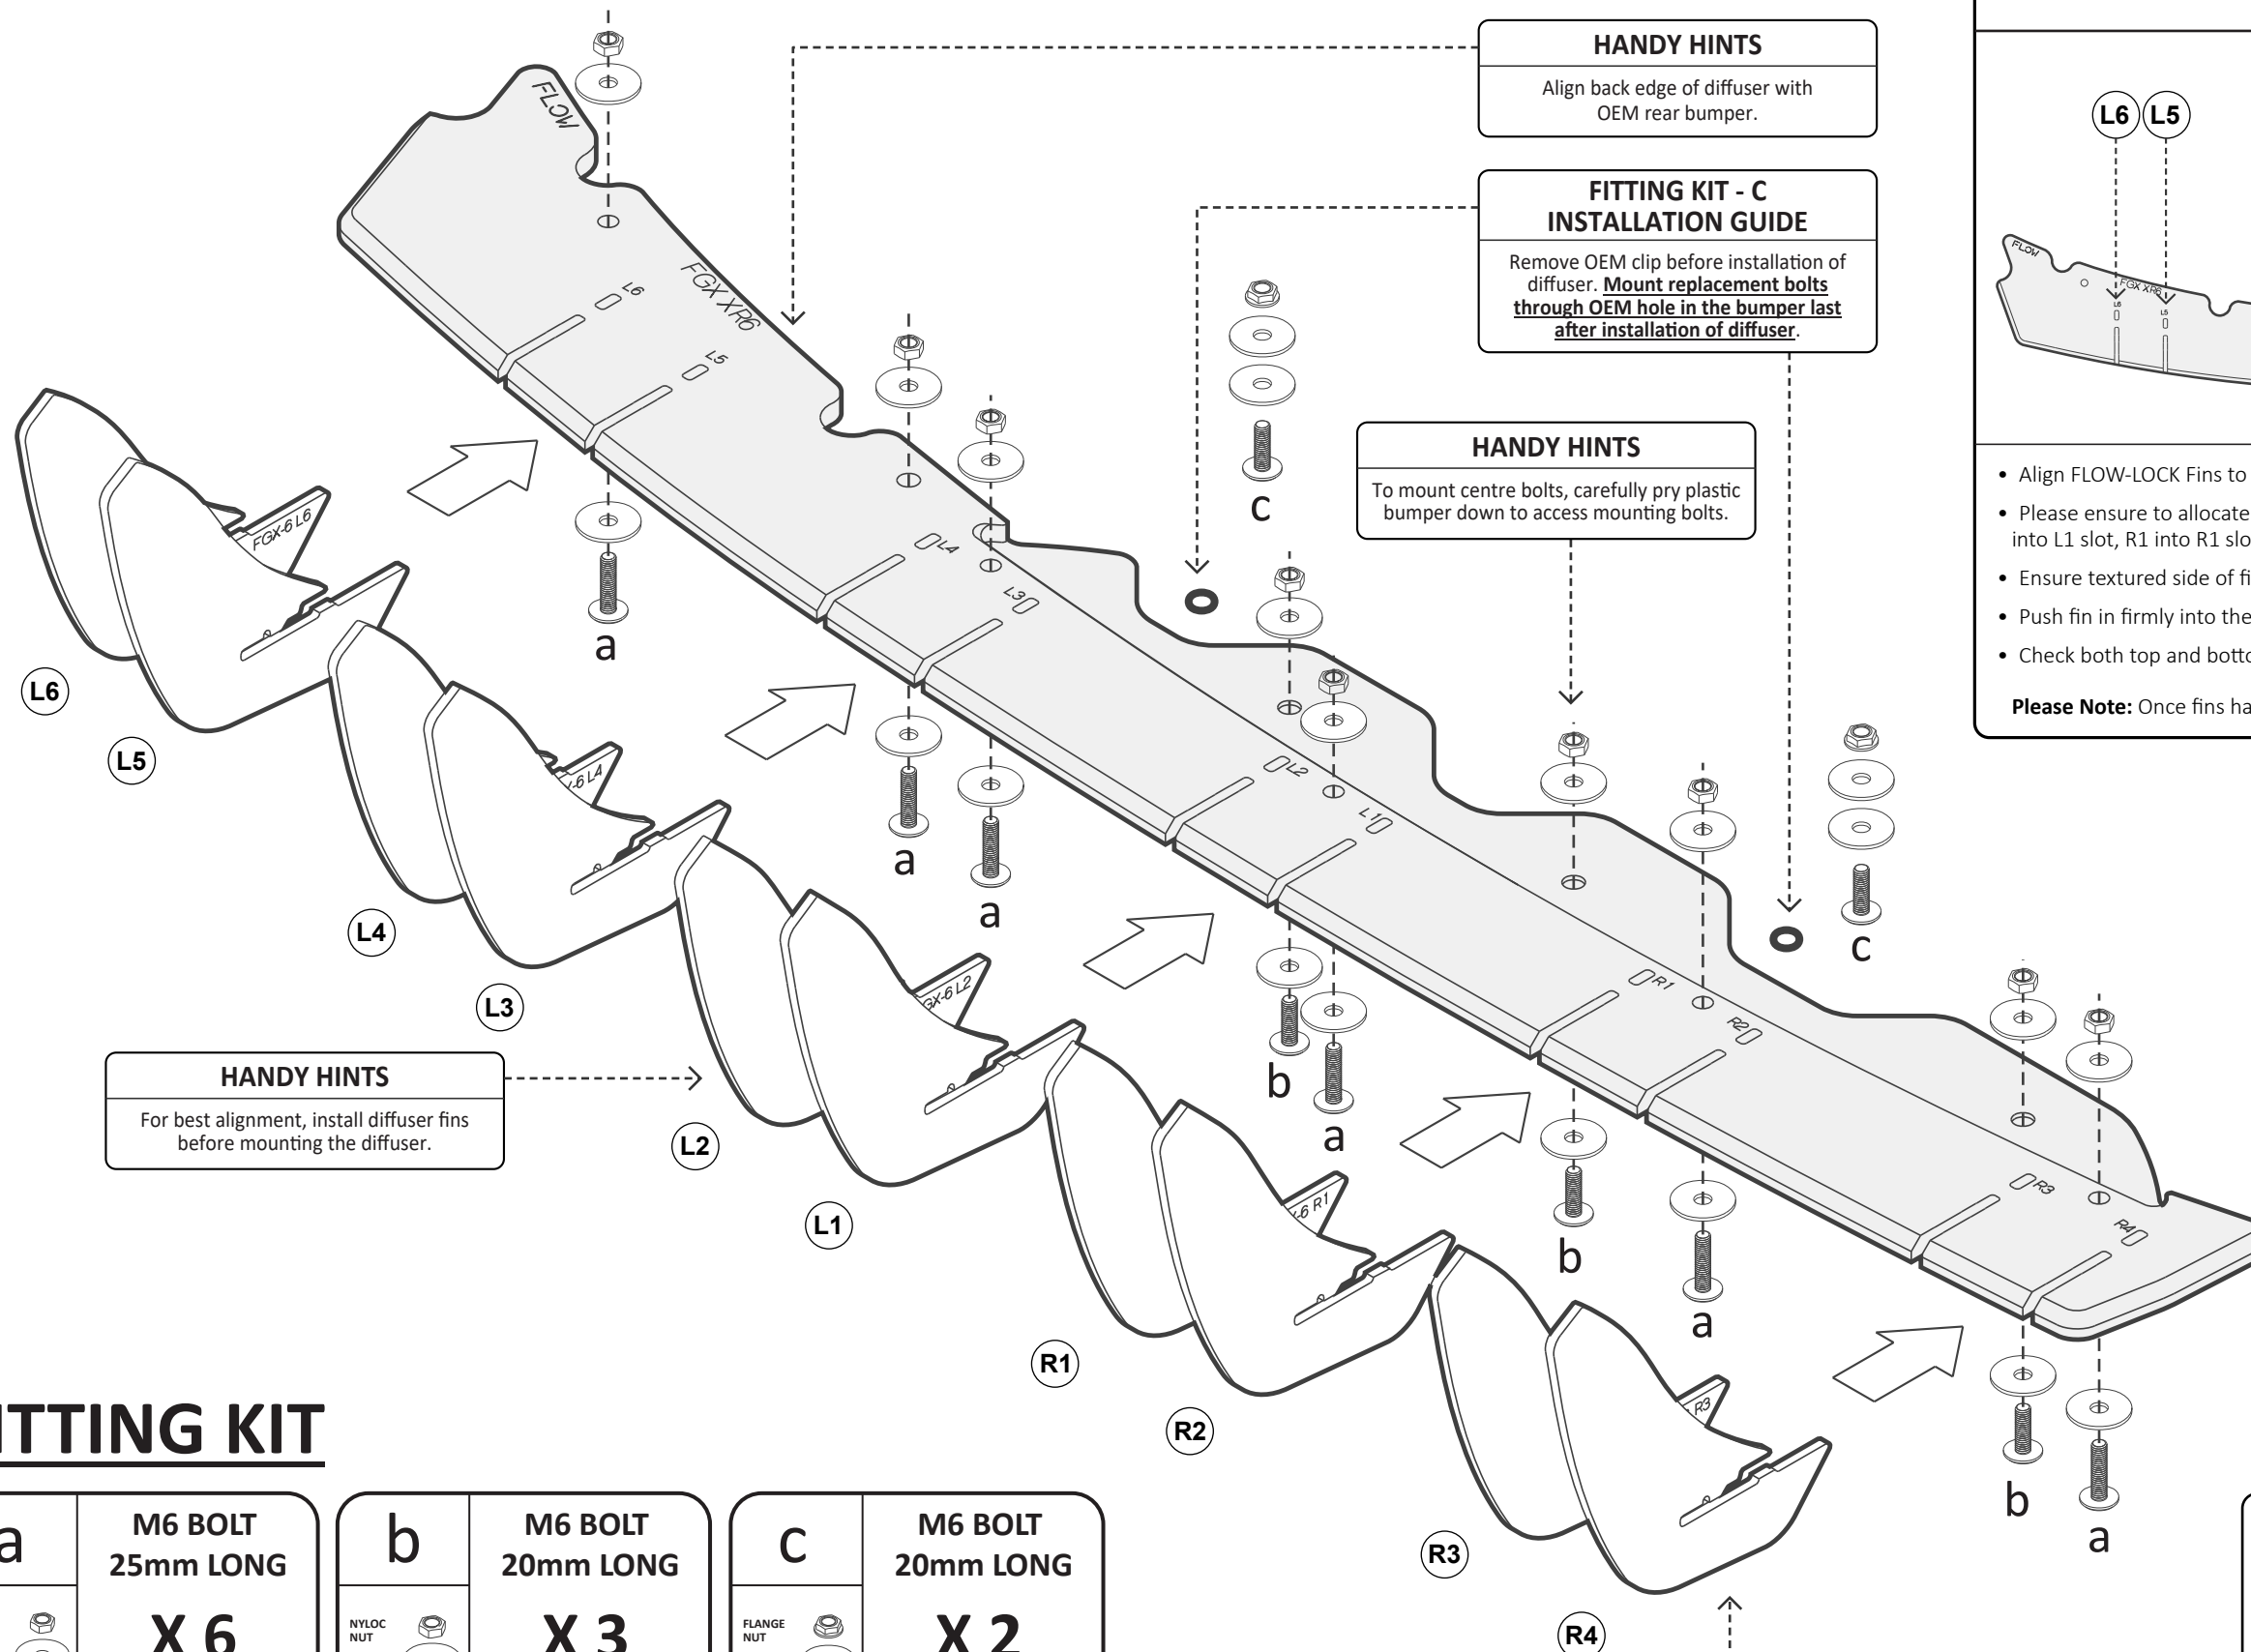

HANDY HINTS
Align back edge of diffuser with OEM rear bumper.


FITTING KIT - C INSTALLATION GUIDE
Remove OEM clip before installation of diffuser. **Mount replacement bolts through OEM hole in the bumper last after installation of diffuser.**

HANDY HINTS
To mount centre bolts, carefully pry plastic bumper down to access mounting bolts.

HANDY HINTS
For best alignment, install diffuser fins before mounting the diffuser.

HANDY HINTS
Ensure diffuser fin locking tabs are pushed all the way in and clipped into the diffuser.

HANDY HINTS

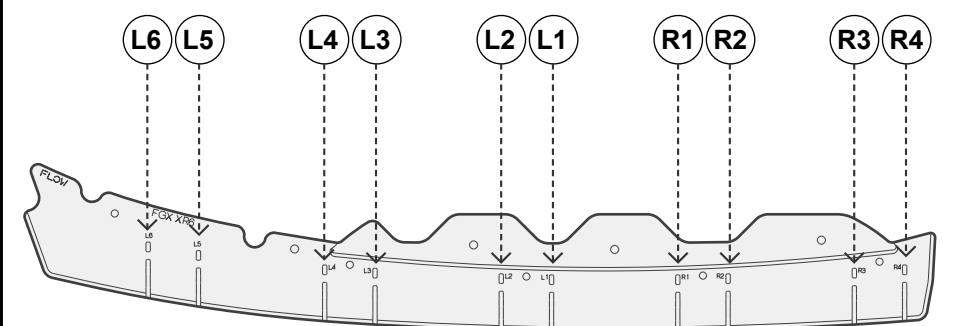

- Align FLOW-LOCK Fins to their corresponding slots.
 - Please ensure to allocate the correct FLOW-LOCK Fin to the correct corresponding slot (L1 into L1 slot, R1 into R1 slot etc.)
 - Ensure textured side of fin is facing out from opposing fin
 - Push fin in firmly into the slots until a clicking sound is heard.
 - Check both top and bottom locking tabs have securely seated
- Please Note:** Once fins have been locked into position, they will be difficult to remove.

FITTING KIT

<p>a</p> <p>NYLOC NUT OD 25 OD 25 25mm M6</p>	<p>M6 BOLT 25mm LONG</p> <p>X 6</p> <p>PLEASE NOTE: DRILLING REQUIRED TO FASTEN TO BUMPER USE 8MM DRILL BIT</p>
<p>b</p> <p>NYLOC NUT OD 25 OD 25 20mm M6</p>	<p>M6 BOLT 20mm LONG</p> <p>X 3</p> <p>PLEASE NOTE: DRILLING REQUIRED TO FASTEN TO BUMPER USE 8MM DRILL BIT</p>
<p>c</p> <p>FLANGE NUT OD 25 OD 25 20mm M6</p>	<p>M6 BOLT 20mm LONG</p> <p>X 2</p> <p>PLEASE NOTE: REMOVE OEM CLIP AND REPLACE WITH BOLTS. NO DRILLING REQUIRED</p>

FLOW DESIGNS AUSTRALIA
ABN : 99 605 842 199
10 LONGSTAFF RD
BAVSWATER VIC. 3153

TERMS AND CONDITIONS: MISUSE OF GOODS
By taking possession of the Flow Designs Australia product, you (the buyer) agree that you have read, understood and will comply with the following disclaimer:

- This product may not be suitable for road use in your area. We cannot be held liable for any penalties or infringements that may occur after installing any of our products.
- We cannot guarantee that this product will comply with all subsequent aftermarket products you have applied to your vehicle.
- It is not legal to fit parts onto a road registered vehicle unless it carries and meets the design rules and public road regulations of your area, region and/or country.
- We do our best effort to consider safety when designing our products. We want the scene to be a safe place for everyone!

This disclaimer absolves us (Flow Designs Australia) of any and all liability or breaches to any requirement as a result of installation of our products.

www.flowdesignsaustralia.com

