

FITTING DIAGRAM

FORD FG: SIDE SPLITTER INSTRUCTIONS

INSTALLATION AND FITTING SERVICES


If you are having any difficulties please seek professional advice from the listed International and Domestic Authorised Dealers on our website.

www.flowdesignsaustralia.com

**SIDE SKIRT REMOVAL
NOT REQUIRED**

HANDY HINTS

Align back and front edge of side splitter with OEM side skirt

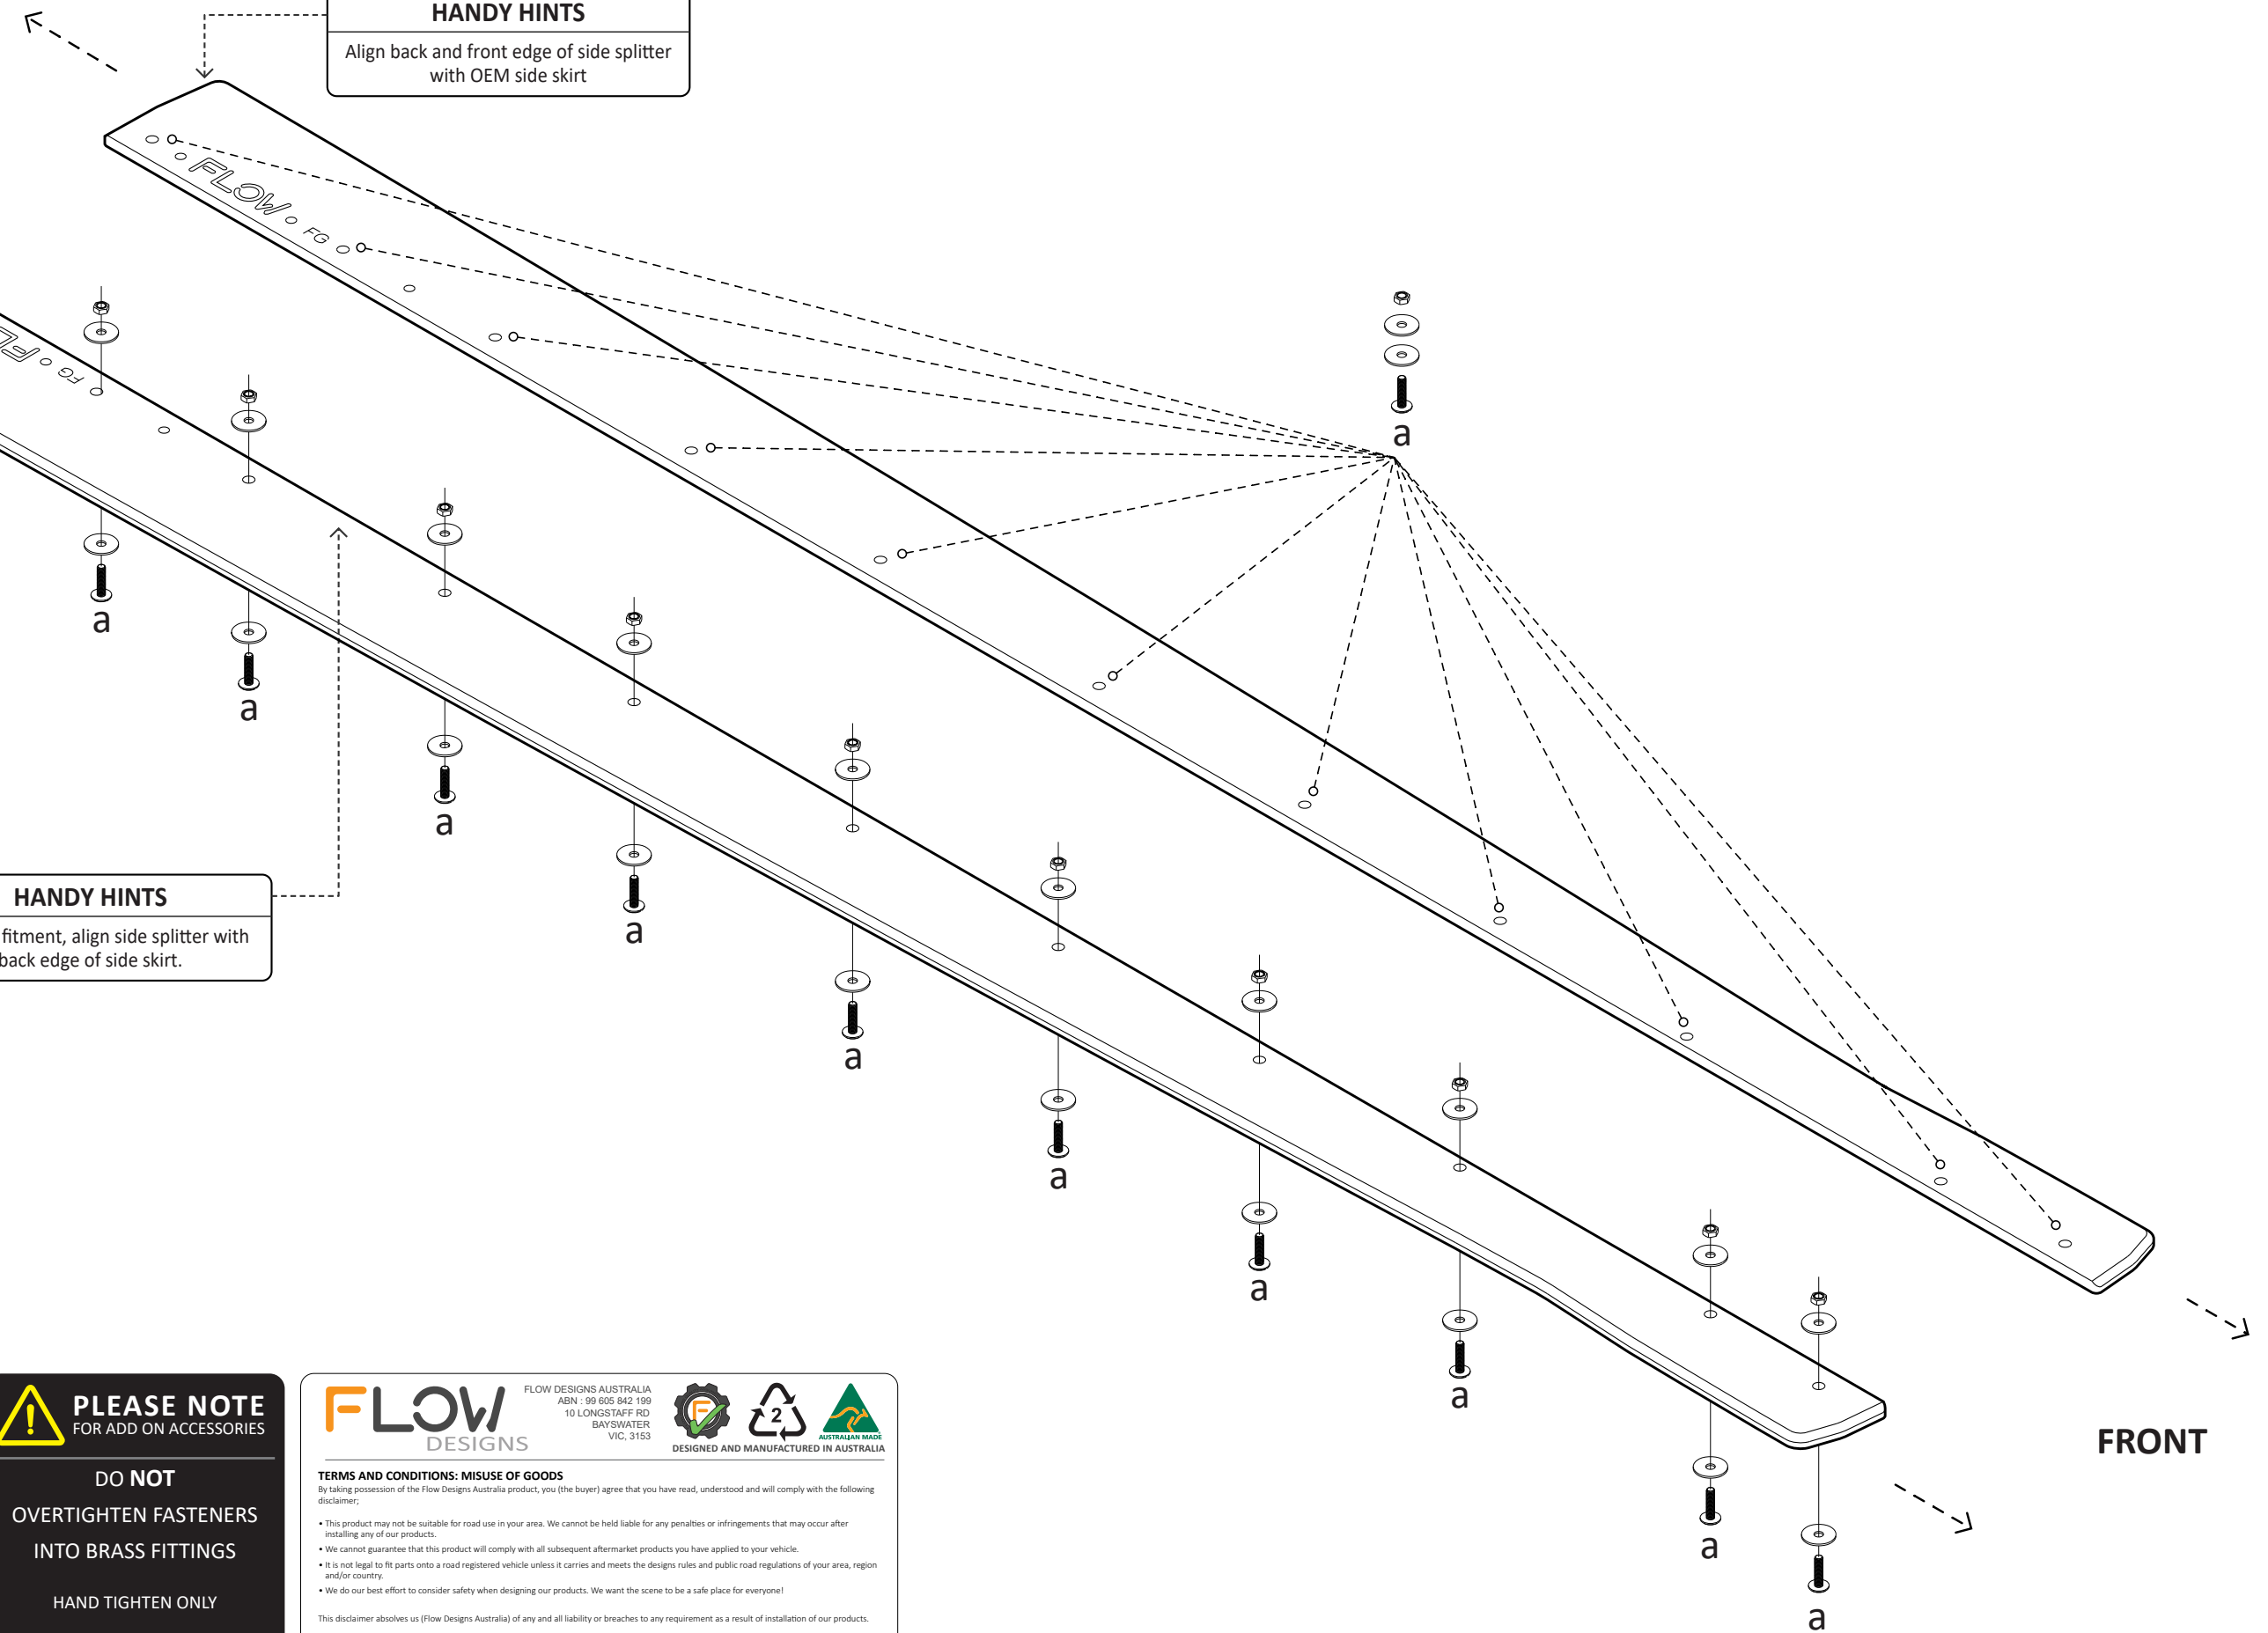

HANDY HINTS

For best fitment, align side splitter with back edge of side skirt.

FITTING KIT

a	M6 BOLT 25mm LONG
X 22	
 NYLOC NUT OD 25 OD 25 25mm M6	PLEASE NOTE: DRILLING REQUIRED TO FASTEN TO SIDE SKIRT PLEASE USE 8mm DRILL BIT

PLEASE NOTE FOR ADD ON ACCESSORIES

DO NOT OVERTIGHTEN FASTENERS INTO BRASS FITTINGS

HAND TIGHTEN ONLY

FLOW DESIGNS

FLOW DESIGNS

FLOW DESIGNS AUSTRALIA
 ABN : 99 605 842 199
 10 LONGSTAFF RD
 BAYSWATER VIC, 3153

DESIGNED AND MANUFACTURED IN AUSTRALIA

TERMS AND CONDITIONS: MISUSE OF GOODS

By taking possession of the Flow Designs Australia product, you (the buyer) agree that you have read, understood and will comply with the following disclaimer:

- This product may not be suitable for road use in your area. We cannot be held liable for any penalties or infringements that may occur after installing any of our products.
- We cannot guarantee that this product will comply with all subsequent aftermarket products you have applied to your vehicle.
- It is not legal to fit parts onto a road registered vehicle unless it carries and meets the designs rules and public road regulations of your area, region and/or country.
- We do our best effort to consider safety when designing our products. We want the scene to be a safe place for everyone!

This disclaimer absolves us (Flow Designs Australia) of any and all liability or breaches to any requirement as a result of installation of our products.

www.flowdesignsaustralia.com