

FITTING GUIDE

FORD FOCUS MK3 RS - REAR SPOILER EXTENSION

FITTING OPTION 1 - WITH SPOILER BRACKETS

INSTALLATION AND FITTING SERVICES

If you are having any difficulties please seek professional advise from the listed International and Domestic Authorised Dealers on our website.

www.flowdesignsaustralia.com

**OEM REAR SPOILER
REMOVAL REQUIRED**

STEP 1

HANDY HINT
ENSURE NOT TO DRILL TOO DEEP, AS YOU RISK GOING THROUGH THE TOP OF THE OEM SPOILER

FLOW DESIGNS DRILLING TEMPLATE
ALIGN WITH BOTTOM OF OEM REAR SPOILER TO DRILL OUT HOLES

PLEASE NOTE:
DRILLING TEMPLATE MAY BE DISCARDED AFTER HOLES HAVE BEEN DRILLED

- Remove OEM car spoiler from car
- Align drilling template with OEM car spoiler
- Using a 6mm drill bit, drill pilot holes, then enlarge with a 9mm drill bit

STEP 2

- Compress nutserts (a.) into drilled out holes

STEP 3


- Install the spoiler extension to the brackets using screw (b.)

STEP 4

- Using the installed nutserts, screw brackets to OEM spoiler using screws (c.)
- Reinstall OEM spoiler onto car

FITTING KIT A

<p>a</p> <p>M6 NUTSERT</p> <p>X 8</p> <p>PLEASE NOTE: DRILLING REQUIRED TO FASTEN TO OEM SPOILER DO NOT OVERTIGHTEN</p>	<p>b</p> <p>M5 SCREW 10mm LONG</p> <p>X 4</p> <p>PLEASE NOTE: DRILLING NOT REQUIRED TO FASTEN TO OEM SPOILER DO NOT OVERTIGHTEN</p>	<p>c</p> <p>M6 CAPPING SCREW 40mm LONG</p> <p>X 8</p> <p>PLEASE NOTE: DRILLING NOT REQUIRED TO FASTEN TO OEM SPOILER DO NOT OVERTIGHTEN</p>	<p>d</p> <p>16mm WASHER</p> <p>X 8</p> <p>PLEASE NOTE: DRILLING NOT REQUIRED TO FASTEN TO OEM SPOILER DO NOT OVERTIGHTEN</p>	<p>SPARE</p> <p>M6 NUTSERT</p> <p>X 1</p> <p>PLEASE NOTE: DRILLING REQUIRED TO FASTEN TO OEM SPOILER DO NOT OVERTIGHTEN</p>
--	--	--	---	--

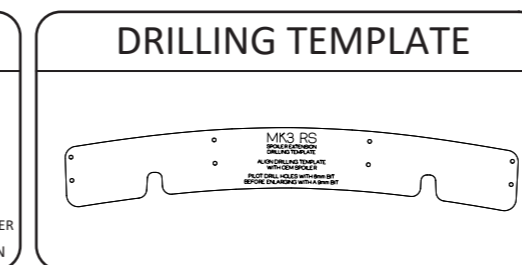

FLOW DESIGNS
FLOW DESIGNS AUSTRALIA
MARK 19/005/002/100
FACTORY 11
6/7 NICOLE CLOSE
BAYSWATER NORTH
VIC. 3183

DESIGNED AND MANUFACTURED IN AUSTRALIA

TERMS AND CONDITIONS : MISUSE OF GOODS
This Product application is not intended for public road registered vehicles within Australia. Regulations may vary from Countries outside of Australia. Please check your Country's and State's road regulations before installing on a vehicle intended for public road use.
Flow Designs Australia PTY LTD will not be liable for any liabilities in relation to any use of the goods other than in strict accordance with the Company's instructions and for the purpose and application for which the goods were supplied by the Company.
The Client undertakes with the Company:
• That it will acquaint itself with the requirements of all relevant government or statutory and other authorities, bodies or corporations relating to the goods and/or services and to the applications to which the goods and/or services are to be put;
• That at all times while the goods are in its possession or under its control it will comply with such requirements;
• That it will procure that any purchaser of goods from it will also acquaint itself with, and will comply with, such requirements;
• That it will indemnify the Company against any liability resulting from a breach of any such requirements.

www.flowdesignsaustralia.com

FITTING GUIDE


FORD FOCUS MK3 RS - REAR SPOILER EXTENSION FITTING OPTION 2 - WITHOUT SPOILER BRACKETS

INSTALLATION AND FITTING SERVICES

If you are having any difficulties please seek professional advise from the listed International and Domestic Authorised Dealers on our website.


www.flowdesignsaustralia.com

OEM REAR SPOILER REMOVAL NOT REQUIRED

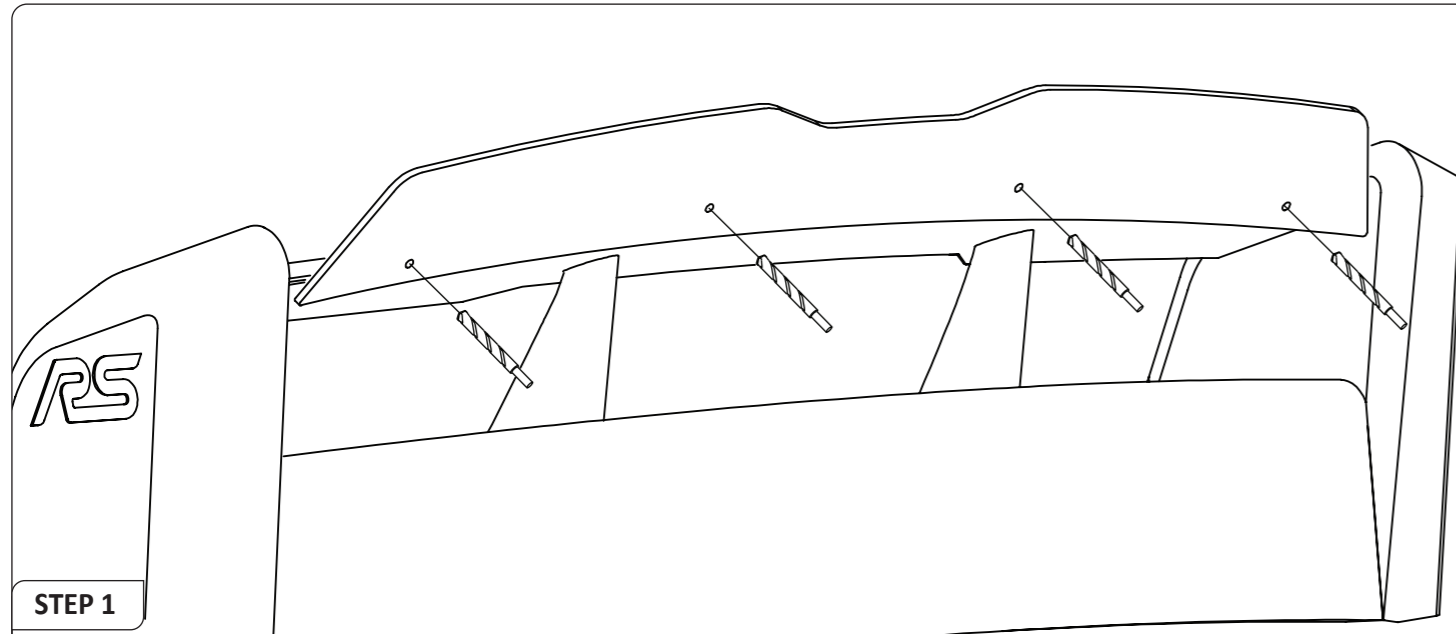


STEP 1

- Using the spoiler extension as a guide, mark out the four drill holes
- Remove the spoiler extension and using a 6mm drill bit, drill pilot holes, then enlarge with a 9mm drill

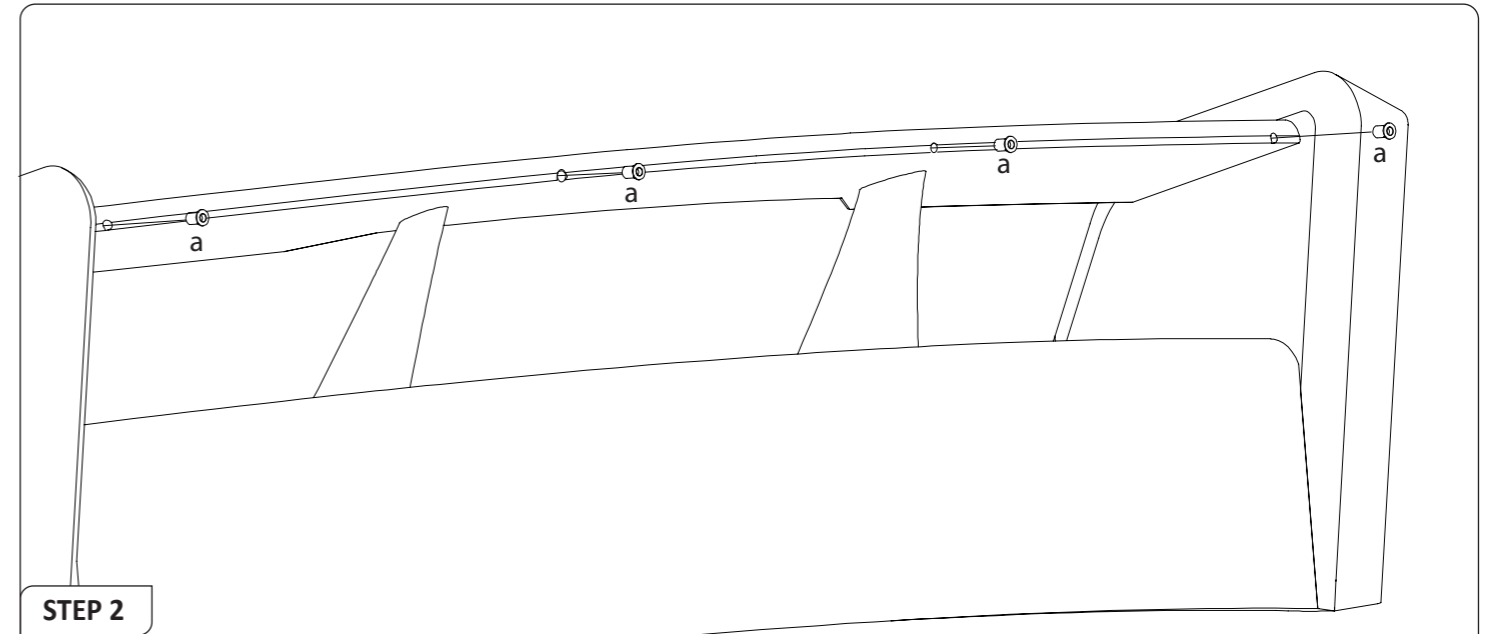

STEP 2

- Insert rubber nuts (a.) into drilled out holes

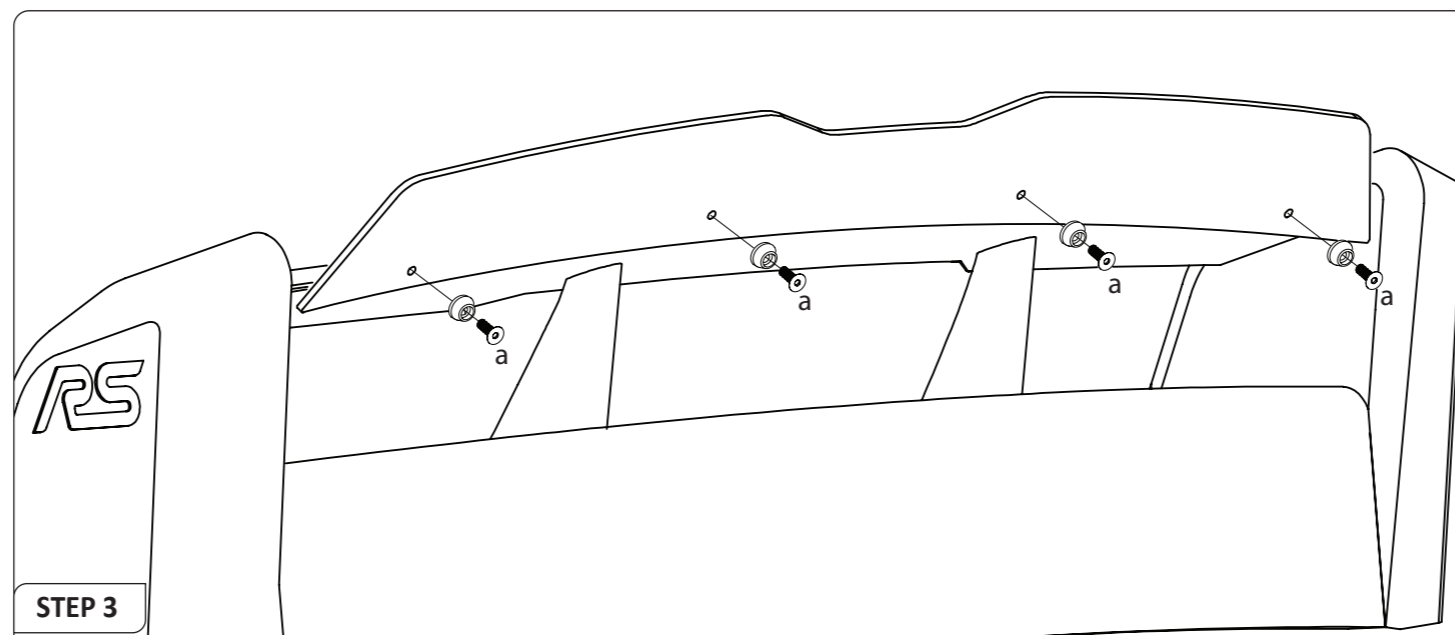

STEP 3

- Using the installed rubber nuts, screw spoiler extension to OEM spoiler using screws (d.)

FITTING KIT B

a



M3 CAPPING
SCREW
16mm LONG
X 4

PLEASE NOTE:
DRILLING NOT REQUIRED
TO FASTEN TO OEM SPOILER
DO NOT OVERTIGHTEN

FLOW
DESIGNS

FLOW DESIGNS AUSTRALIA
RANK 19 ROAD 159
FACTORY 11
6-7 NICOLE CLOSE
BAYSWATER NORTH
VIC. 3183



TERMS AND CONDITIONS : MISUSE OF GOODS
This Product application is not intended for public road registered vehicles within Australia. Regulations may vary from Countries outside of Australia. Please check your Country's and State's road regulations before installing on a vehicle intended for public road use.
Flow Designs Australia PTY LTD will not be liable for any liabilities in relation to any use of the goods other than in strict accordance with the Company's instructions and for the purpose and application for which the goods were supplied by the Company.
The Client undertakes with the Company:
• That it will acquaint itself with the requirements of all relevant government or statutory and other authorities, bodies or corporations relating to the goods and/or services and to the applications to which the goods and/or services are to be put;
• That at all times while the goods are in its possession or under its control it will comply with such requirements;
• That it will procure that any purchaser of goods from it will also acquaint itself with, and will comply with, such requirements;
• That it will indemnify the Company against any liability resulting from a breach of any such requirements.
www.flowdesignsaustralia.com