

# FITTING DIAGRAM

## FORD MK3.5 FOCUS ST: FRONT SPLITTER

### INSTALLATION AND FITTING SERVICES

If you are having any difficulties please seek professional advise from the listed International and Domestic Authorised Dealers on our website.

[www.flowdesignsaustralia.com](http://www.flowdesignsaustralia.com)

# BUMPER REMOVAL REQUIRED

### FITTING KIT

**a**

**M6 BOLT  
40mm LONG**

**X 2**

PLEASE NOTE:  
DRILLING NOT REQUIRED  
TO FASTEN TO BUMPER  
DO NOT OVERTIGHTEN

**b**

**M6 BOLT  
30mm LONG**

**X 4**

PLEASE NOTE:  
DRILLING REQUIRED  
TO FASTEN TO BUMPER  
DO NOT OVERTIGHTEN

**c**

**M6 BOLT  
25mm LONG**

**X 2**


PLEASE NOTE:  
DRILLING NOT REQUIRED  
TO FASTEN TO BUMPER  
DO NOT OVERTIGHTEN

**d**

**OEM UNDERTRAY  
BRACKETS**

**X 1**

PLEASE NOTE:  
DRILLING NOT REQUIRED  
TO FASTEN TO BUMPER  
DO NOT OVERTIGHTEN

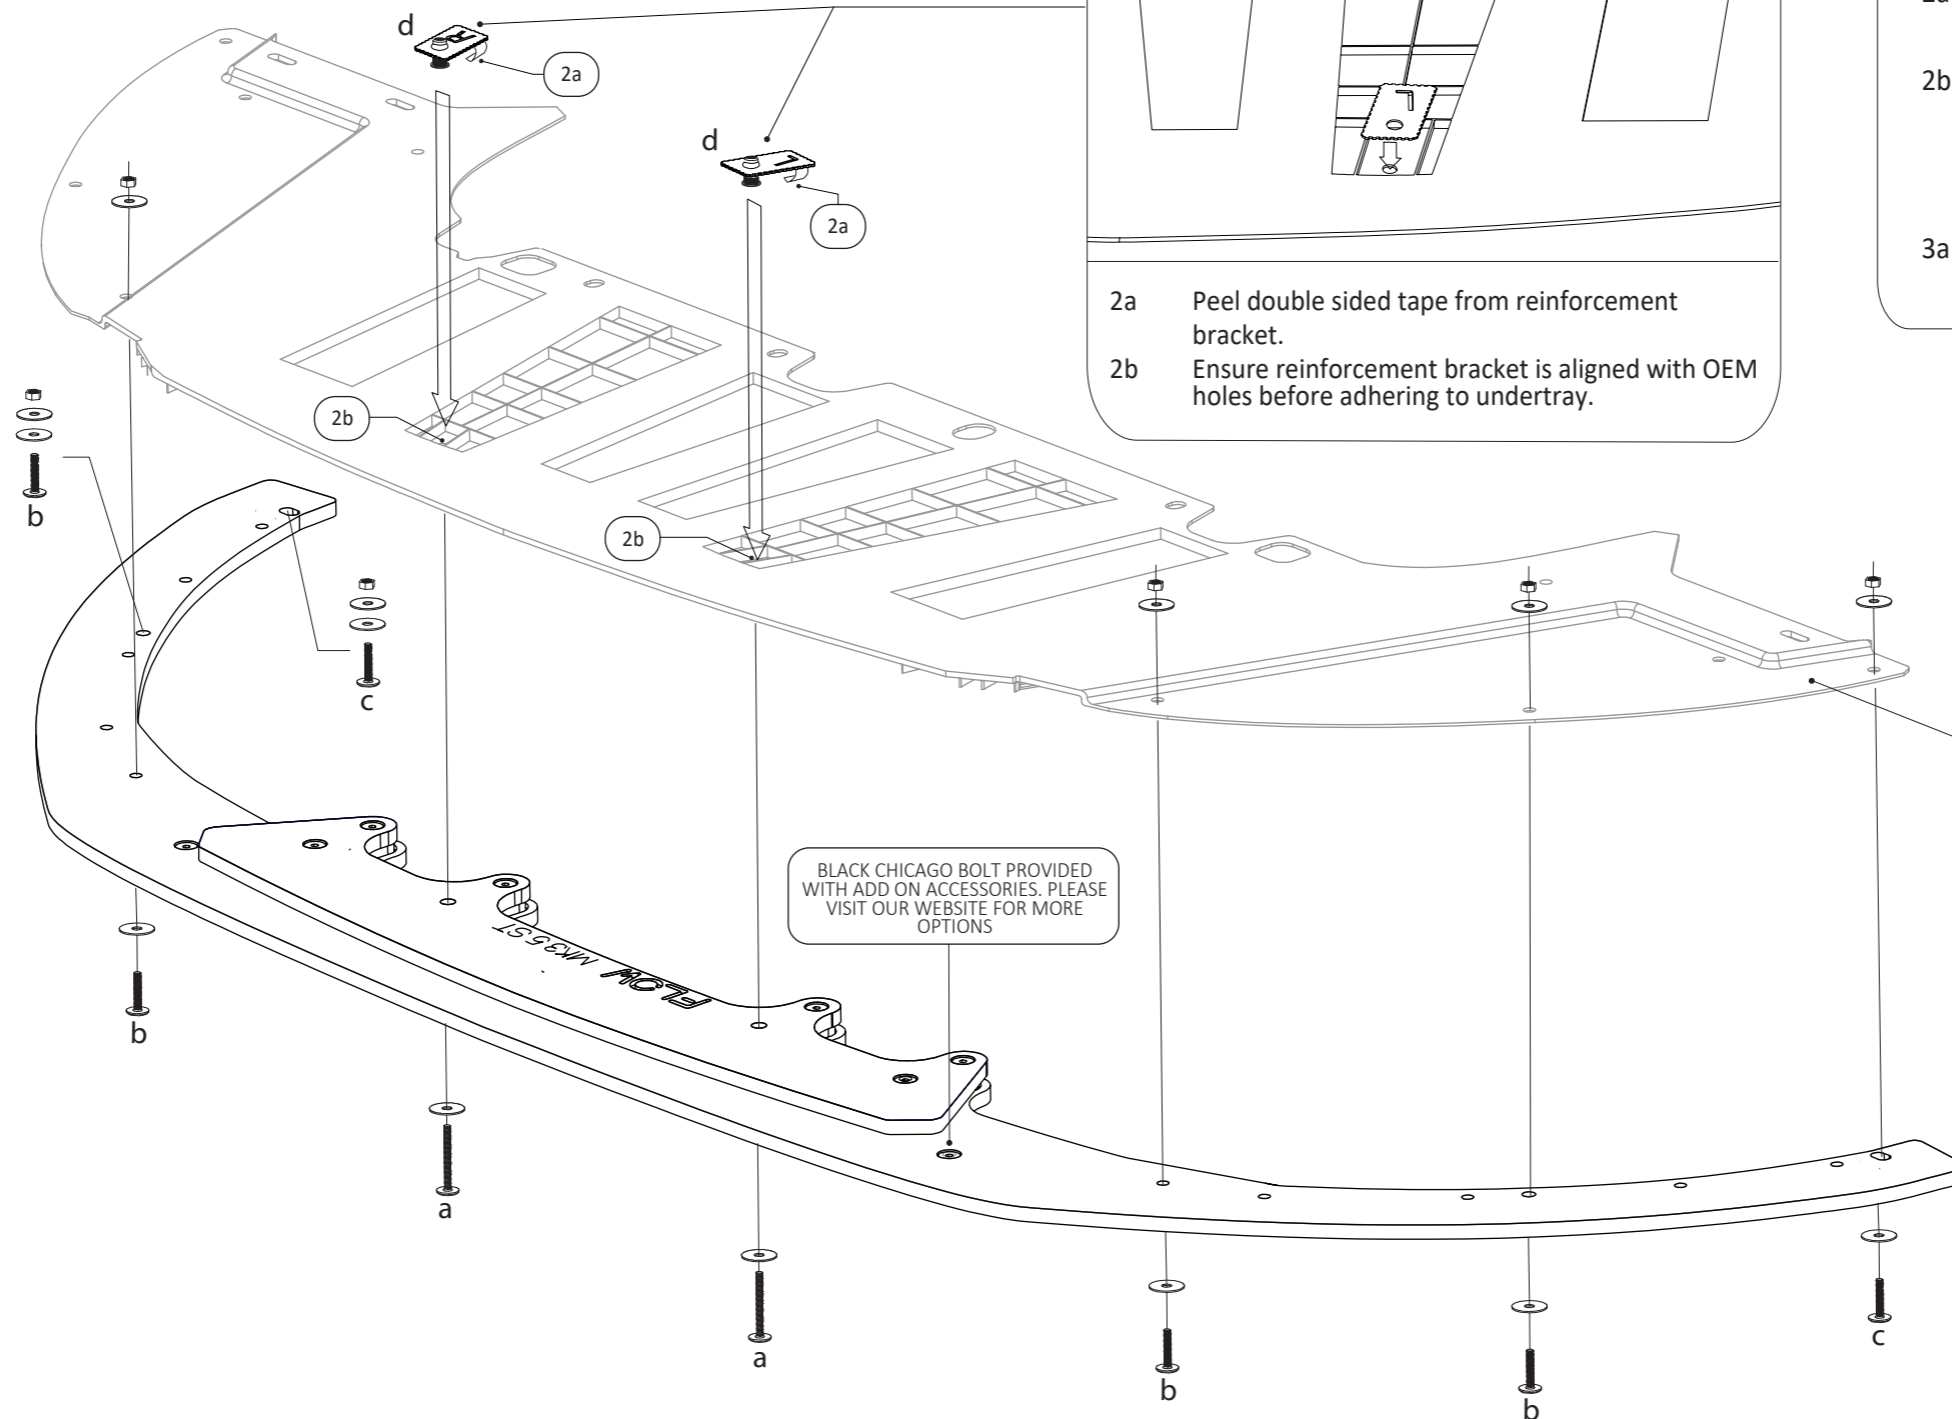

### HANDY HINTS

**2a** Peel double sided tape from reinforcement bracket.

**2b** Ensure reinforcement bracket is aligned with OEM holes before adhering to undertray.

### HANDY HINTS

- 1a Remove bumper.
- 1b Remove scrivenets (plastic clips) to detach undertray from bumper.
- 2a Peel double sided tape from reinforcement bracket.
- 2b Ensure reinforcement bracket is aligned with OEM holes before adhering to under tray. Push bracket into corresponding, slot ensuring a tight fit
- 3a Realign undertray to bumper and install front splitter using fitting kit aprovided.

OEM UNDERTRAY  
SUPPLIED WITH YOUR BUMPER

**FLOW** DESIGNS

FLOW DESIGNS AUSTRALIA  
ABN - 99 605 842 199  
FACTORY 11  
8-7 NICOLE CLOSE  
BAYSWATER NORTH  
VIC. 3153

DESIGNED AND MANUFACTURED IN AUSTRALIA

**TERMS AND CONDITIONS : MISUSE OF GOODS**

By taking possession of this Flow Designs Australia product, you (the buyer) agree that you have read, understood and will comply with the following disclaimer:

- This product may not be suitable for road use in your area. We cannot be held liable for any penalties or infringements that may occur after installing any of our products.
- We cannot guarantee that this product will comply with subsequent aftermarket products you have applied to your vehicle.
- It is not legal to fit parts onto a road registered vehicle unless it carries and meets the design rules and public road regulations of your area, region and/or country.
- We do make our best effort to consider safety when designing our products, we want the scene to be a safe place for everyone!

This disclaimer absolves us (Flow Designs Australia) of any and all liability for breaches to any requirement as a result of installation of our products.

[www.flowdesignsaustralia.com](http://www.flowdesignsaustralia.com)