FITTING DIAGRAM

HOLDEN VE COMMODORE SEDAN & WAGON - SERIES 1 & SERIES 2:

REAR DIFFUSER + FLOW-LOCK FINS


INSTALLATION AND FITTING SERVICES

If you are having any difficulties please seek professional advice from the listed International and Domestic Authorised Dealers on our website.

www.flowdesignsaustralia.com


BUMPER REMOVAL NOT REQUIRED





- · Align FLOW-LOCK Fins to their corresponding slots.
- Please ensure to allocate the correct FLOW-LOCK Fin to the correct corresponding slot (L1 into L1 slot, R1 into R1 slot etc.)
- Ensure textured side of fin is facing out from opposing fin
- · Check both top and bottom locking tabs have securely seated.

Please Note: Once fins have been locked into position, they will be difficult to remove.

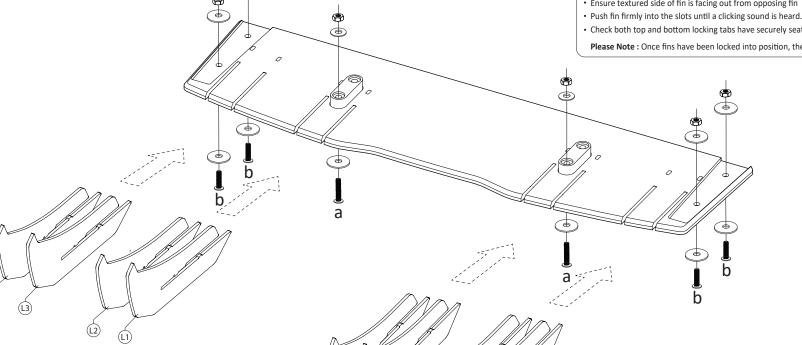

FITTING KIT



0

PLEASE NOTE: DRILLING REQUIRED TO FASTEN TO BUMPER PLEASE USE 8mm DRILL BI

3 0

M6 BOLT 25mm LONG

X4

PLEASE NOTE: DRILLING REQUIRED TO FASTEN TO BUMPER PLEASE USE 8mm DRILL BIT











