

# FITTING DIAGRAM

HOLDEN VE COMMODORE SEDAN & WAGON - SERIES 1 & SERIES 2:  
REAR WINGLETS


INSTALLATION AND FITTING SERVICES

If you are having any difficulties please seek professional advice from the listed  
International and Domestic Authorised Dealers on our website.

[www.flowdesignsaustralia.com](http://www.flowdesignsaustralia.com)

**BUMPER REMOVAL  
NOT REQUIRED**

**PLEASE NOTE: FITTING KIT IS SUPPLIED WITH SPATS ONLY**

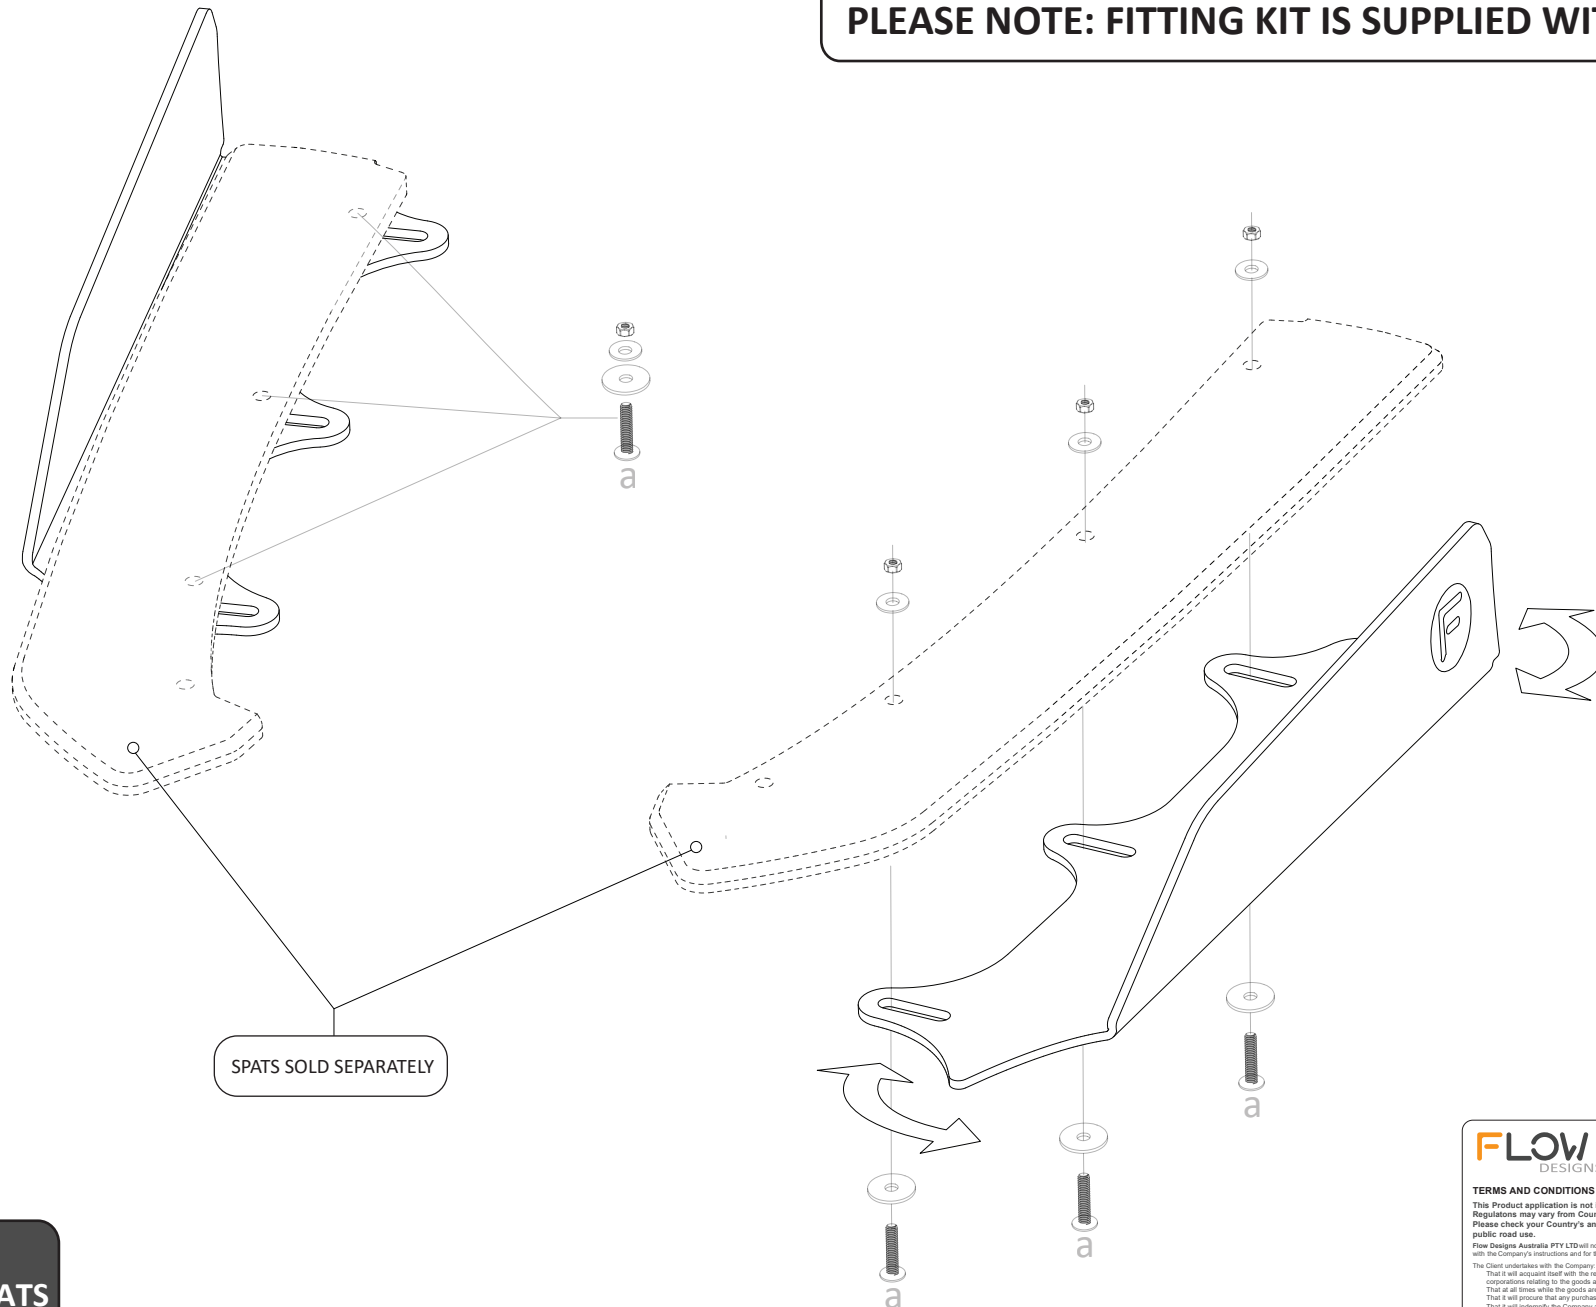

SPATS SOLD SEPARATELY

**FITTING KIT  
SUPPLIED WITH SPATS**

**FLOW**  
DESIGNS

FLOW DESIGNS AUSTRALIA  
ABN: 88 602 822 100  
30 LONGSTAFF RD  
SHEPPARTON  
VIC 3153

DESIGNED AND MANUFACTURED IN AUSTRALIA

**TERMS AND CONDITIONS : MISUSE OF GOODS**

This Product application is not intended for public road registered vehicles within Australia. Regulations may vary from Countries outside of Australia. Please check your Country's and State's road regulations before installing on a vehicle intended for public road use.

Flow Designs Australia PTY LTD will not be liable for any liabilities in relation to any use of the goods other than in strict accordance with the Company's Instructions and for the purpose and application for which the goods were supplied by the Company.

The Client undertakes with the Company

That it will acquaint itself with the requirements of all relevant government or statutory and other authorities, bodies or corporations relating to the goods and/or services and to the applications to which the goods and/or services are to be put. That at all times while the goods are in its possession or under its control it will comply with such requirements. That it will procure that any purchaser of goods from it will also acquaint itself with, and will comply with, such requirements. That it will indemnify the Company against any liability resulting from a breach of any such requirements.

[www.flowdesignsaustralia.com](http://www.flowdesignsaustralia.com)