## FITTING DIAGRAM

HOLDEN VE COMMODORE SERIES 1 & SERIES 2: FRONT BOLT- ONS

### INSTALLATION AND FITTING SERVICES

If you are having any difficulties please seek professional advice from the listed International and Domestic Authorised Dealers on our website.

www.flowdesignsaustralia.com

# **BUMPER REMOVAL NOT REQUIRED**


## **CONFIGURATION 1**

FRONT EXTENSIONS ONLY

# BLACK CHICAGO BOLT


## **CONFIGURATION 2**

FRONT WINGLETS ONLY

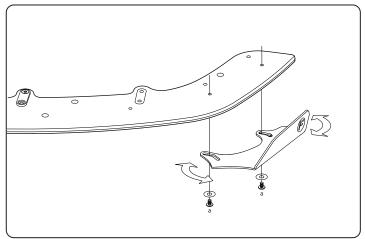

## **CONFIGURATION 3**

FRONT EXTENSIONS AND WINGLETS

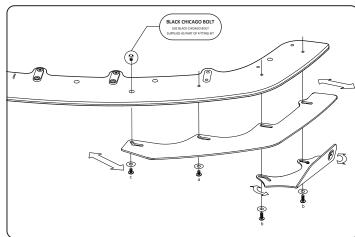

Insert bolts loosely into allocated brass thread locations. Slide extensions in and out to your liking. Use a 4mm hex key to hand tighten.

**PLEASE NOTE**: DO **NOT** OVERTIGHTEN - These bolts do not need to be very tight.

- Insert bolts loosely into allocated brass thread locations.
- · Slide and pivot winglets to your liking.
- · Use a 4mm hex key to hand tighten.

**PLEASE NOTE**: DO **NOT** OVERTIGHTEN - These bolts do not need to be very tight.

- Insert bolts loosely into allocated brass thread locations.
- · Slide and pivot extensions and winglets to your liking.
- · Use a 4mm hex key to hand tighten.

PLEASE NOTE: DO NOT OVERTIGHTEN - These bolts do not need to be very tight.

# **FITTING KIT**



