

FITTING DIAGRAM

HOLDEN VE / VF COMMODORE SEDAN & WAGON - SERIES 1 & SERIES 2:
SIDE SPLITTERS

INSTALLATION AND FITTING SERVICES

If you are having any difficulties please seek professional advice from the listed International and Domestic Authorised Dealers on our website.

www.flowdesignsaustralia.com


**SIDE SKIRT REMOVAL
NOT REQUIRED**

HANDY HINT

Line up front and rear back edges of the Flow Designs side splitter to the start of the stock side skirt rectangular clip recess.

HANDY HINT

For bolts (a.), use an 8mm drill bit to drill a pilot hole, then enlarge hole using an 11mm drill bit

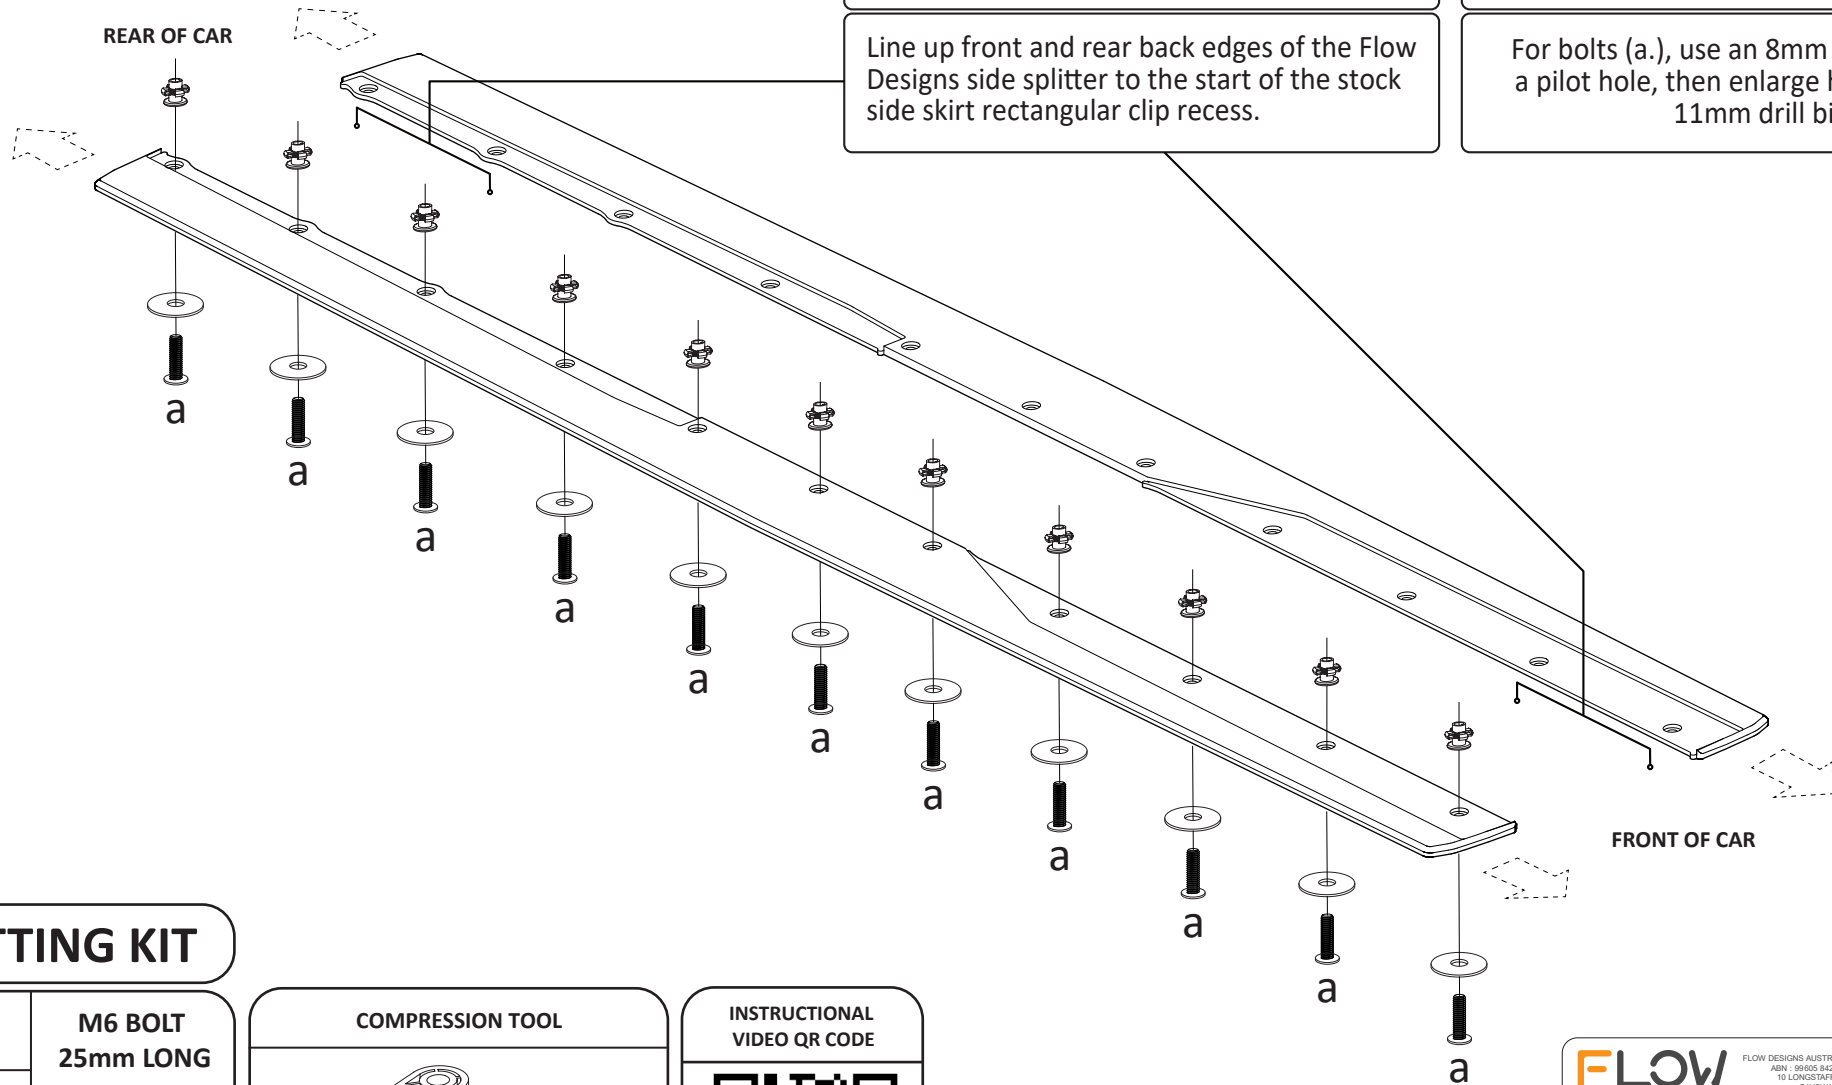

FITTING KIT

a

**M6 BOLT
25mm LONG**

X 22




JACKNUT
OD 25



**PLEASE NOTE:
DRILLING REQUIRED
TO FASTEN TO SIDE SKIRT
PLEASE USE 8mm DRILL BIT
& ENLARGE WITH 11mm
DRILL BIT**

COMPRESSION TOOL

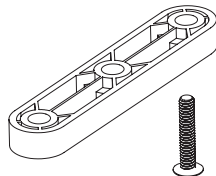

3 HOLE AEROSPACER x 1

30mm BOLT x 1

INSTRUCTIONAL VIDEO QR CODE



TERMS AND CONDITIONS : MISUSE OF GOODS

By taking possession of this Flow Designs Australia product, you (the buyer) agree that you have read, understood and will comply with the following disclaimer:

- This product may not be suitable for road use in your area. We cannot be held liable for any penalties or infringements that may occur when installing any of our products.
- We cannot guarantee that this product will comply with subsequent aftermarket products you have applied to your vehicle.
- It is not legal to fit parts onto a road registered vehicle unless it carries and meets the design rules and public road regulations of your area, region and/or country.
- We do make our best effort to consider safety when designing our products, we want the scene to be a safe place for everyone!

This disclaimer absolves us (Flow Designs Australia) of any and all liability for breaches to any requirement as a result of installation of our products.

www.flowdesignsaustralia.com