FITTING DIAGRAM

HOLDEN VE / VF COMMODORE UTE- SERIES 1 & SERIES 2: REAR DIFFUSER + FLOW - LOCK DIFFUSER FINS


INSTALLATION AND FITTING SERVICES

If you are having any difficulties please seek professional advice from the listed International and Domestic Authorised Dealers on our website.

www.flowdesignsaustralia.com


BUMPER REMOVAL NOT REQUIRED





- Align FLOW-LOCK Fins to their corresponding slots.
- Please ensure to allocate the correct FLOW-LOCK Fin to the correct corresponding slot (L1 into L1 slot, R1 into R1 slot etc.)

PleaseNote:Once fins have been locked into position, they will be difficult to remove.

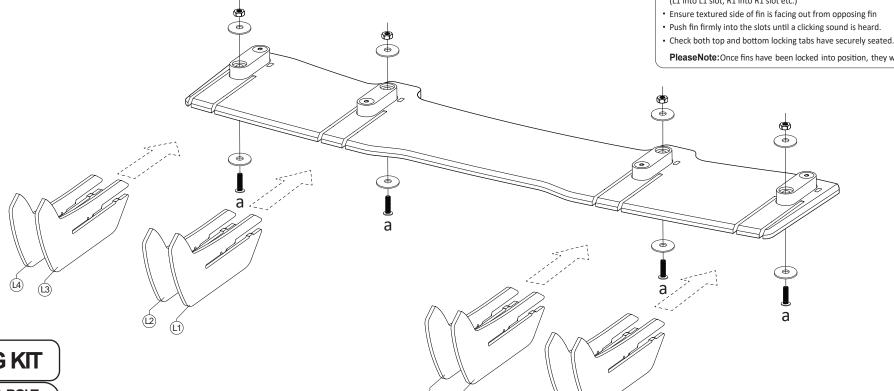

FITTING KIT



M6 BOLT 40mm LONG

X4

PLEASE NOTE: DRILLING REQUIRED TO FASTEN TO BUMPER PLEASE USE 8mm DRILL BIT









