

FITTING DIAGRAM

HOLDEN VF COMMODORE SERIES 1 & 2: FRONT SPLITTER INSTRUCTIONS

INSTALLATION AND FITTING SERVICES

If you are having any difficulties please seek professional advice from the listed International and Domestic Authorised Dealers on our website.

www.flowdesignsaustralia.com

BUMPER REMOVAL NOT REQUIRED



PLEASE NOTE
FOR ADD ON ACCESSORIES

DO NOT
OVERTIGHTEN FASTENERS
INTO BRASS FITTINGS

HAND TIGHTEN ONLY



FLOW
DESIGNS

FLOW DESIGNS AUSTRALIA
ABN : 99 605 842 199
10 LONGSTAFF RD
BAYSWATER
VIC, 3153




TERMS AND CONDITIONS: MISUSE OF GOODS

By taking possession of the Flow Designs Australia product, you (the buyer) agree that you have read, understood and will comply with the following disclaimer:

- This product may not be suitable for road use in your area. We cannot be held liable for any penalties or infringements that may occur after installing any of our products.
- We cannot guarantee that this product will comply with all subsequent aftermarket products you have applied to your vehicle.
- It is not legal to fit parts onto a road registered vehicle unless it carries and meets the designs rules and public road regulations of your area, region and/or country.
- We do our best effort to consider safety when designing our products. We want the scene to be a safe place for everyone!


www.flowdesignsaustralia.com

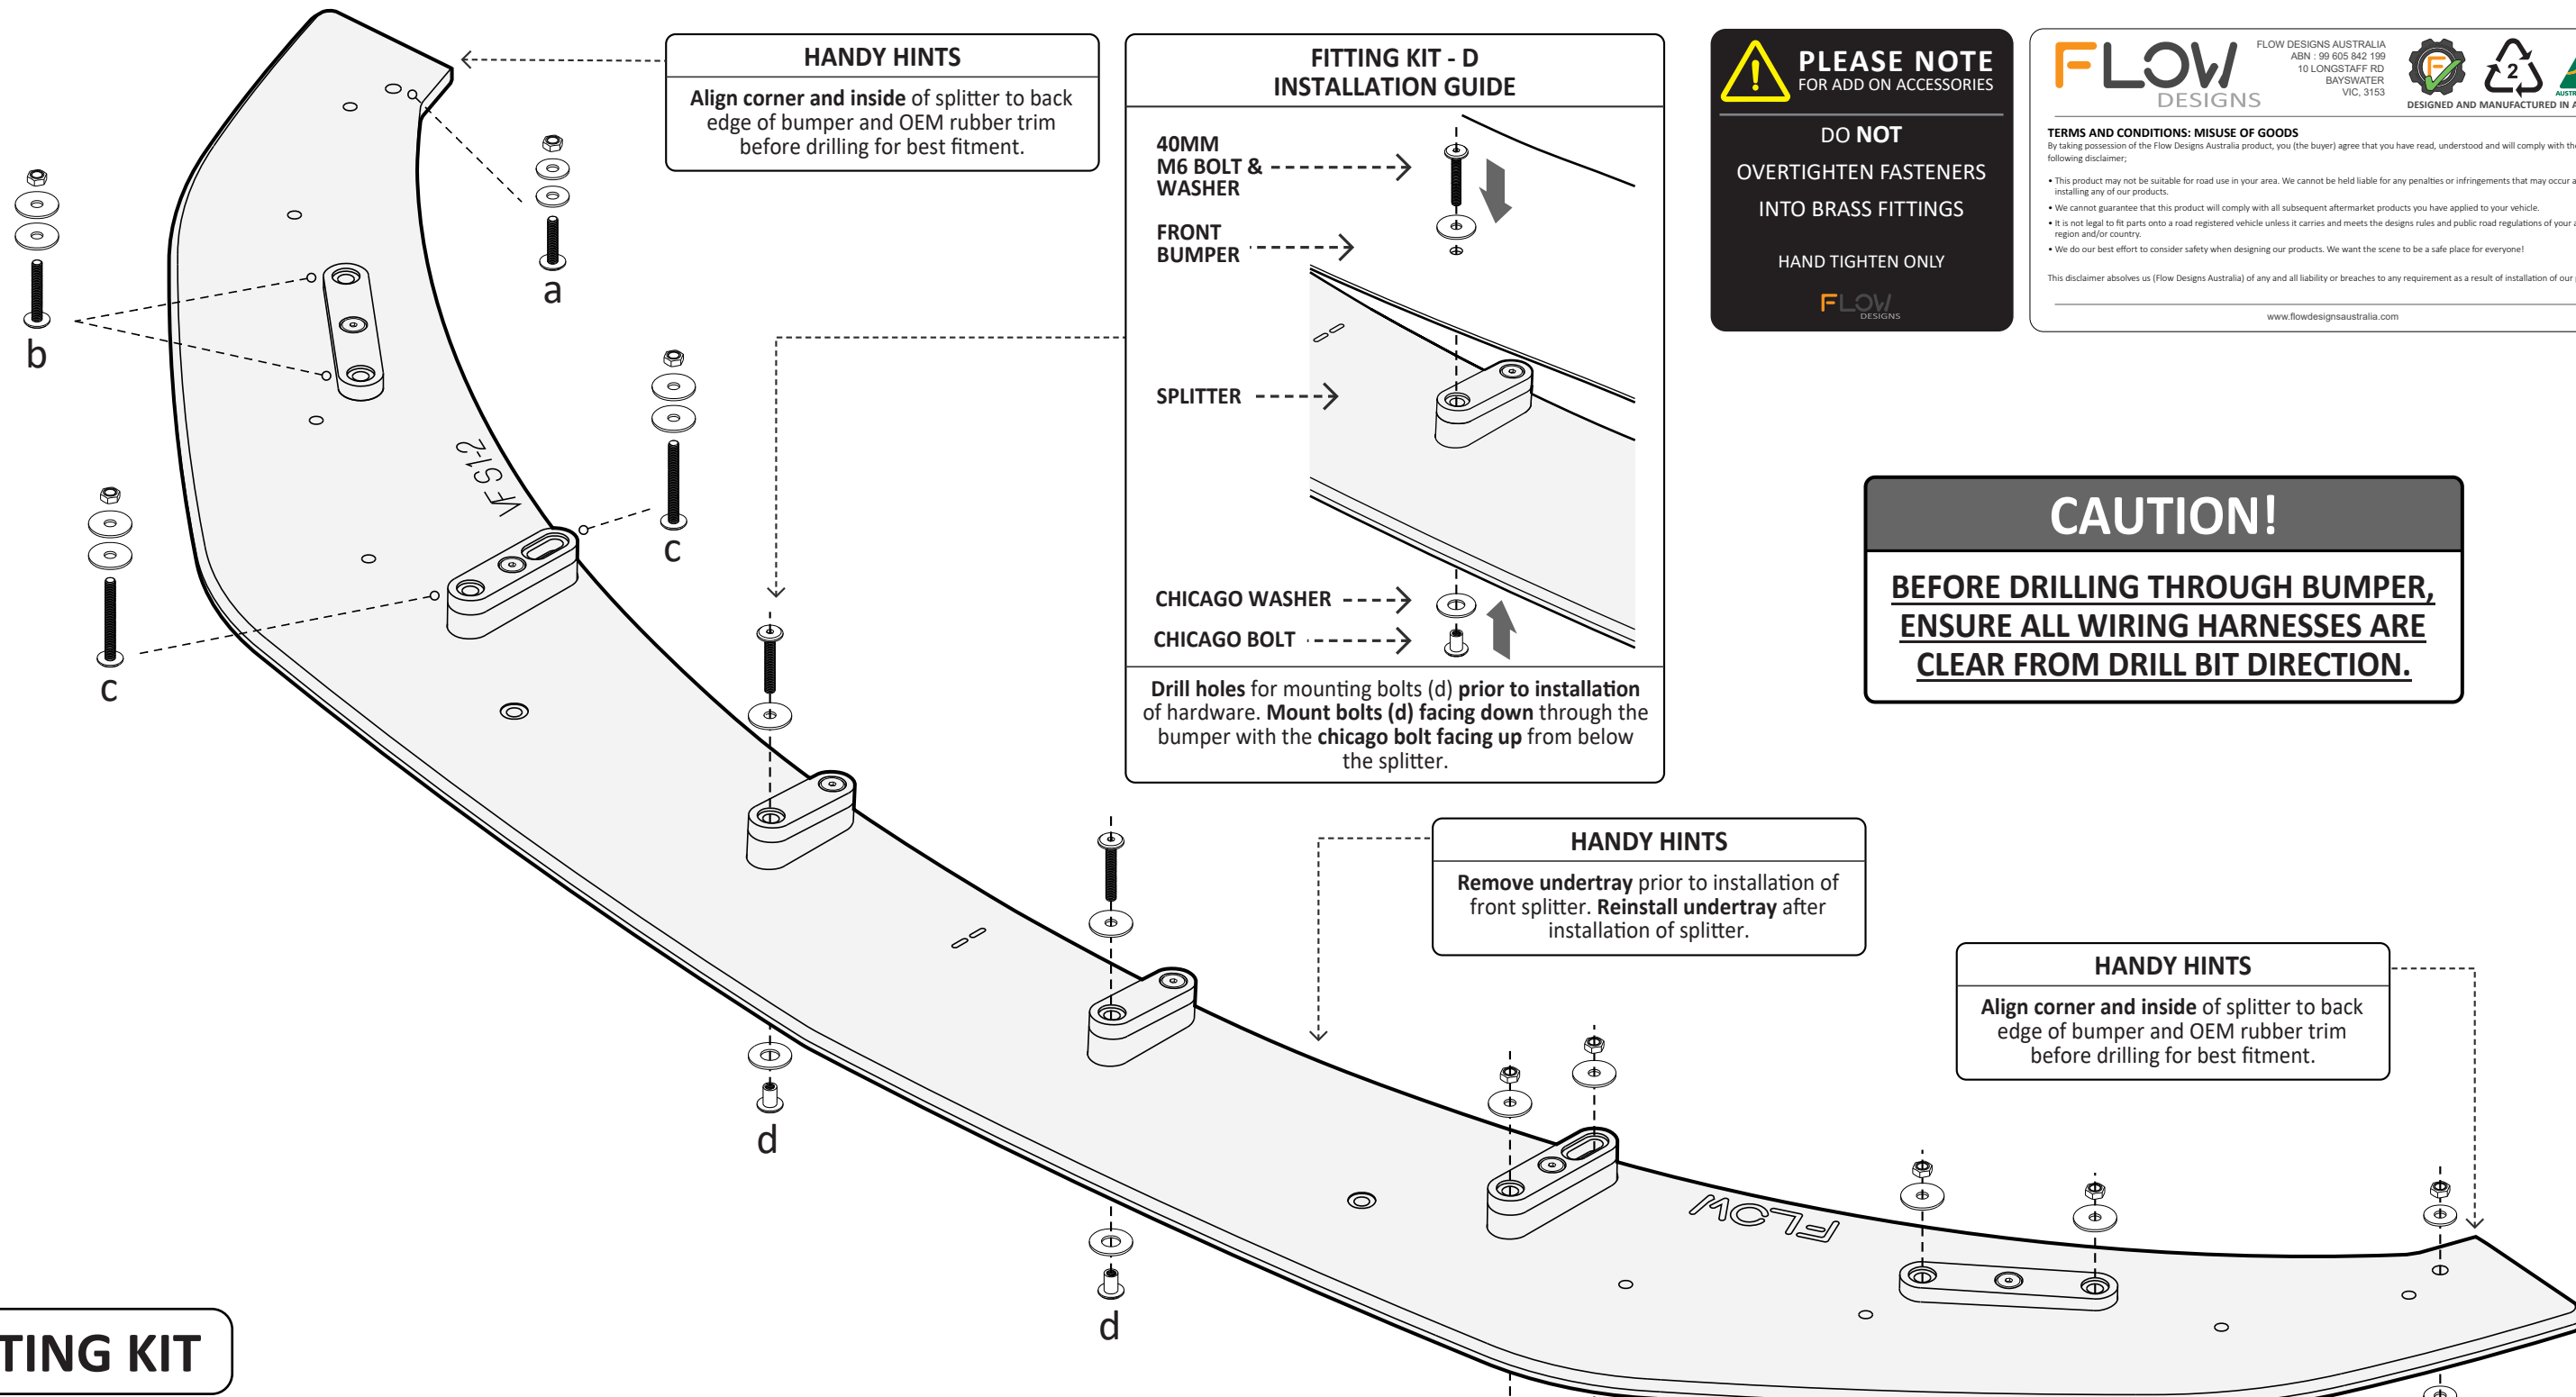

HANDY HINTS

Align corner and inside of splitter to back edge of bumper and OEM rubber trim before drilling for best fitment.

FITTING KIT - D INSTALLATION GUIDE

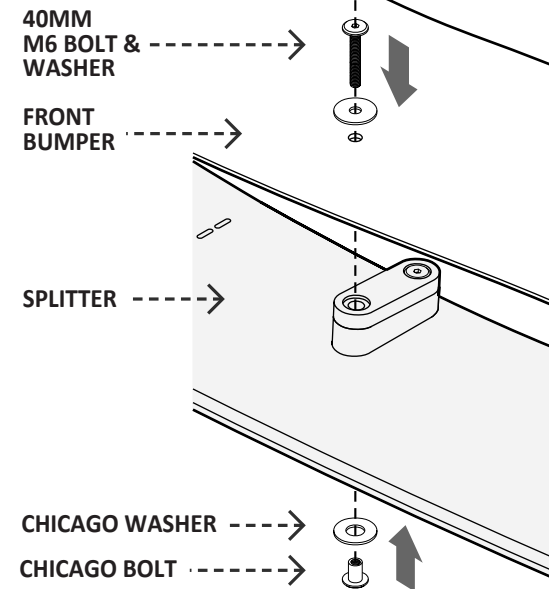

Drill holes for mounting bolts (d) prior to installation of hardware. Mount bolts (d) facing down through the bumper with the **chicago bolt facing up** from below the splitter.

HANDY HINTS

Remove undertray prior to installation of front splitter. Reinstall undertray after installation of splitter.

HANDY HINTS

Align corner and inside of splitter to back edge of bumper and OEM rubber trim before drilling for best fitment.

CAUTION!
BEFORE DRILLING THROUGH BUMPER,
ENSURE ALL WIRING HARNESSES ARE
CLEAR FROM DRILL BIT DIRECTION.

FITTING KIT

<p>a</p>	<p>M6 BOLT 30mm LONG</p> <p>X 2</p> <p>PLEASE NOTE: DRILLING REQUIRED TO FASTEN TO BUMPER PLEASE USE 8mm DRILL BIT</p>
<p>b</p>	<p>M6 BOLT 40mm LONG</p> <p>X 4</p> <p>PLEASE NOTE: DRILLING REQUIRED TO FASTEN TO BUMPER PLEASE USE 8mm DRILL BIT</p>
<p>c</p>	<p>M6 BOLT 55mm LONG</p> <p>X 4</p> <p>PLEASE NOTE: DRILLING REQUIRED TO FASTEN TO BUMPER PLEASE USE 8mm DRILL BIT</p>
<p>d</p>	<p>M6 BOLT 40mm LONG</p> <p>X 2</p> <p>PLEASE NOTE: DRILLING REQUIRED TO FASTEN TO BUMPER MOUNT BOLT FROM TOP FACING DOWN PLEASE USE 8mm DRILL BIT</p>