

# FITTING DIAGRAM

## HONDA ACCORD CU2 MODULO: SIDE SPLITTER INSTRUCTIONS

### INSTALLATION AND FITTING SERVICES

If you are having any difficulties please seek professional advice from the listed International and Domestic Authorised Dealers on our website.

www.flowdesignsaustralia.com

## SIDE SKIRT REMOVAL NOT REQUIRED

### HANDY HINTS

Align back edge of side splitter with OEM side skirt and mudguard.

### IMPORTANT INSTALLATION NOTE:

- Prior to installation of side splitters, ensure OEM Modulo side skirt is securely fastened to vehicle.
- If OEM side skirt is loose, re-fasten side skirt using new adhesive (not supplied) or by other means.
- Optional reinforcement screws are provided to secure underside of OEM side skirt after installation of Flow Designs side splitters.
- Fasten optional screws through plastic OEM side skirt and into metal sill.


### HANDY HINTS

Check OEM side skirt is adequately secured to body of vehicle prior to installation of side splitters

## FITTING KIT

**a** M6 BOLT  
25mm LONG


**X 20**

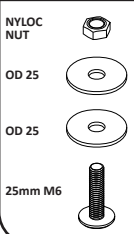

PLEASE NOTE:  
DRILLING REQUIRED  
TO FASTEN TO SIDE SKIRT  
PLEASE USE 8mm  
DRILL BIT

**b** M6 BOLT  
25mm LONG

**X 2**

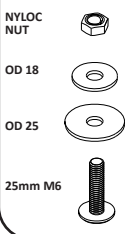


PLEASE NOTE:  
DRILLING REQUIRED  
TO FASTEN TO SIDE SKIRT  
PLEASE USE 8mm  
DRILL BIT

### OPTIONAL

**c** 10G METAL  
SELF DRILLING SCREW  
22mm LONG

**X 8**

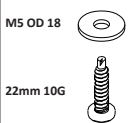

PLEASE NOTE:  
OPTIONAL SCREWS  
CAN BE USED TO  
REINFORCE SIDE SKIRT  
TO METAL SILL OF CAR



**PLEASE NOTE**  
FOR ADD ON ACCESSORIES

**DO NOT**  
OVERTIGHTEN FASTENERS  
INTO BRASS FITTINGS

HAND TIGHTEN ONLY



**FLOW**  
DESIGNS

FLOW DESIGNS AUSTRALIA  
ABN : 99 605 842 199  
10 LONGSTAFF RD  
BAYSWATER  
VIC, 3153



#### TERMS AND CONDITIONS: MISUSE OF GOODS

By taking possession of the Flow Designs Australia product, you (the buyer) agree that you have read, understood and will comply with the following disclaimer:

- This product may not be suitable for road use in your area. We cannot be held liable for any penalties or infringements that may occur after installing any of our products.
- We cannot guarantee that this product will comply with all subsequent aftermarket products you have applied to your vehicle.
- It is not legal to fit parts onto a road registered vehicle unless it carries and meets the design rules and public road regulations of your area, region and/or country.
- We do our best effort to consider safety when designing our products. We want the scene to be a safe place for everyone!

This disclaimer absolves us (Flow Designs Australia) of any and all liability or breaches to any requirement as a result of installation of our products.

www.flowdesignsaustralia.com

### OPTIONAL REINFORCEMENT SCREWS

Optional screws are provided if OEM side skirt require reinforcement. Install self-drilling screws into OEM side skirt after installation of side splitters.

### OPTIONAL REINFORCEMENT SCREWS

Optional screws are provided if OEM side skirt require reinforcement. Install self-drilling screws into OEM side skirt after installation of side splitters.

### HANDY HINTS

For best fitment, align bevel of side splitter with front and back edge of side skirt.

