FITTING DIAGRAM

HONDA FK8 CIVIC TYPE R- FRONT BOLT-ON INSTRUCTIONS

INSTALLATION AND FITTING SERVICES


If you are having any difficulties please seek professional advice from the listed International and Domestic Authorised Dealers on our website.

www.flowdesignsaustralia.com

CONFIGURATION 1 FRONT EXTENSIONS ONLY


CONFIGURATION 2 FRONT WINGLETS ONLY



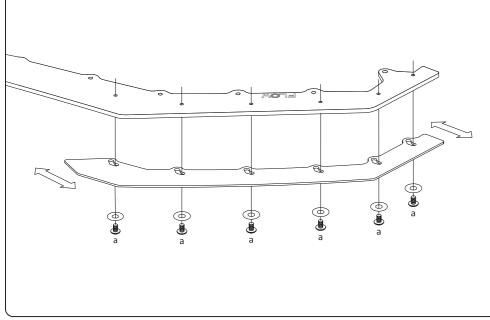


- Insert bolts loosely into allocated brass thread locations.
- Slide extensions in and out to your liking.
- Use a 4mm hex key to hand tighten.


PLEASE NOTE : DO NOT OVERTIGHTEN - These bolts do not need to be very tight.

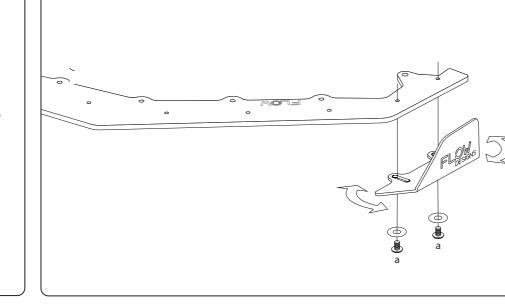

- Insert bolts loosely into allocated brass thread locations.
- Slide and pivot winglets to your liking.
- Use a 4mm hex key to hand tighten.

PLEASE NOTE : DO NOT OVERTIGHTEN - These bolts do not need to be very tight.

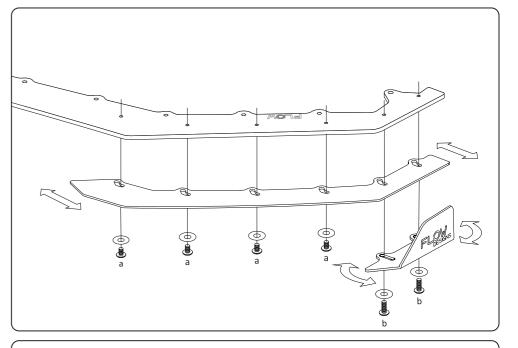

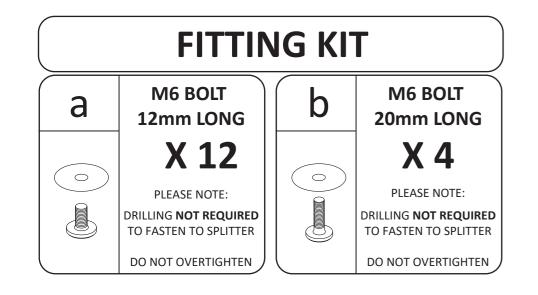



BUMPER REMOVAL NOT REQUIRED

CONFIGURATION 3 FRONT EXTENSIONS AND WINGLETS

 Insert bolts loosely into allocated brass thread locations. Slide and pivot extensions and winglets to your liking. • Use a 4mm hex key to hand tighten.

PLEASE NOTE : DO **NOT** OVERTIGHTEN - These bolts do not need to be very tight.





TERMS AND CONDITIONS : MISUSE OF GOODS

This Product application is not intended for public road reg Regulatons may vary from Countries outide of Australia.

Country's and State's road regul