## **FITTING DIAGRAM** HYUNDAI CN7 N / N-LINE SEDAN: FRONT BOLT-ONS


INSTALLATION AND FITTING SERVICES

If you are having any difficulties please seek professional advice from the listed International and Domestic Authorised Dealers on our website.

www.flowdesignsaustralia.com

## **BUMPER REMOVAL NOT REQUIRED**

## **CONFIGURATION 1 CONFIGURATION 2 CONFIGURATION 3** FRONT EXTENSIONS ONLY FRONT WINGLETS ONLY FRONT EXTENSIONS AND WINGLETS Þ Insert bolts loosely into allocated brass thread locations. Insert bolts loosely into allocated brass thread locations. • Insert bolts loosely into allocated brass thread locations. Slide extensions in and out to your liking. • Slide and pivot extensions and winglets to your liking. Slide and pivot winglets to your liking. Use a 4mm hex key to hand tighten. • Use a 4mm hex key to hand tighten. • Use a 4mm hex key to hand tighten. PLEASE NOTE : DO NOT OVERTIGHTEN - These bolts do not need to be very tight. PLEASE NOTE : DO NOT OVERTIGHTEN - These bolts do not need to be very tight.

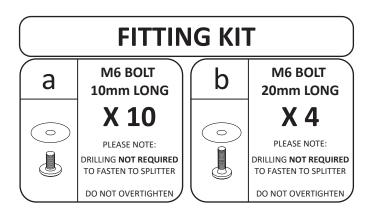





TERMS AND CONDITIONS : MISUSE OF GOODS

This Product application is not intended for public road registered vehicles within Austra Regulatons may vary from Countries outide of Australia

Please check your Country's and State's road regulatons before installi

s are in its possession or under its control it will o chaser of goods from it will also acquaint itself wi iny against any liability resulting from a breach o

PLEASE NOTE : DO NOT OVERTIGHTEN - These bolts do not need to be very tight.