

FITTING DIAGRAM


HYUNDAI CN7 N-LINE SEDAN: REAR SPATS

INSTALLATION AND FITTING SERVICES

If you are having any difficulties please seek professional advice from the listed International and Domestic Authorised Dealers on our website.

www.flowdesignsaustralia.com

BUMPER REMOVAL NOT REQUIRED

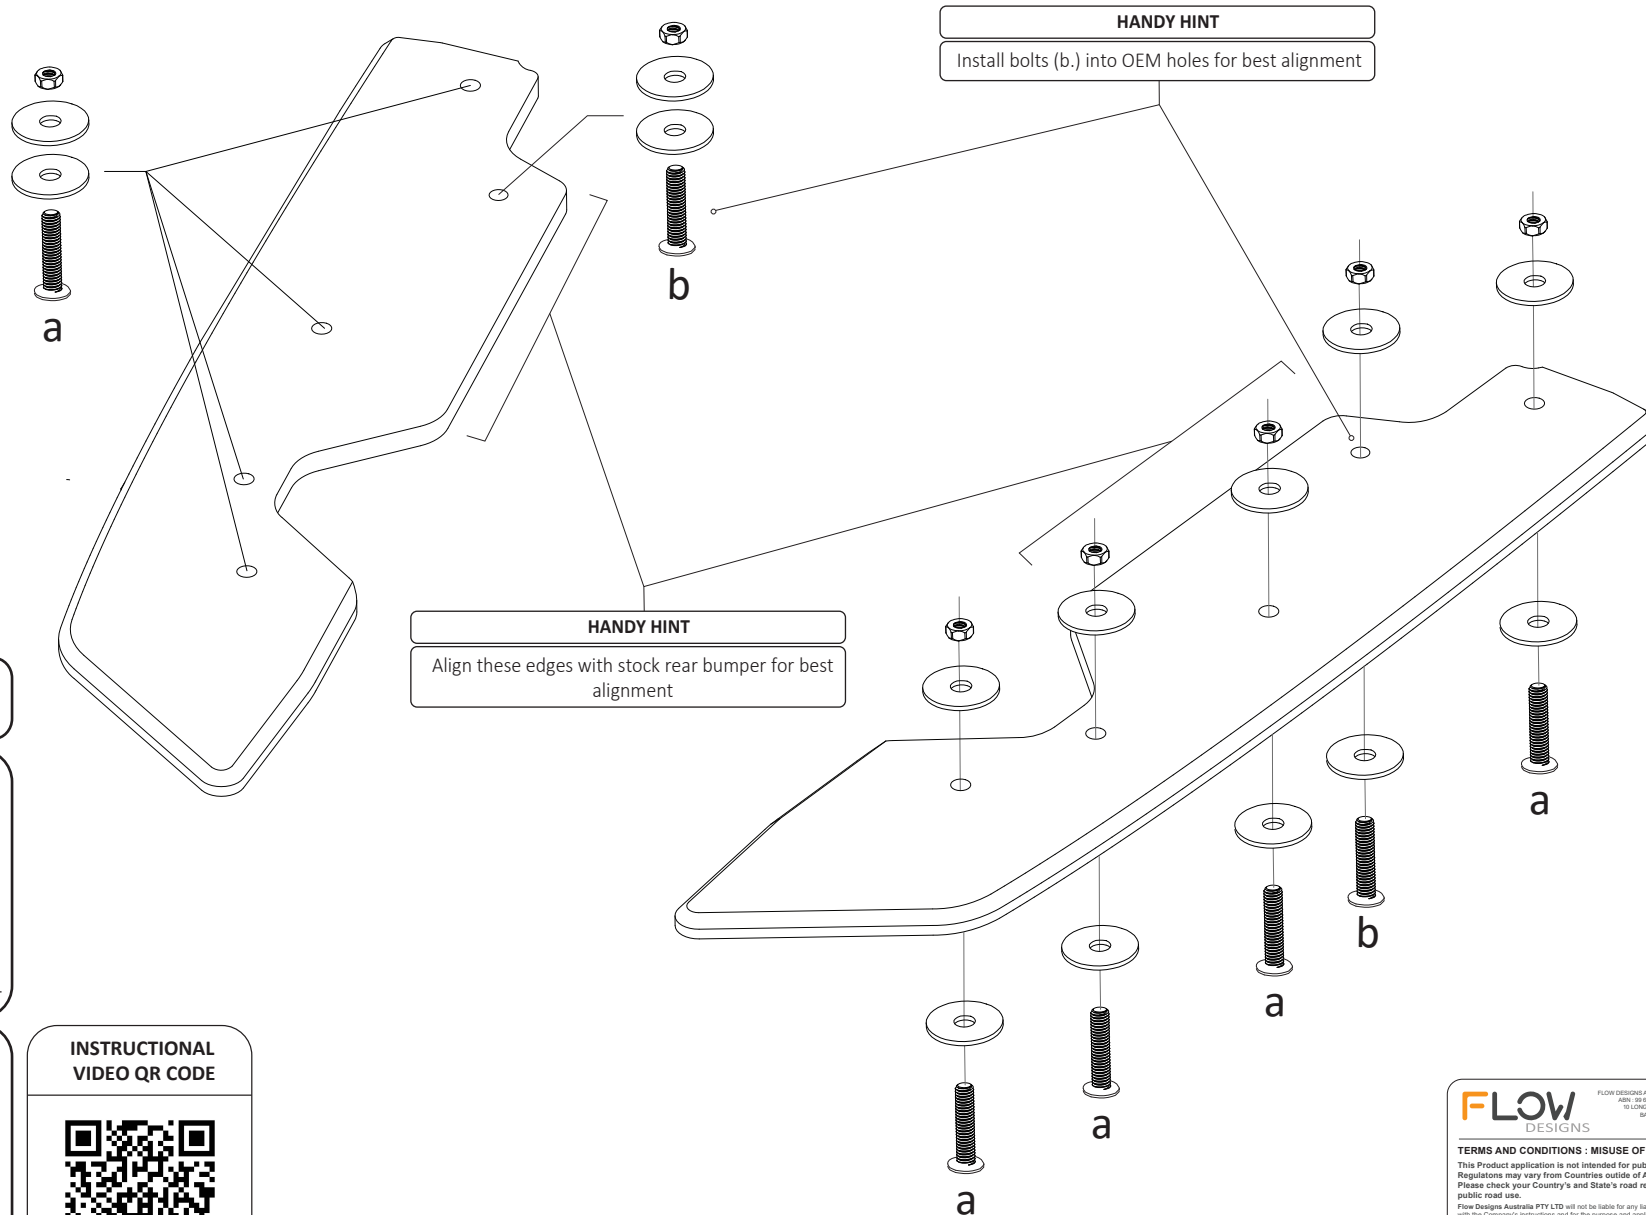

FITTING KIT

a

**M6 BOLT
30mm LONG**

X 8



PLEASE NOTE:
DRILLING REQUIRED
TO FASTEN TO BUMPER
PLEASE USE 8mm DRILL BIT

b

**M6 BOLT
30mm LONG**

X 2



PLEASE NOTE:
DRILLING NOT REQUIRED
TO FASTEN TO BUMPER
USES OEM HOLE

INSTRUCTIONAL
VIDEO QR CODE



FLOW DESIGNS

FLOW DESIGNS AUSTRALIA
ABN: 59 058 842 190
30 LONGSTAFF RD
SAVANNAH
VIC 3155

DESIGNED AND MANUFACTURED IN AUSTRALIA

TERMS AND CONDITIONS : MISUSE OF GOODS

This Product application is not intended for public road registered vehicles within Australia. Regulations may vary from Countries outside of Australia. Please check your Country's and State's road regulations before installing on a vehicle intended for public road use.

Flow Designs Australia PTY LTD will not be liable for any liabilities in relation to any use of the goods other than in strict accordance with the Company's instructions and for the purpose and application for which the goods were supplied by the Company.

The Client undertakes with the Company:

- That it will acquire itself with the requirements of all relevant government or statutory and other authorities, bodies or corporations relating to the goods and/or services and to the applications to which the goods and/or services are to be put;
- That at all times while the goods are in its possession or under its control it will comply with such requirements;
- That it will procure that any purchaser of goods from it will also acquaint itself with, and will comply with, such requirements;
- That it will indemnify the Company against any liability resulting from a breach of any such requirements.

www.flowdesignsaustralia.com