

FITTING DIAGRAM

HYUNDAI CN7 N / N-LINE SEDAN: REAR SPAT WINGLETS

INSTALLATION AND FITTING SERVICES



If you are having any difficulties please seek professional advice from the listed International and Domestic Authorised Dealers on our website.

www.flowdesignsaustralia.com

BUMPER REMOVAL

NOT REQUIRED

PLEASE NOTE: FITTING KIT IS SUPPLIED WITH SPATS ONLY

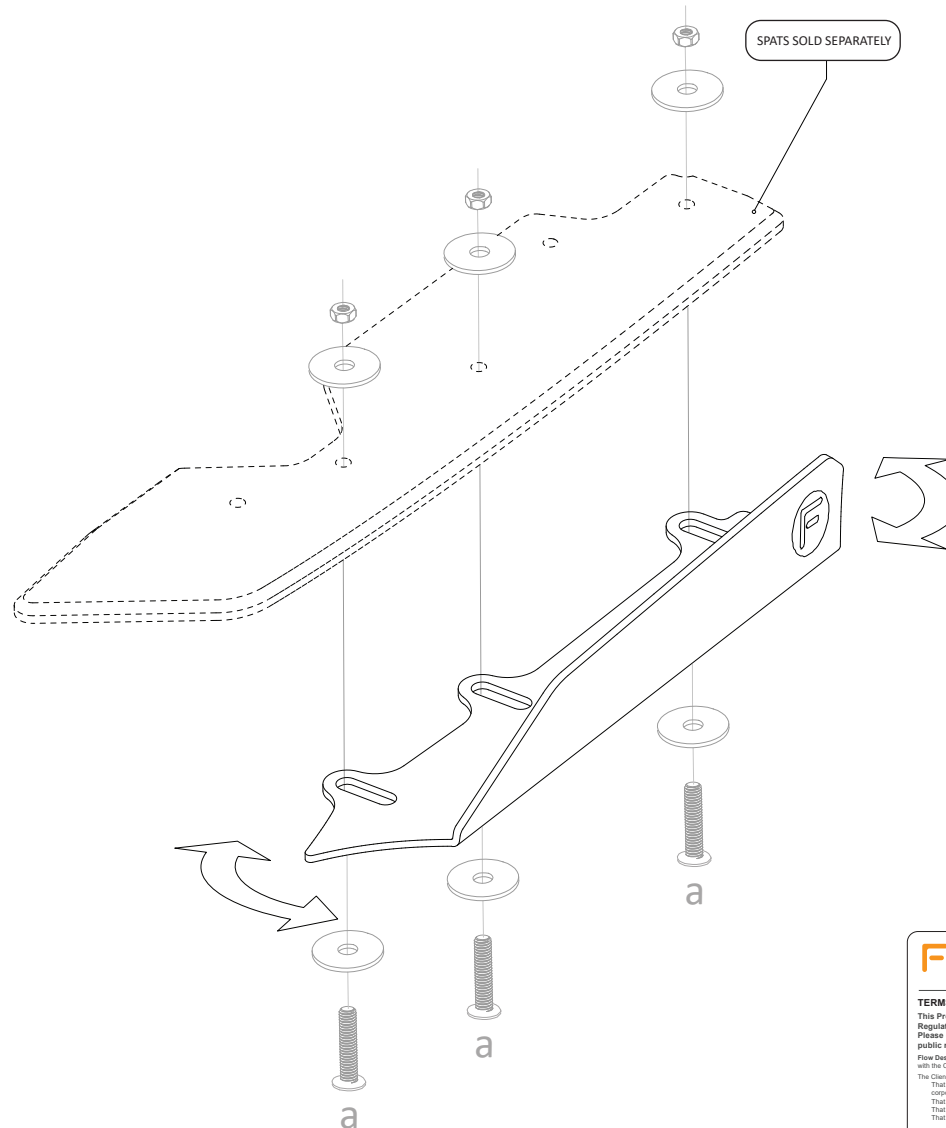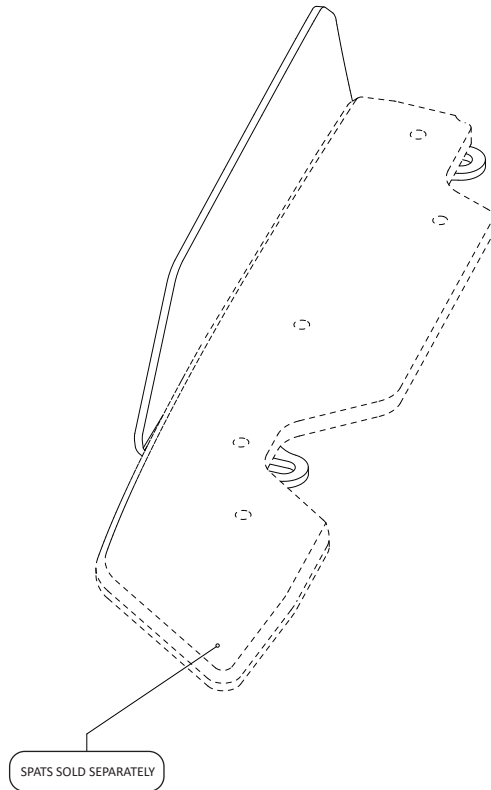

FITTING KIT

(BOLTS USED FOR REAR WINGLETS ARE SUPPLIED WITH SPATS)

a

M6 BOLT
30mm LONG

X 6



PLEASE NOTE:
DRILLING REQUIRED
TO FASTEN TO BUMPER

PLEASE USE 8mm DRILL BIT

FLOW
DESIGNS

FLOW DESIGNS AUSTRALIA
ABN: 58 400 922 150
30 LONGSTAFF RD
SHEPPARTON
VIC 3153



TERMS AND CONDITIONS : MISUSE OF GOODS

This Product application is not intended for public road registered vehicles within Australia. Regulations may vary from Countries outside of Australia. Please check your Country's and State's road regulations before installing on a vehicle intended for public road use.

Flow Designs Australia PTY LTD will not be liable for any liabilities in relation to any use of the goods other than in strict accordance with the Company's Instructions and for the purpose and application for which the goods were supplied by the Company.

The Client undertakes with the Company:

That it will acquaint itself with the requirements of all relevant government or statutory and other authorities, bodies or corporations relating to the goods and/or services and to the applications to which the goods and/or services are to be put.

That at all times while the goods are in its possession or under its control it will comply with such requirements.

That it will ensure that any purchaser of goods from it will also acquaint itself with, and will comply with, such requirements.

That it will indemnify the Company against any liability resulting from a breach of any such requirements.

www.flowdesignsaustralia.com