

HYUNDAI CN7 N SIDE SPLITTER INSTRUCTIONS

i30N SEDAN / ELANTRA N

PLEASE SCAN QR CODE
TO WATCH INSTRUCTIONAL VIDEO
BEFORE INSTALLING



FLOW
DESIGNS



FITTING DIAGRAM

HYUNDAI CN7 N: SIDE SPLITTER INSTRUCTIONS

INSTALLATION AND FITTING SERVICES

If you are having any difficulties please seek professional advice from the listed International and Domestic Authorised Dealers on our website.

www.flowdesignsaustralia.com

SIDE SKIRT REMOVAL NOT REQUIRED

FITTING KIT


a M6 BOLT 25mm LONG X 18




b M6 BOLT 25mm LONG X 2



c BLACK 14g PAN HEAD SCREW 1 1/4" LONG X 4

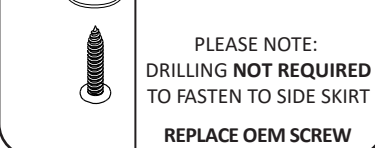


d BLACK 8g SELF TAPPING SCREW 1" LONG X 2

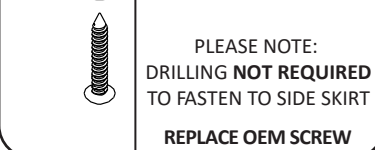

HANDY HINTS

Align back edge of side splitter with OEM side skirt

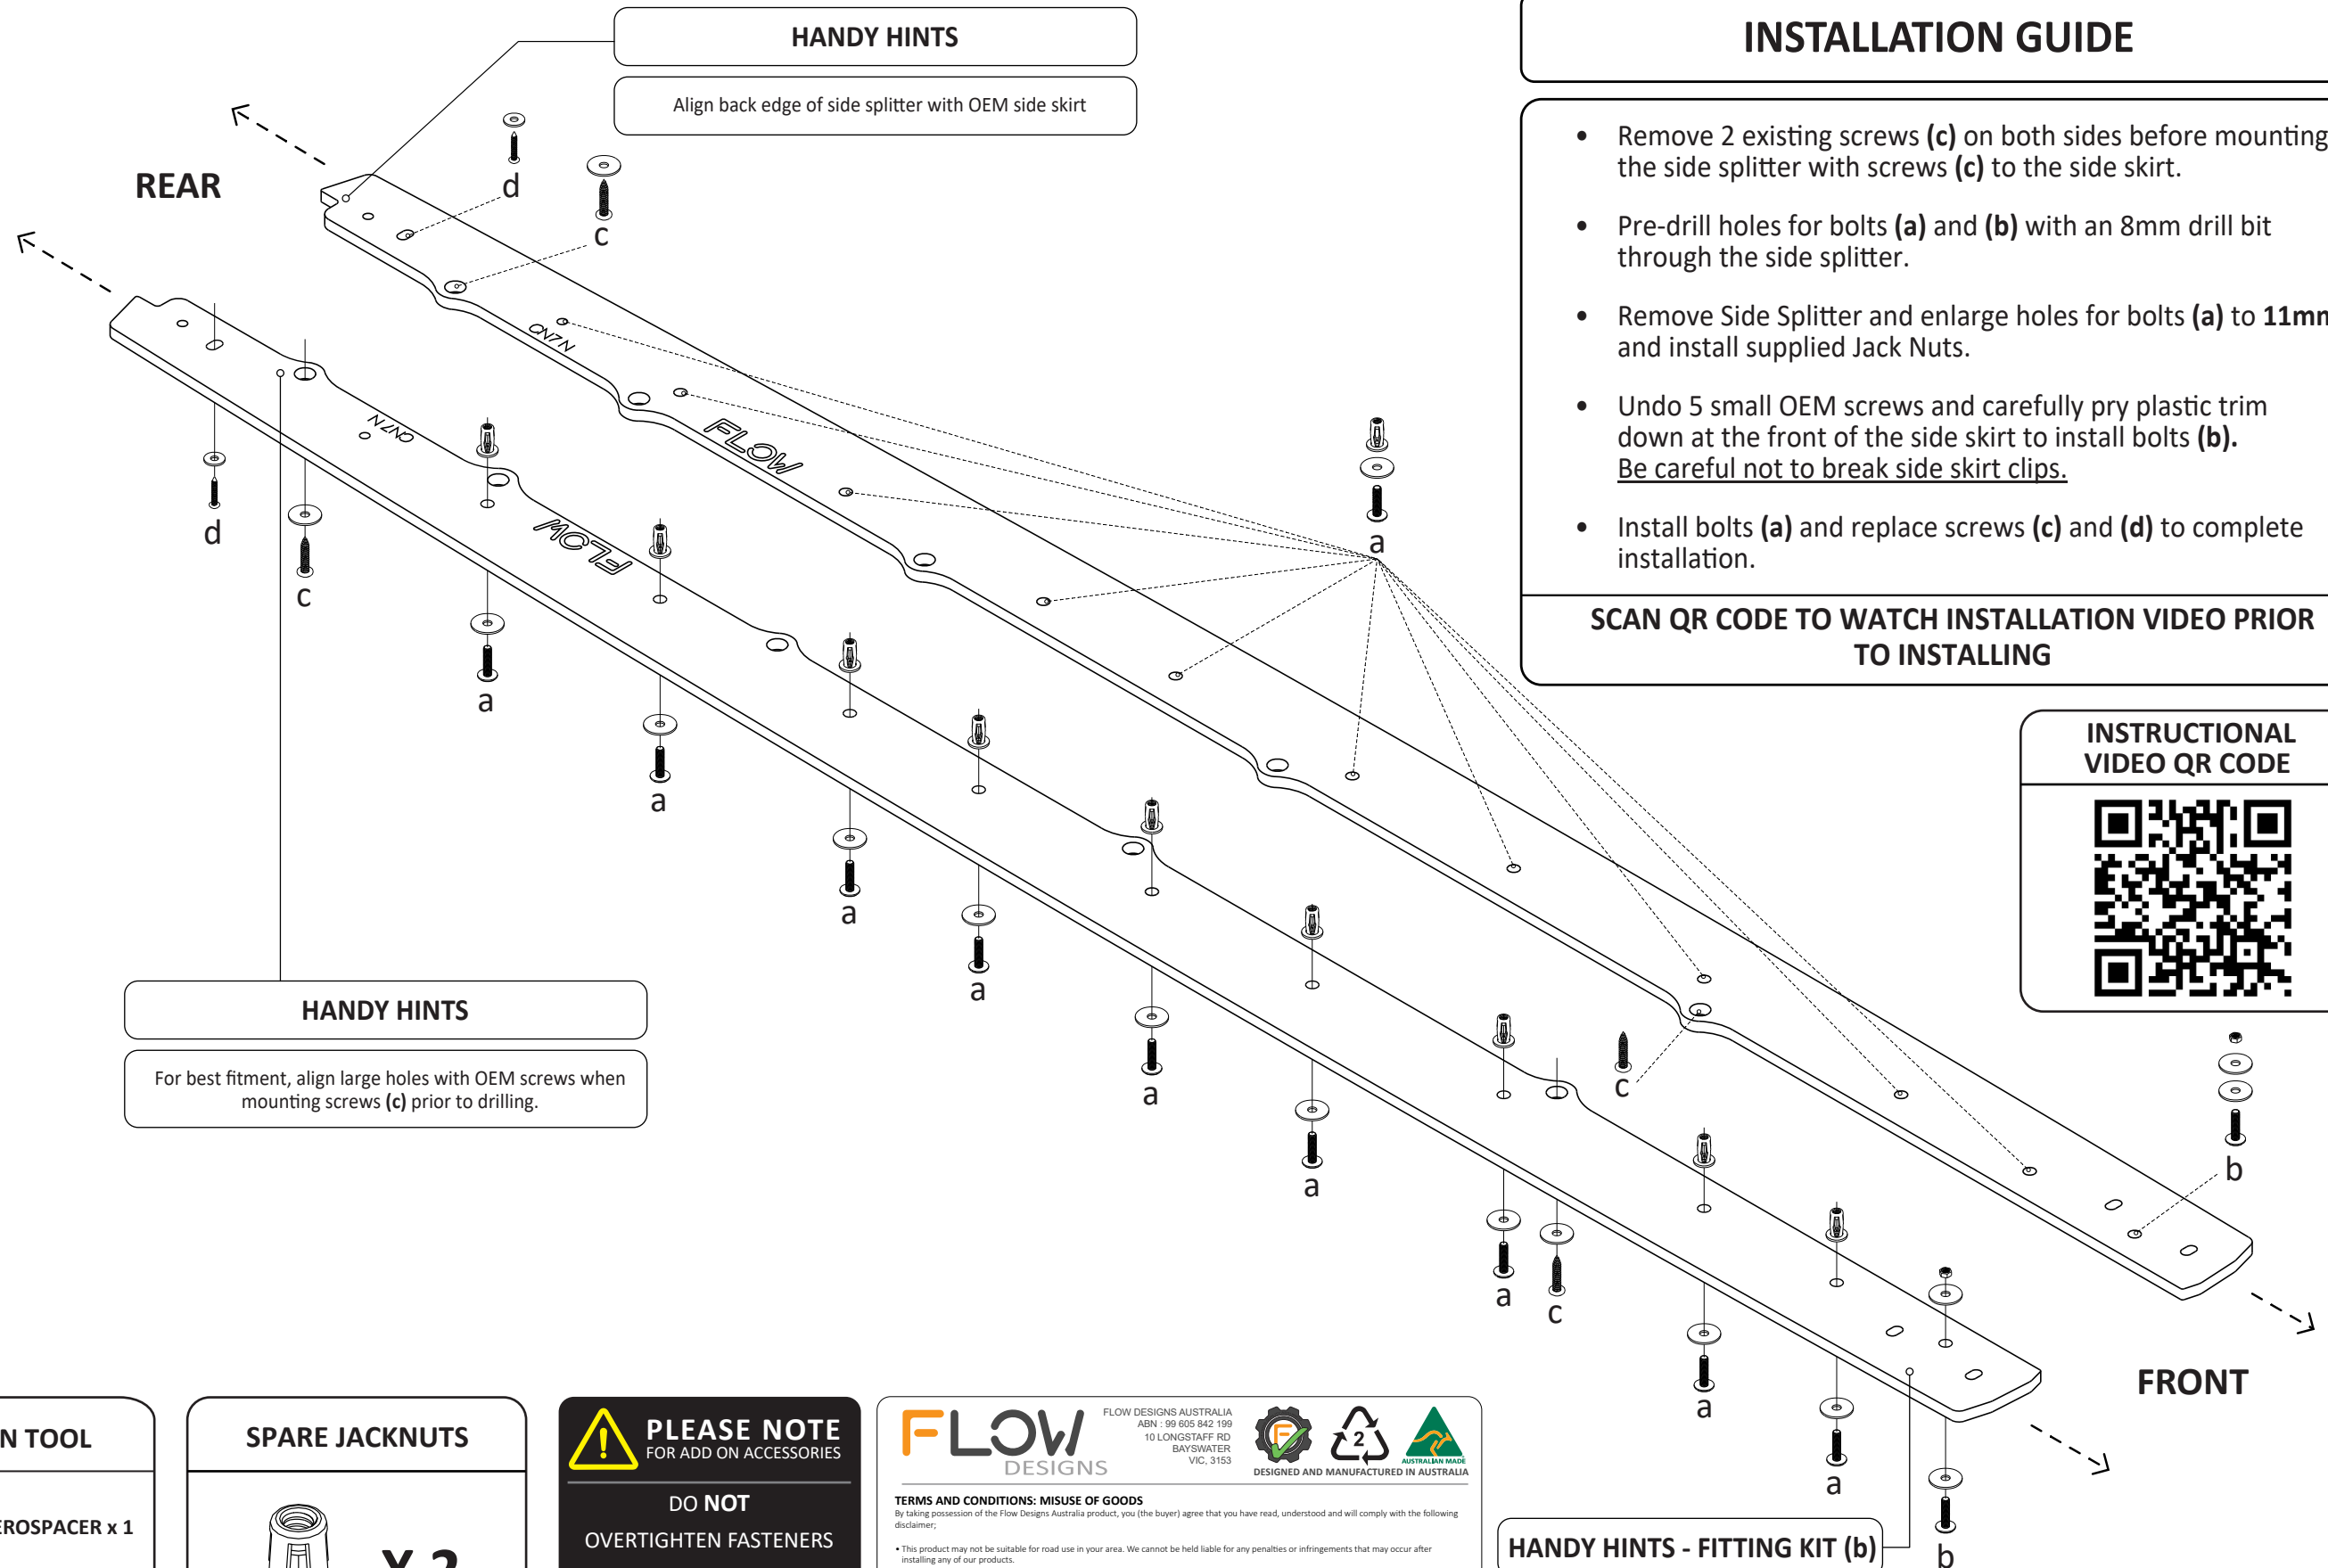

INSTALLATION GUIDE


- Remove 2 existing screws (c) on both sides before mounting the side splitter with screws (c) to the side skirt.
- Pre-drill holes for bolts (a) and (b) with an 8mm drill bit through the side splitter.
- Remove Side Splitter and enlarge holes for bolts (a) to 11mm and install supplied Jack Nuts.
- Undo 5 small OEM screws and carefully pry plastic trim down at the front of the side skirt to install bolts (b). Be careful not to break side skirt clips.
- Install bolts (a) and replace screws (c) and (d) to complete installation.

SCAN QR CODE TO WATCH INSTALLATION VIDEO PRIOR TO INSTALLING


INSTRUCTIONAL VIDEO QR CODE



JACKNUT COMPRESSION TOOL

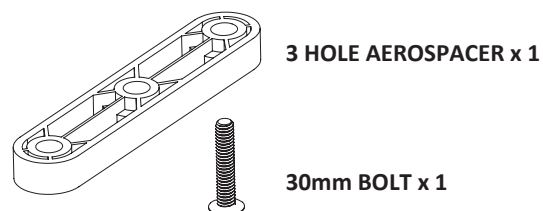

SPARE JACKNUTS

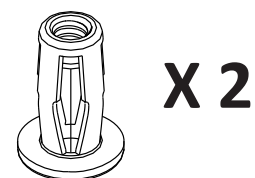

PLEASE NOTE FOR ADD ON ACCESSORIES

DO NOT OVERTIGHTEN FASTENERS INTO BRASS FITTINGS
HAND TIGHTEN ONLY



FLOW DESIGNS AUSTRALIA
ABN : 99 605 842 199
10 LONGSTAFF RD
BAYSWATER VIC, 3153



TERMS AND CONDITIONS: MISUSE OF GOODS

By taking possession of the Flow Designs Australia product, you (the buyer) agree that you have read, understood and will comply with the following disclaimer:

- This product may not be suitable for road use in your area. We cannot be held liable for any penalties or infringements that may occur after installing any of our products.
- We cannot guarantee that this product will comply with all subsequent aftermarket products you have applied to your vehicle.
- It is not legal to fit parts onto a road registered vehicle unless it carries and meets the designs rules and public road regulations of your area, region and/or country.
- We do our best effort to consider safety when designing our products. We want the scene to be a safe place for everyone!

This disclaimer absolves us (Flow Designs Australia) of any and all liability or breaches to any requirement as a result of installation of our products.

www.flowdesignsaustralia.com

HANDY HINTS - FITTING KIT (b)

Carefully pry open plastic trim underneath at front of side skirt after removing screws. Beware of OEM clips that can break.