FITTING DIAGRAM

HYUNDAI CN7 N: REAR SPATS

INSTALLATION AND FITTING SERVICES


If you are having any difficulties please seek professional advice from the listed International and Domestic Authorised Dealers on our website.

www.flowdesignsaustralia.com

BUMPER REMOVAL NOT REQUIRED

INSTRUCTIONAL VIDEO QR CODE



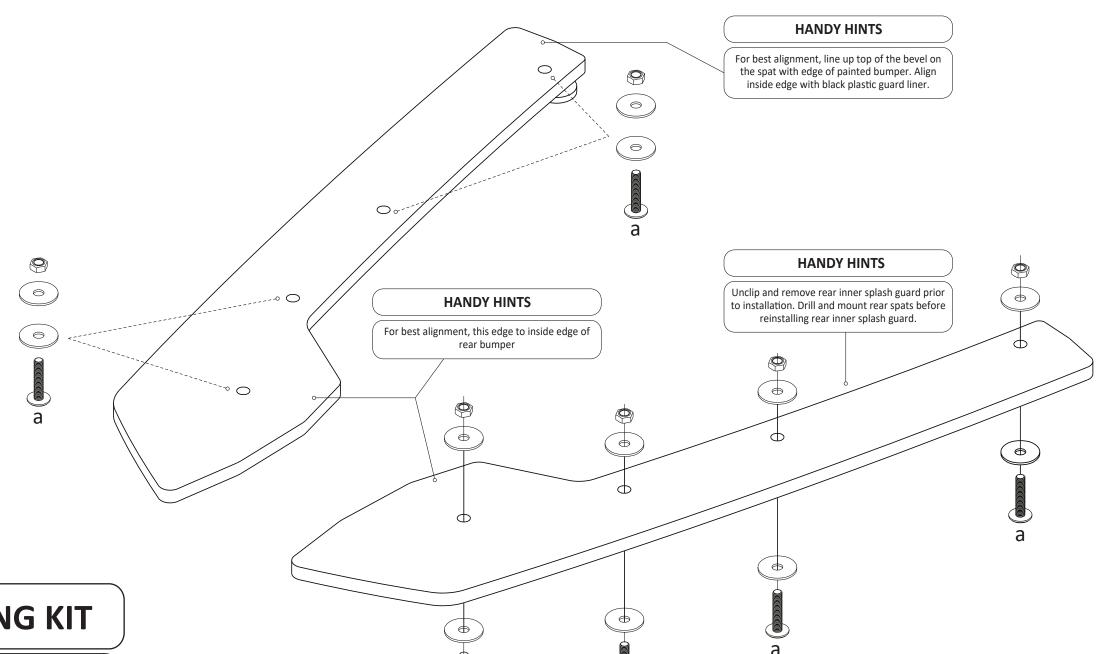

FITTING KIT

a NYLOCK NUT OD 25

OD 25

M6 BOLT 30mm LONG

X8

PLEASE NOTE: DRILLING REQUIRED TO FASTEN TO BUMPER USE AN 8mm DRILL BIT







TERMS AND CONDITIONS : MISUSE OF GOODS

This Product application is not intended for public road registered Regulations may vary from Countries outlide of Australia. Please check your Country's and State's road regulations before in public road use.