FITTING DIAGRAM

HYUNDAI OS KONA N: REAR DIFFUSER + FLOW-LOCK FINS


INSTALLATION AND FITTING SERVICES

If you are having any difficulties please seek professional advice from the listed International and Domestic Authorised Dealers on our website.

www.flowdesignsaustralia.com


BUMPER REMOVAL NOT REQUIRED





- · Align FLOW-LOCK Fins to their corresponding slots.
- Please ensure to allocate the correct FLOW-LOCK Fin to the correct corresponding slot (L1 into L1 slot, R1 into R1 slot etc.)

Please Note: Once fins have been locked into position, they will be difficult to remove.

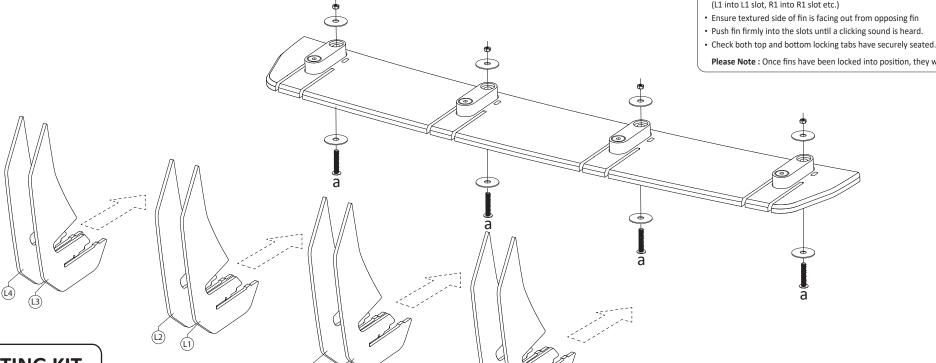

FITTING KIT

M6 BOLT a 40mm LONG

0

X4

PLEASE NOTE: DRILLING REQUIRED TO FASTEN TO BUMPER PLEASE USE 8mm DRILL BI INSTRUCTIONAL **VIDEO QR CODE**













