

FITTING GUIDE - PAGE 1

HYUNDAI SONATA DN8 N-LINE: SPOILER EXTENSION INSTRUCTIONS

INSTALLATION AND FITTING SERVICES


If you are having any difficulties please seek professional advice from the listed International and Domestic Authorised Dealers on our website.

www.flowdesignsaustralia.com

OEM REAR SPOILER REMOVAL NOT REQUIRED

INSTALLATION GUIDE

- Clean surface of existing OEM boot spoiler with supplied alcohol swab.
- Apply 3M Adhesion Promoter to OEM boot spoiler and to the inside of the Spoiler Extension as shown in **(1)**.
- Apply double sided tape to the inside of the Spoiler Extension as shown in **(2)**. Peel tape before installation.
- Align Spoiler Extension with the OEM boot spoiler **(3)** and firmly apply pressure to install Spoiler Extension.
- Once stuck to OEM spoiler, hold in place for 2 minutes. **DO NOT** wash or drive car within 12 hours of installation.
- Apply optional Flow Designs Decal to Spoiler Extension

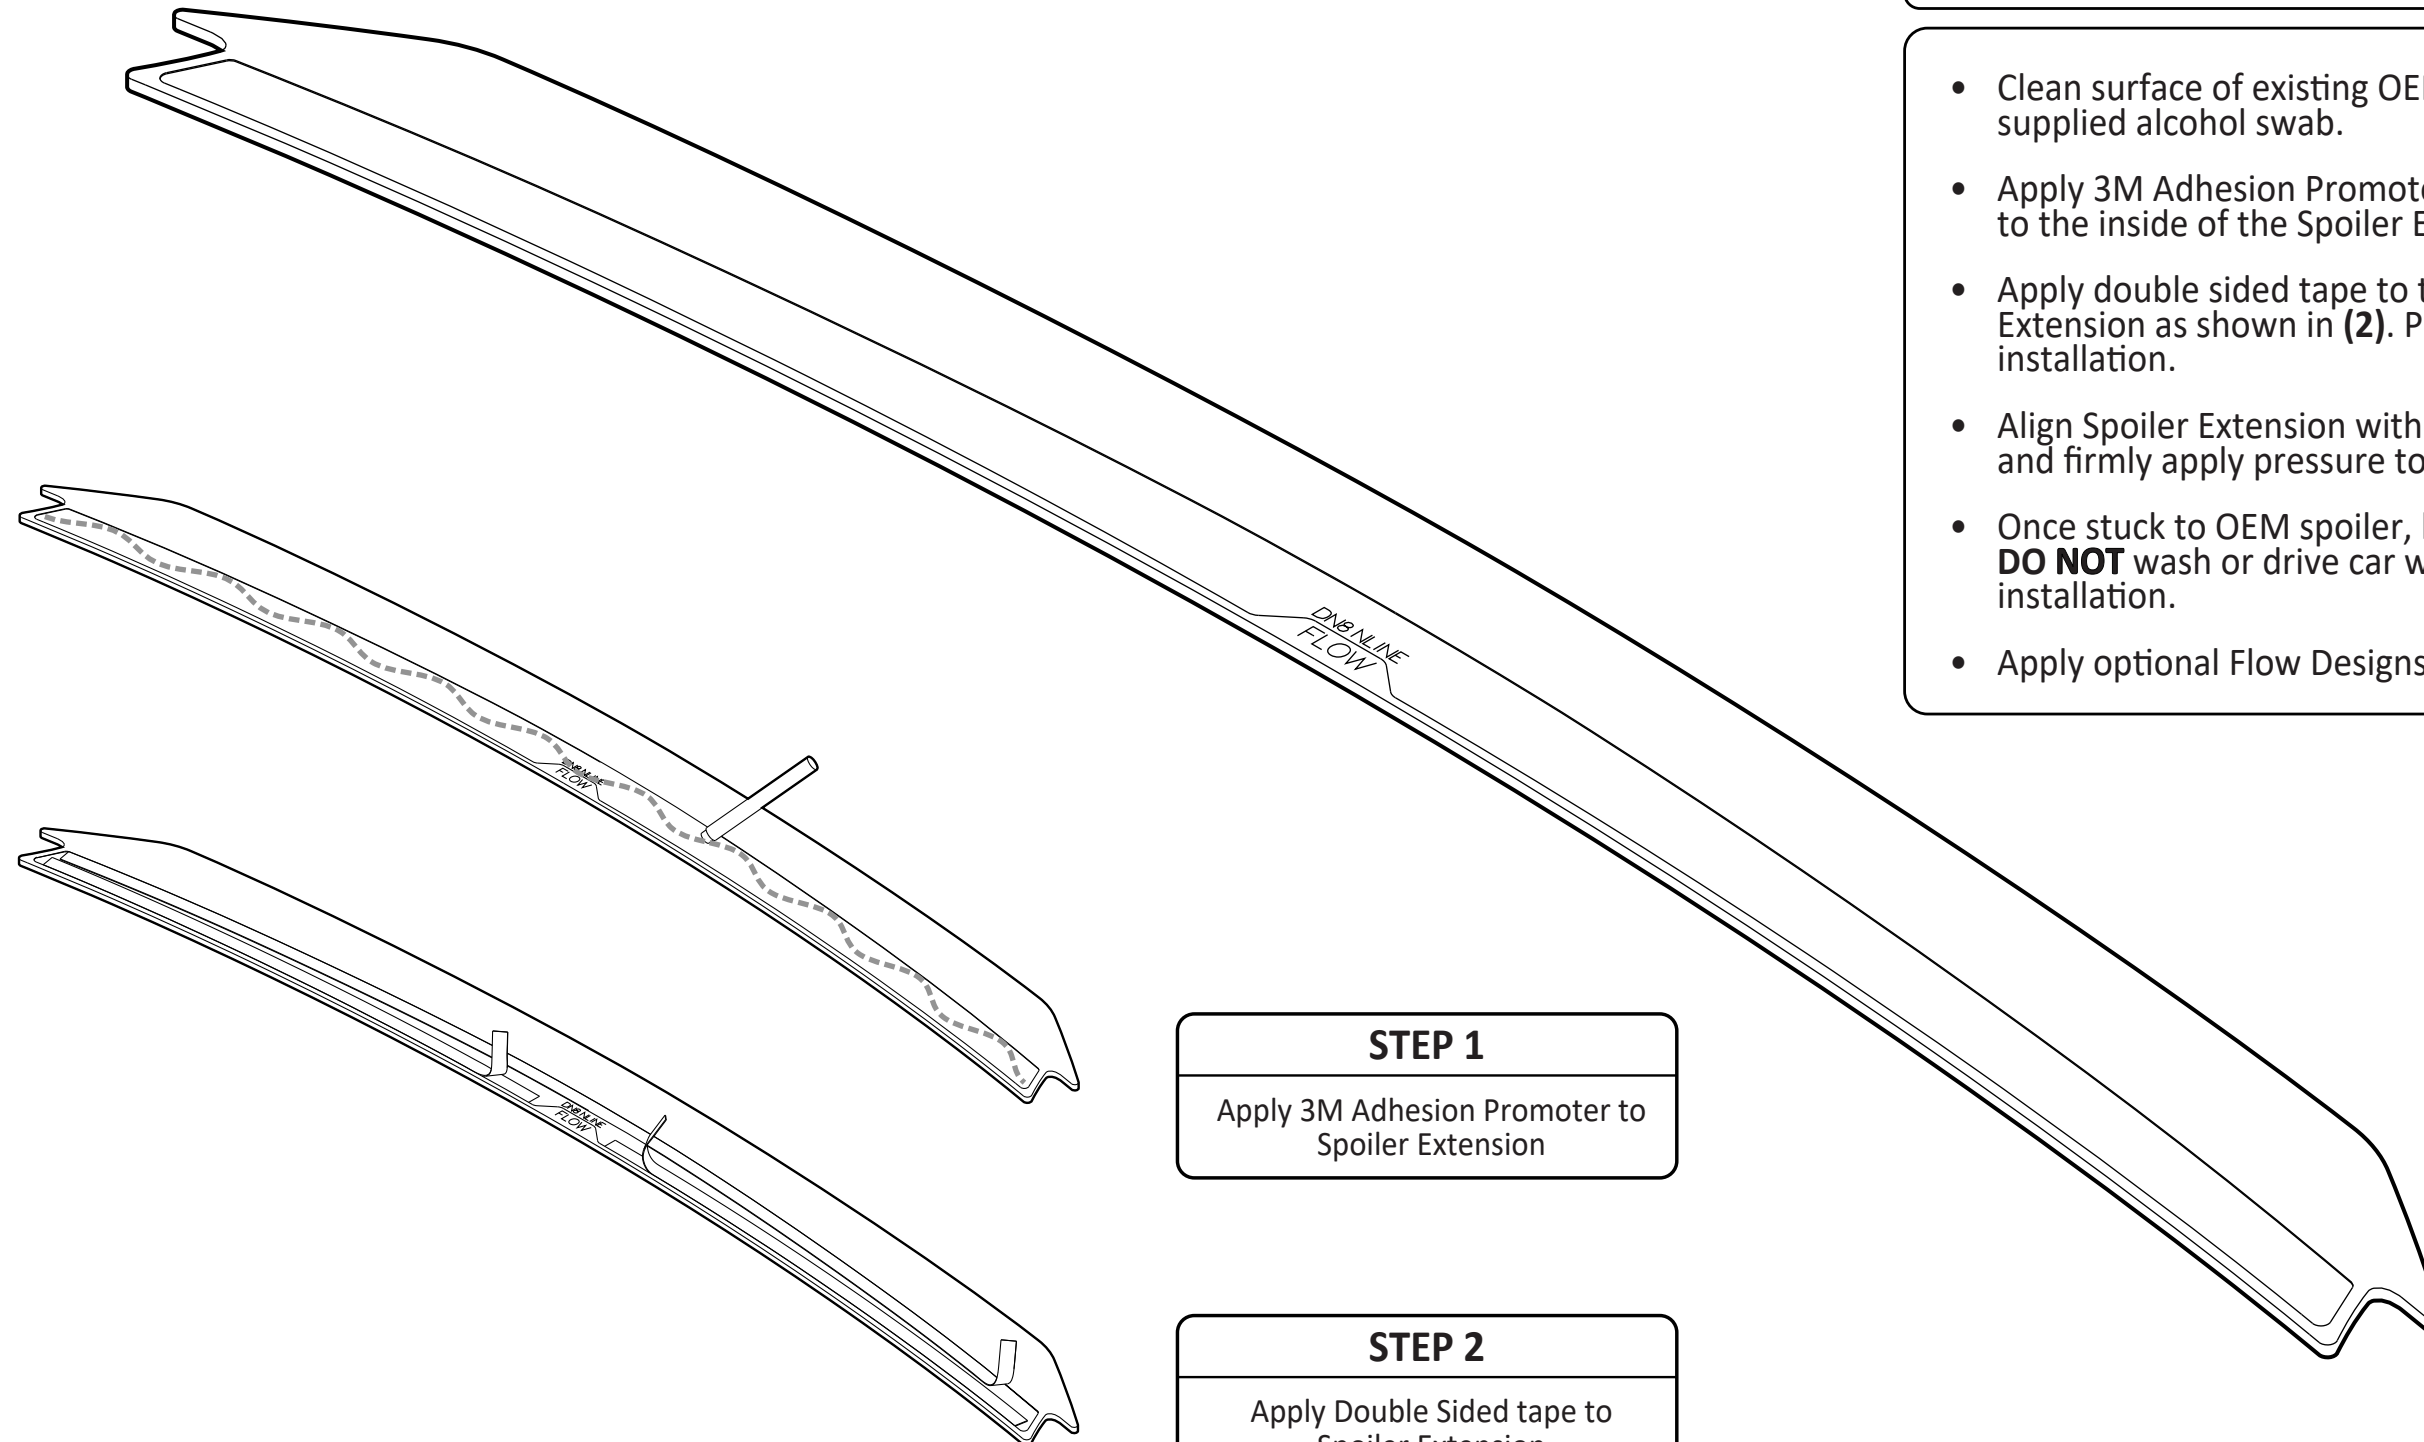

STEP 1


Apply 3M Adhesion Promoter to Spoiler Extension

STEP 2

Apply Double Sided tape to Spoiler Extension

FITTING KIT


3M OF 12mm DOUBLE SIDED TAPE

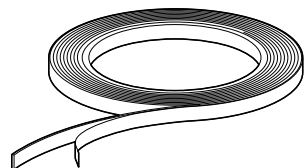


ALCOHOL SWAB



3M ADHESION PROMOTER

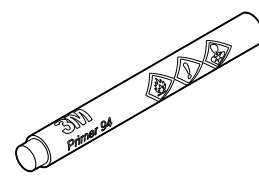

FLOW DESIGNS DECAL



TERMS AND CONDITIONS: MISUSE OF GOODS

By taking possession of the Flow Designs Australia product, you (the buyer) agree that you have read, understood and will comply with the following disclaimer:

• This product may not be suitable for road use in your area. We cannot be held liable for any penalties or infringements that may occur after installing any of our products.

• We cannot guarantee that this product will comply with all subsequent aftermarket products you have applied to your vehicle.

• It is not legal to fit parts onto a road registered vehicle unless it carries and meets the designs rules and public road regulations of your area, region and/or country.

• We do our best effort to consider safety when designing our products. We want the scene to be a safe place for everyone!

This disclaimer absolves us (Flow Designs Australia) of any and all liability or breaches to any requirement as a result of installation of our products.

www.flowdesignsaustralia.com

FITTING GUIDE - PAGE 2

HYUNDAI SONATA DN8 N-LINE: SPOILER EXTENSION INSTRUCTIONS

INSTALLATION AND FITTING SERVICES


If you are having any difficulties please seek professional advice from the listed International and Domestic Authorised Dealers on our website.

www.flowdesignsaustralia.com

OEM REAR SPOILER REMOVAL NOT REQUIRED

STEP 3

Align Spoiler Extension and install onto OEM boot spoiler

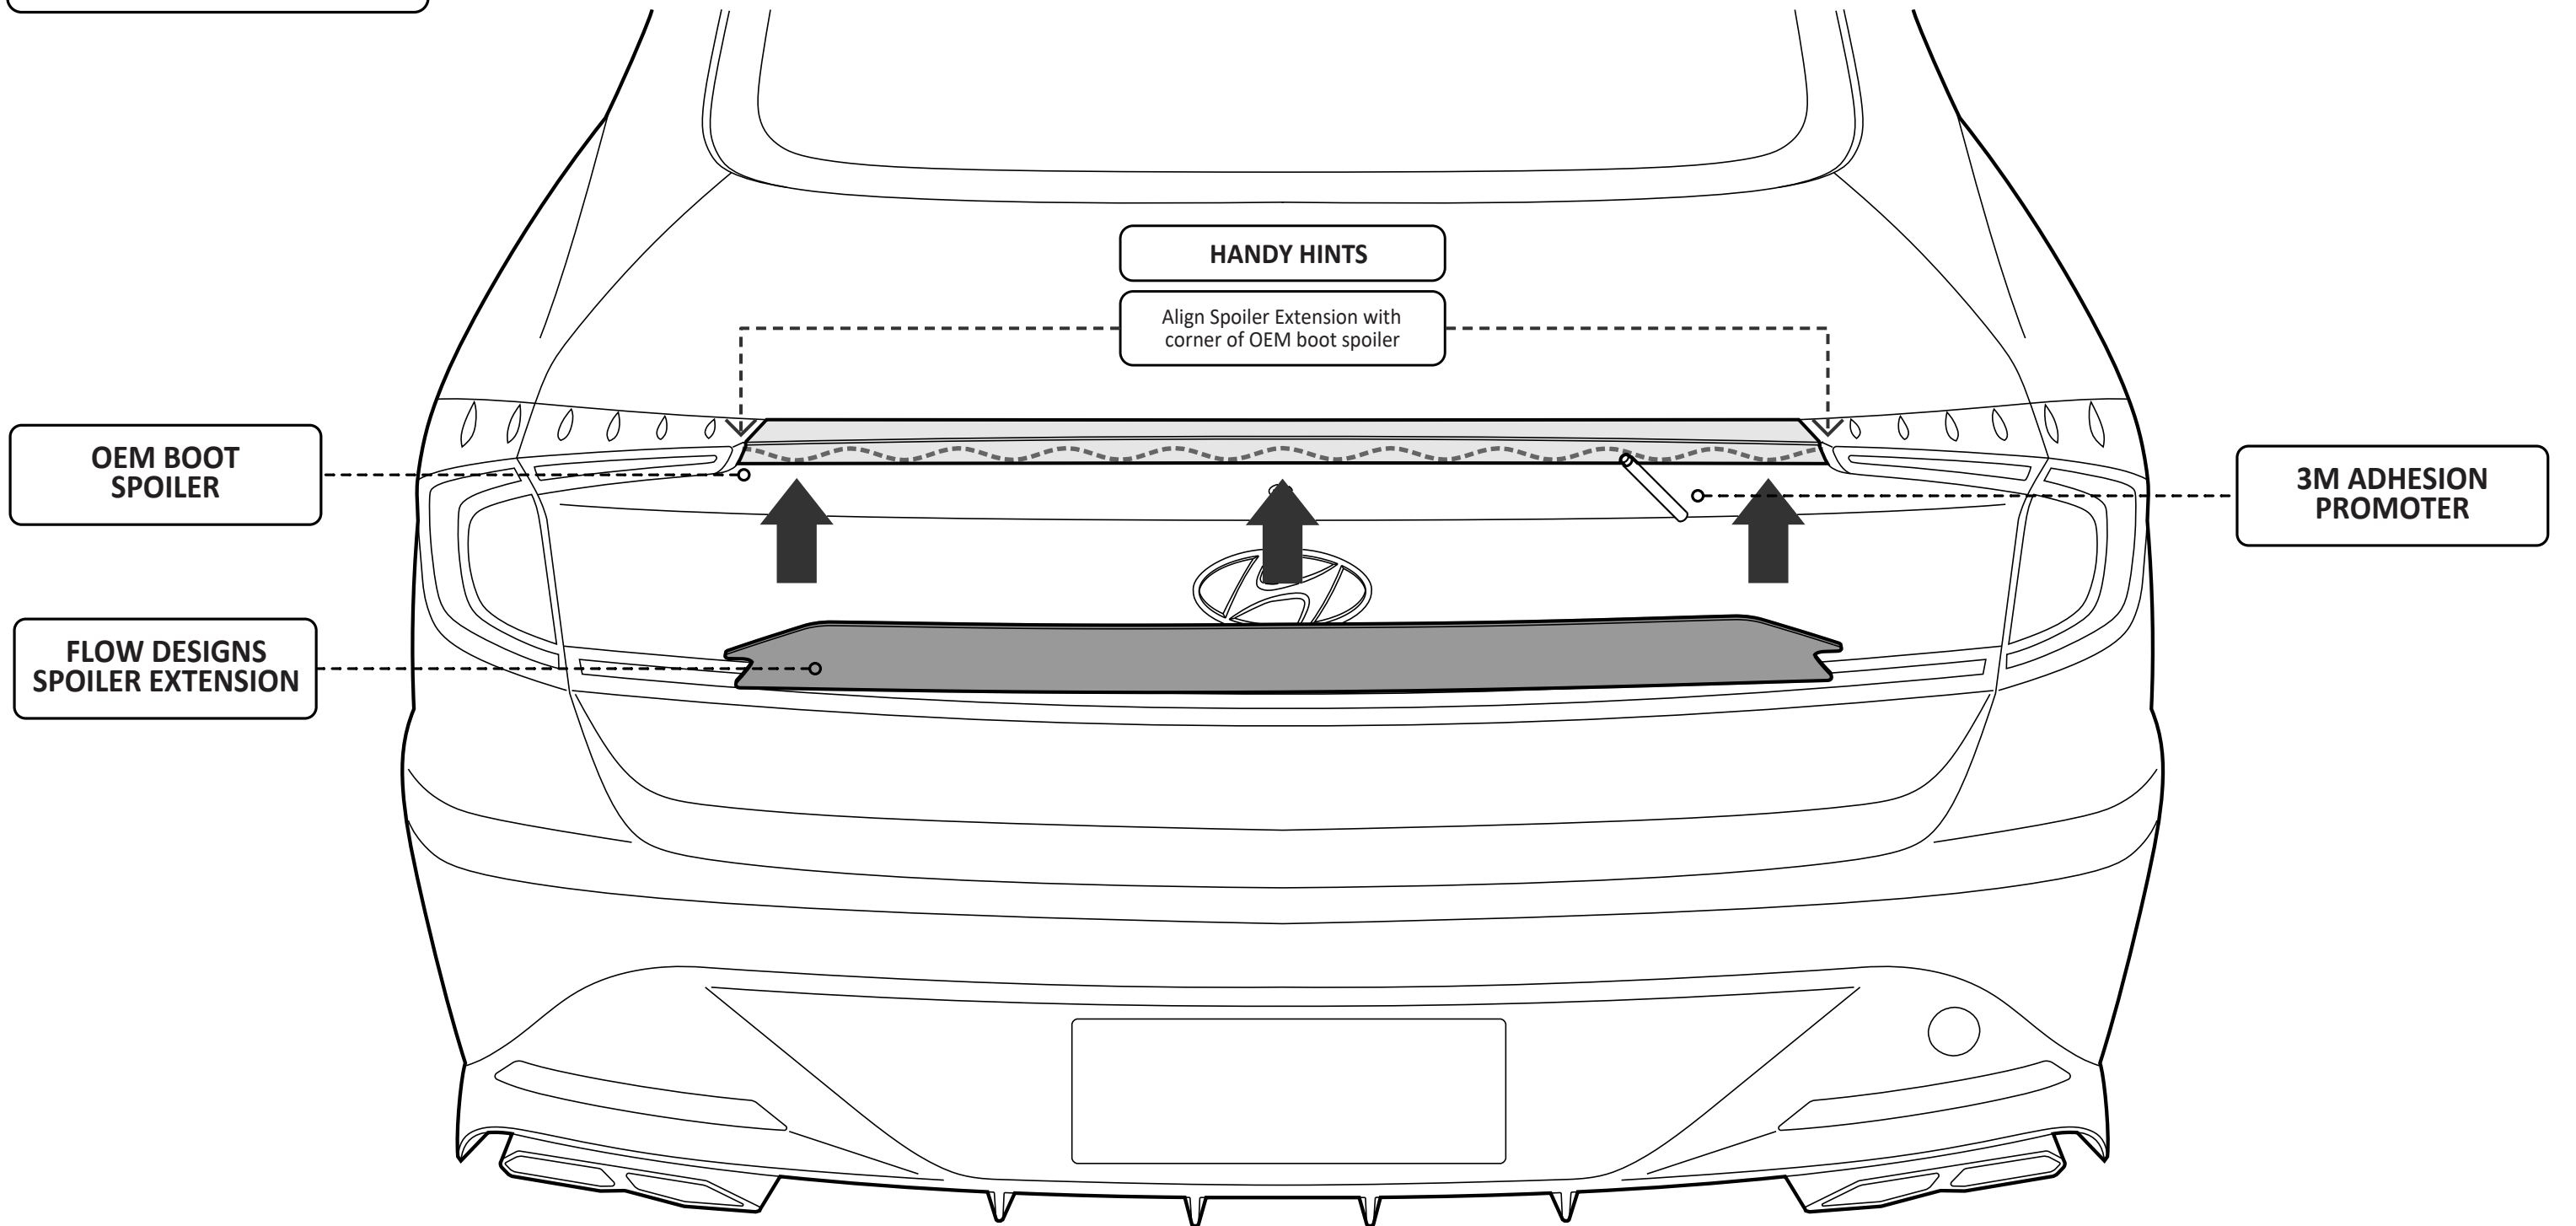

FLOW DESIGNS
FLOW DESIGNS AUSTRALIA
ABN : 99 605 842 199
10 LONGSTAFF RD
DAYSWATER
VIC. 3153



DESIGNED AND MANUFACTURED IN AUSTRALIA

TERMS AND CONDITIONS: MISUSE OF GOODS
By taking possession of the Flow Designs Australia product, you (the buyer) agree that you have read, understood and will comply with the following disclaimer;

- This product may not be suitable for road use in your area. We cannot be held liable for any penalties or infringements that may occur after installing any of our products.
- We cannot guarantee that this product will comply with all subsequent aftermarket products you have applied to your vehicle.
- It is not legal to fit parts onto a road registered vehicle unless it carries and meets the designs rules and public road regulations of your area, region and/or country.
- We do our best effort to consider safety when designing our products. We want the scene to be a safe place for everyone!

This disclaimer absolves us (Flow Designs Australia) of any and all liability or breaches to any requirement as a result of installation of our products.

www.flowdesignsaustralia.com