

FITTING INSTRUCTIONS

HYUNDAI VELOSTER SR TURBO : FRONT SPLITTER

FITTING KIT

a

**M6 BOLT
48mm LONG**

X 4

PLEASE NOTE:
DRILLING REQUIRED TO
FASTEN TO BUMPER






b

**M6 BOLT
30mm LONG**

X 8

PLEASE NOTE:
DRILLING REQUIRED TO
FASTEN TO BUMPER

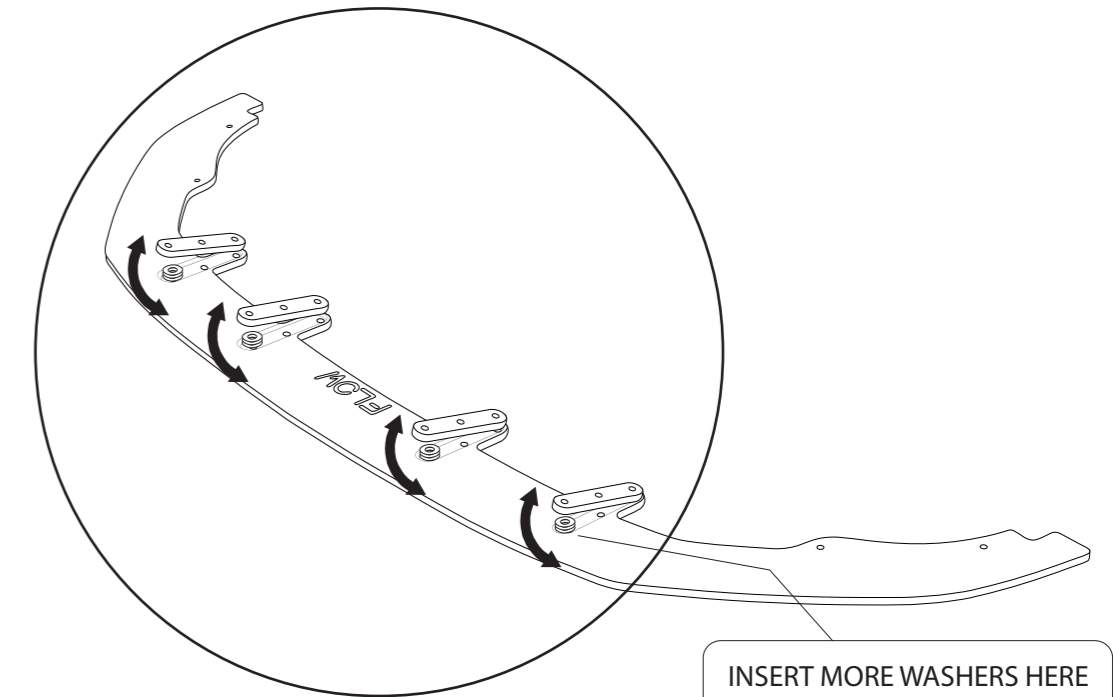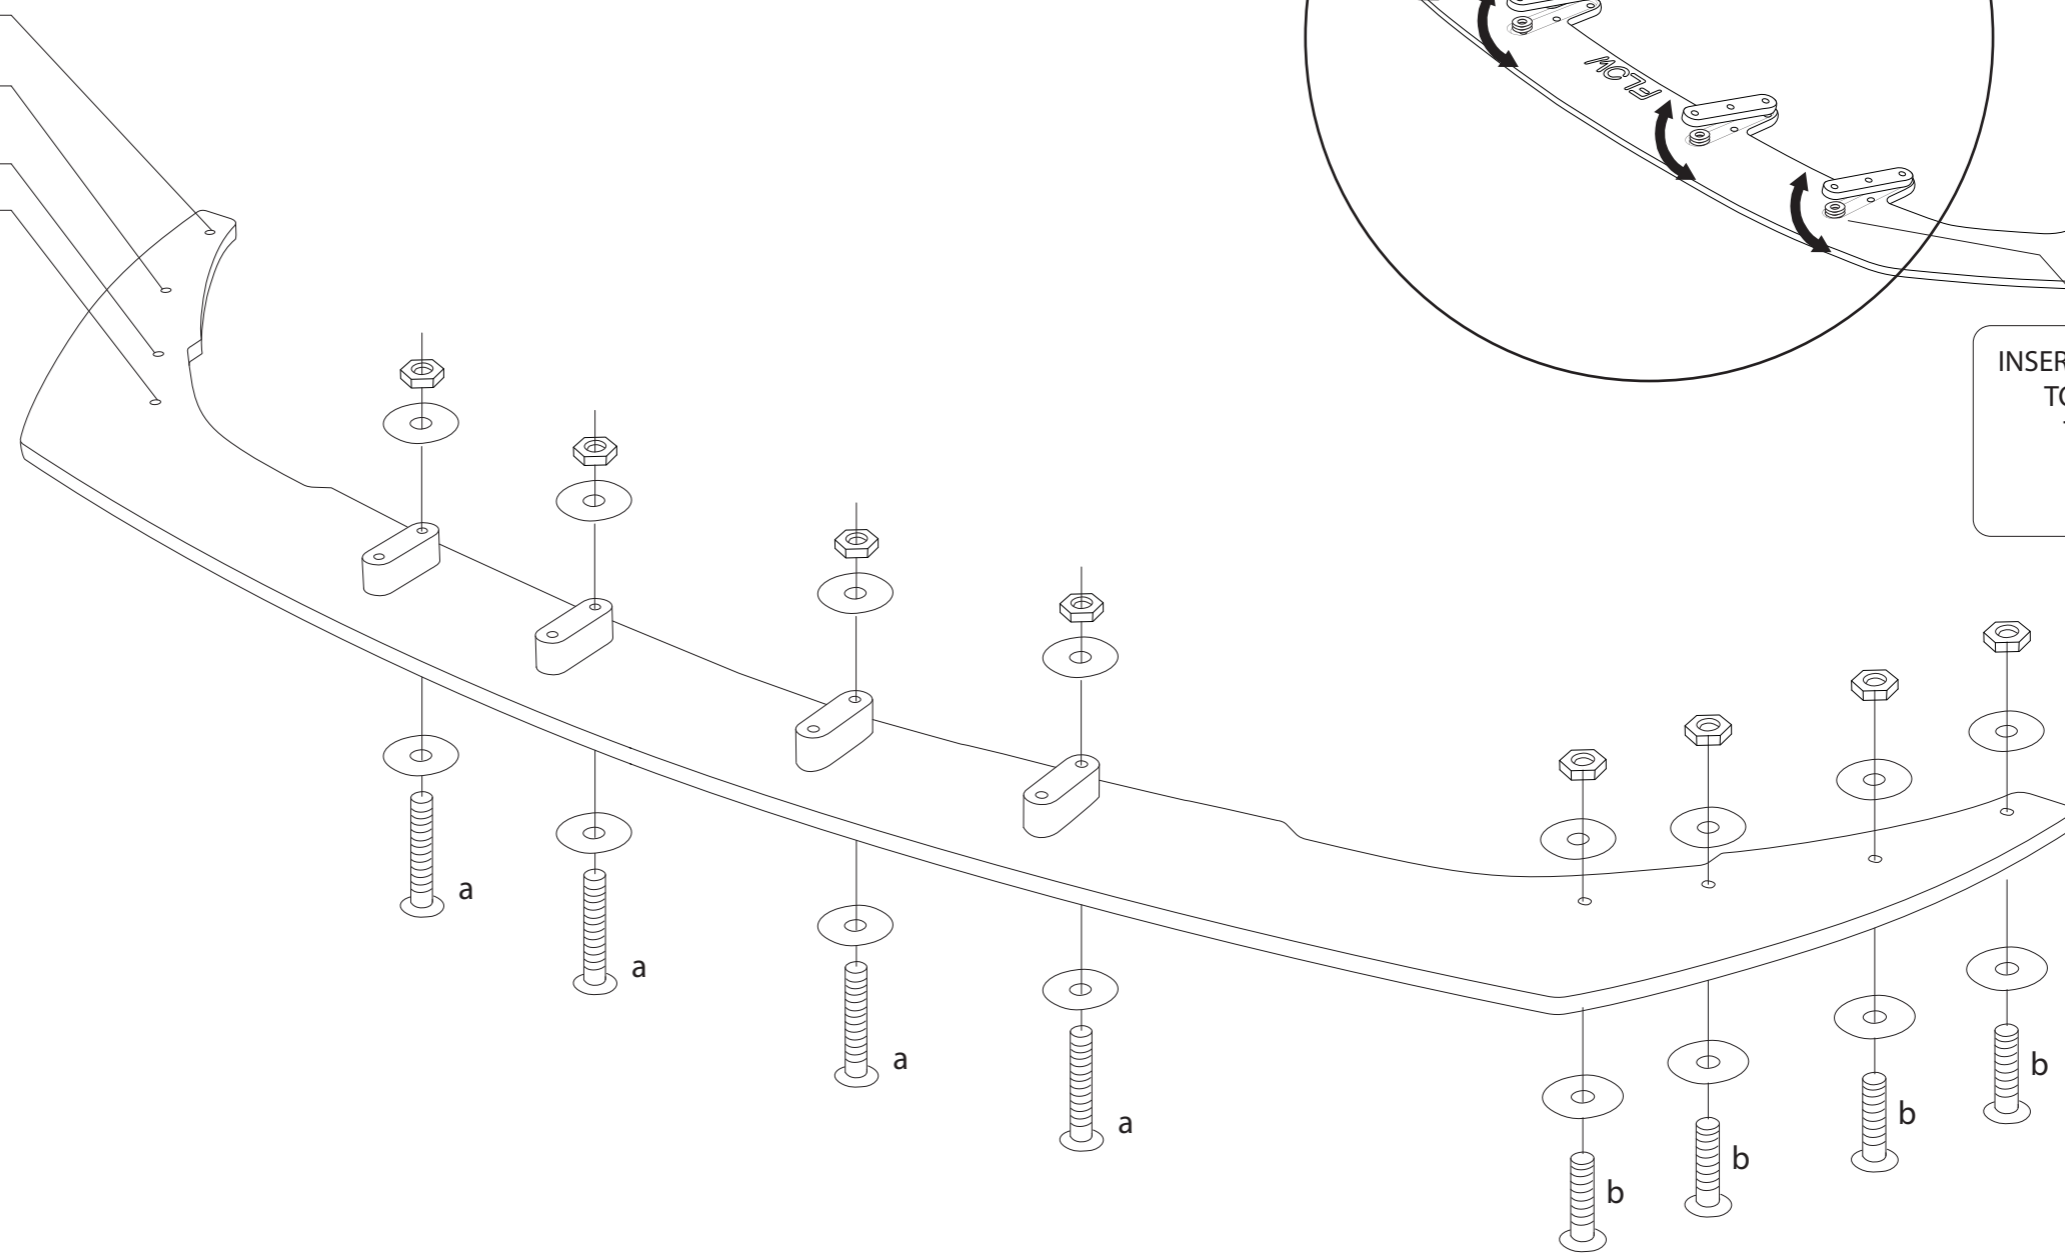

INSERT MORE WASHERS HERE
TO ADJUST ANGLE OF
THE AERO SPACERS