FITTING DIAGRAM


HYUNDAI i20 N BC3: SIDE WINGLETS

INSTALLATION AND FITTING SERVICES

If you are having any difficulties please seek professional advice from the listed International and Domestic Authorised Dealers on our website.

www.flowdesignsaustralia.com

BUMPER REMOVAL NOT REQUIRED

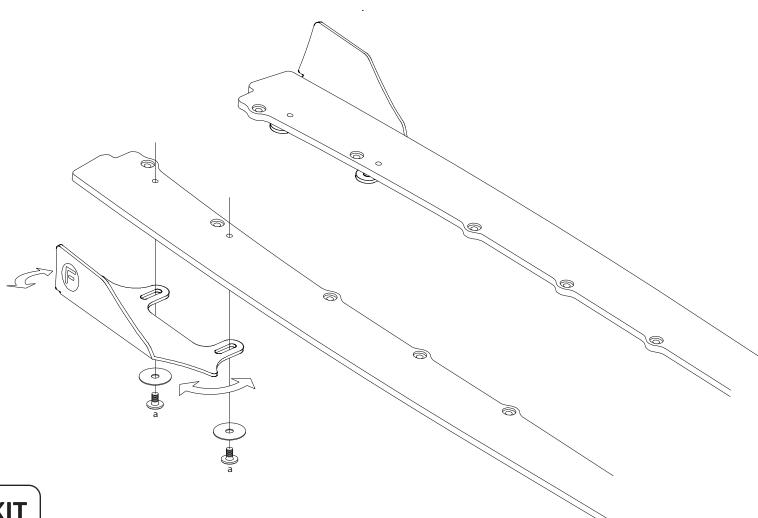

FITTING KIT



M6 BOLT 10mm LONG

X4

PLEASE NOTE:

TO FASTEN TO SPLITTER

DRILLING NOT REQUIRED DO NOT OVERTIGHTEN









TERMS AND CONDITIONS : MISUSE OF GOODS

This Product application is not intended for public road registered vehicles within Australia. This Product application is not intended for public road registered vehicles within Australia. Please check you Country's and State's road regulations before installing on a vehicle intended for public road use. Flow Designs Australia PTI.11 but into the state for any liabilities in relation to any use of the goods other than in strict accords with the Company's intendictions and for the purpose and application of which the goods were expliced by the Country's and strict accords with the Company's intendictions and for the purpose and application of which the goods were expliced by the Country's and strict and the str