FITTING DIAGRAM

HYUNDAI PD i30N PERFORMANCE - FRONT SPLITTER INSTRUCTIONS

INSTALLATION AND FITTING SERVICES

If you are having any difficulties please seek professional advise from the listed International and Domestic Authorised Dealers on our website.

www.flowdesignsaustralia.com

BUMPER REMOVAL NOT REQUIRED

HANDY HINT

- INSERT BRACKETS BETWEEN FRONT GRILL AND BOTTOM SECTION OF THE BUMPER
- SLIDE THE BRACKETS ALL THE WAY FORWARD TO ENSURE A GOOD HOOK

FITTING KIT



M6 BOLT 45mm LONG

X4 PLEASE NOTE:

DRILLING REQUIRED TO FASTEN TO BUMPER DO NOT OVERTIGHTEN

b

M6 BOLT 25mm LONG

PLEASE NOTE:


DRILLING **REQUIRED** TO FASTEN TO BUMPER DO NOT OVERTIGHTEN

M6 BOLT 25mm LONG

OD 18 **X4**


PLEASE NOTE:

DRILLING **NOT** REQUIRED TO FASTEN TO BUMPER DO NOT OVERTIGHTEN

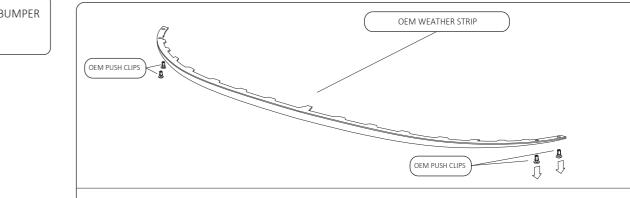


• BEFORE INSTALLING FRONT SPLITTER UNINSTALL OEM WEATHER STRIP BY REMOVING OEM **PUSH CLIPS**

HANDY HINT

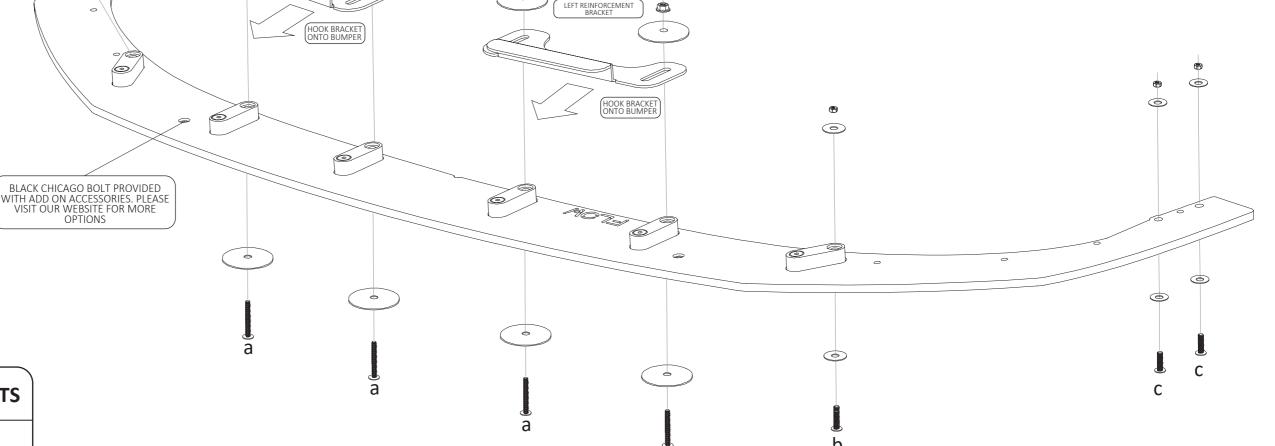

REINFORCEMENT BRACKETS

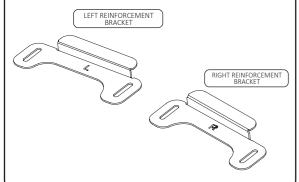



SCAN QR CODE TO ACCESS AN INSTRUCTIONAL VIDEO ON HOW TO INSTALL REINFORCEMENT **BRACKETS**





