FITTING DIAGRAM

HYUNDAI PD i30N PERFORMANCE - SIDE WINGLET INSTRUCTIONS

INSTALLATION AND FITTING SERVICES


If you are having any difficulties please seek professional advise from the listed International and Domestic Authorised Dealers on our website.

www.flowdesignsaustralia.com

BUMPER REMOVAL NOT REQUIRED

CONFIGURATION 1

REAR SIDE WINGLETS ONLY

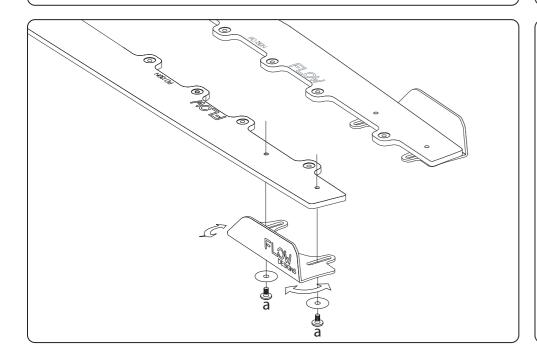


- Insert bolts loosely into alocated brass thread locations.
- Slide extensions in and out to your liking.
- Use a 4mm hex key to hand tighten.

PLEASE NOTE: DO NOT OVERTIGHTEN - These bolts do not need to be very tight.

CONFIGURATION 2

FRONT SIDE WINGLETS ONLY

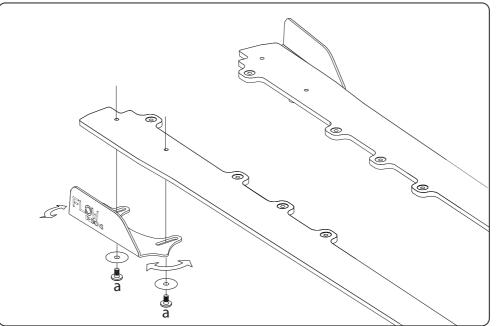


- Insert bolts loosely into alocated brass thread locations.
- Slide and pivot winglets to your liking.
- Use a 4mm hex key to hand tighten.

PLEASE NOTE: DO NOT OVERTIGHTEN - These bolts do not need to be very tight.

CONFIGURATION 3

FRONT AND REAR SIDE WINGLETS

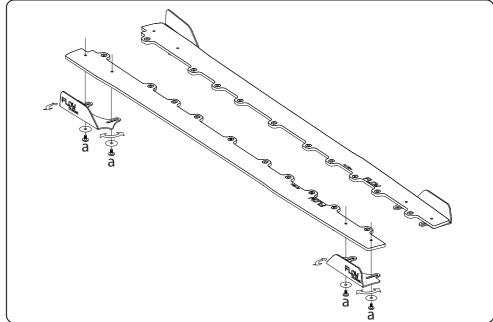

- Insert bolts loosely into alocated brass thread locations.
- Slide and pivot extensions and winglets to your liking.
- Use a 4mm hex key to hand tighten.

PLEASE NOTE: DO **NOT** OVERTIGHTEN - These bolts do not need to be very tight.

FITTING KIT

a

M6 BOLT 12mm LONG



X4

PLEASE NOTE: DRILLING NOT REQUIRED TO FASTEN TO SPLITTER

DO NOT OVERTIGHTEN













This Product application is not intended for public road regi Regulatons may vary from Countries outide of Australia.