FITTING DIAGRAM


HYUNDAI i30N FASTBACK - FACELIFT : REAR DIFFUSER + FLOW-LOCK FINS

INSTALLATION AND FITTING SERVICES

If you are having any difficulties please seek professional advice from the listed International and Domestic Authorised Dealers on our website.


www.flowdesignsaustralia.com

BUMPER REMOVAL NOT REQUIRED

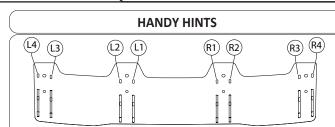

- Align FLOW-LOCK Fins to their corresponding slots.
- Please ensure to allocate the correct FLOW-LOCK Fin to the correct corresponding slot
- Ensure textured side of fin is facing out from opposing fin
- · Push fin firmly into the slots until a clicking sound is heard.
- · Check both top and bottom locking tabs have securely seated.

Please Note: Once fins have been locked into position, they will be difficult to remove.

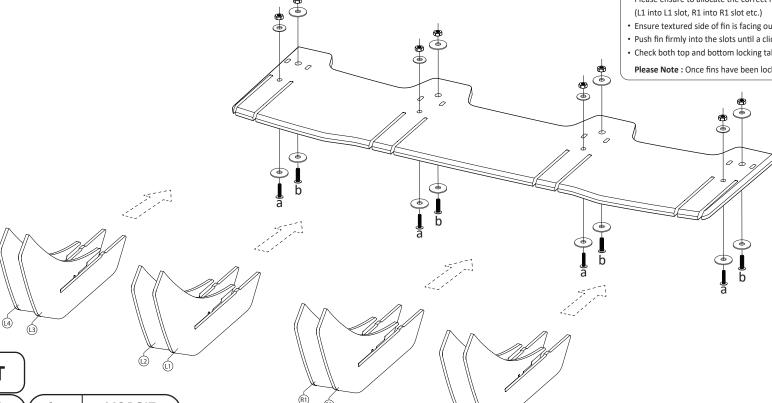

FITTING KIT



0

PLEASE NOTE: DRILLING REQUIRED TO FASTEN TO BUMPER PLEASE USE 6mm DRILL BI

0

M6 BOLT 25mm LONG

X4

PLEASE NOTE: DRILLING REQUIRED TO FASTEN TO BUMPER PLEASE USE 8mm DRILL BIT







TERMS AND CONDITIONS: MISUSE OF GOODS

