FITTING DIAGRAM

PLEASE NOTE:

DRILLING **NOT** REQUIRED TO FASTEN TO BUMPER

DO NOT OVERTIGHTEN

OD 18


HYUNDAI PD i30 N-LINE- FRONT SPLITTER INSTRUCTIONS

INSTALLATION AND FITTING SERVICES

If you are having any difficulties please seek professional advise from the listed International and Domestic Authorised Dealers on our website.

www.flowdesignsaustralia.com

BUMPER REMOVAL NOT REQUIRED

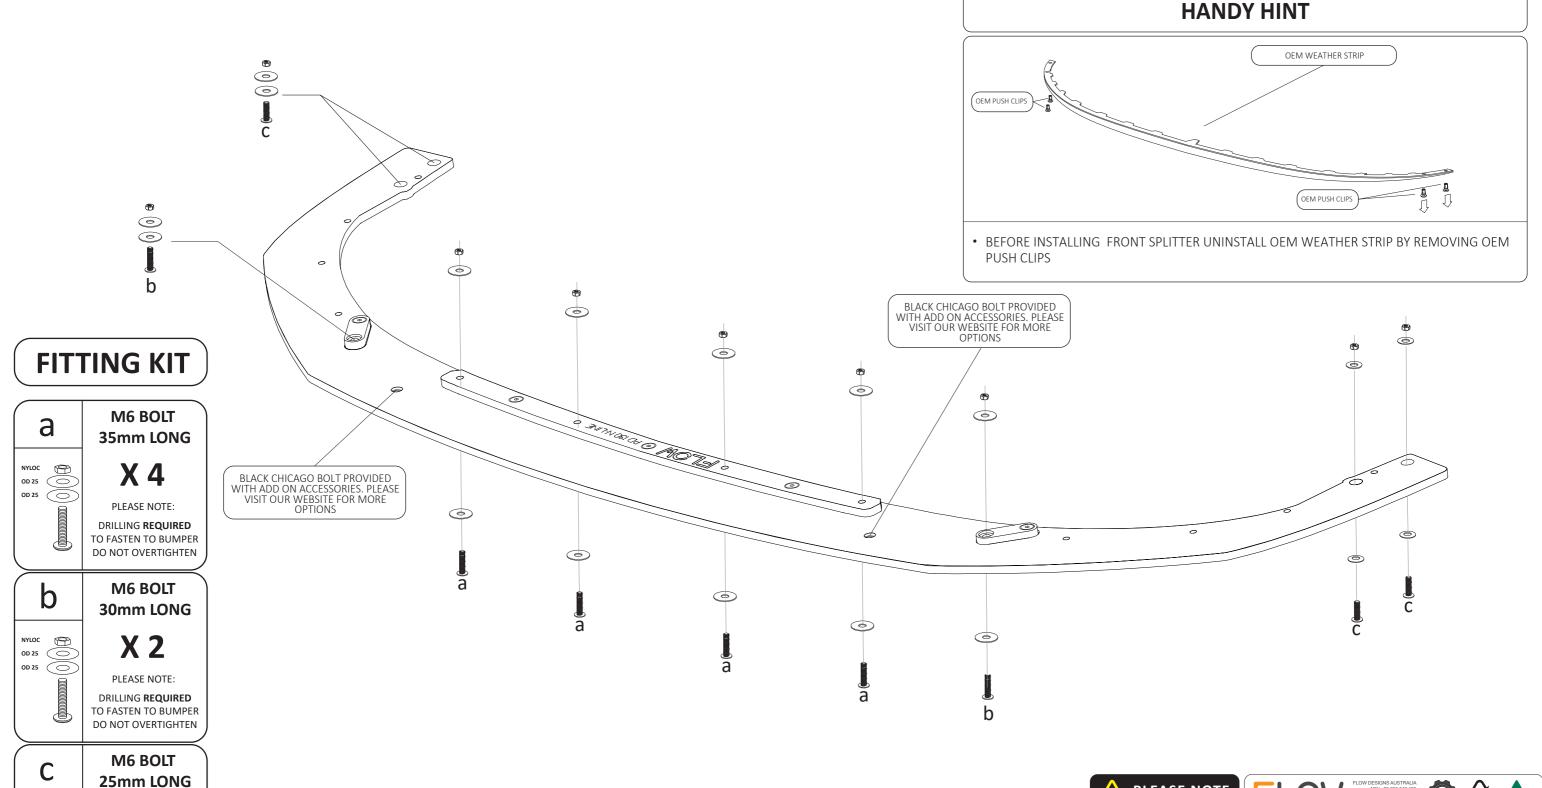







TERMS AND CONDITIONS : MISUSE OF GOODS