FITTING DIAGRAM


HYUNDAI PD 1&2: FRONT BOLT-ON INSTRUCTIONS

INSTALLATION AND FITTING SERVICES

If you are having any difficulties please seek professional advice from the listed International and Domestic Authorised Dealers on our website.


www.flowdesignsaustralia.com

CONFIGURATION 1 FRONT EXTENSIONS ONLY

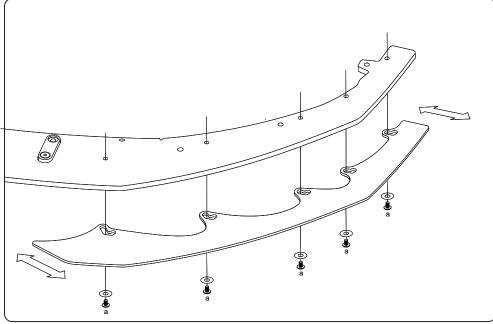

- Insert bolts loosely into allocated brass thread locations.
- Slide extensions in and out to your liking.
- Use a 4mm hex key to hand tighten.

PLEASE NOTE : DO NOT OVERTIGHTEN - These bolts do not need to be very tight.

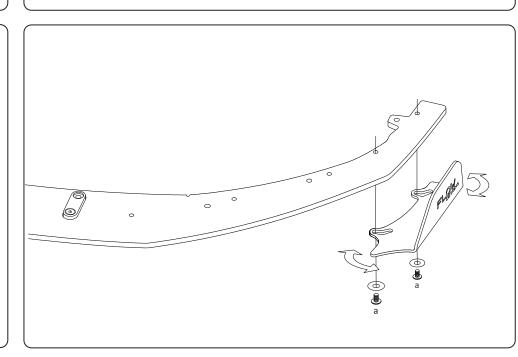


- Insert bolts loosely into allocated brass thread locations.
- Slide and pivot winglets to your liking.
- Use a 4mm hex key to hand tighten.


CONFIGURATION 2

FRONT WINGLETS ONLY

PLEASE NOTE : DO NOT OVERTIGHTEN - These bolts do not need to be very tight.

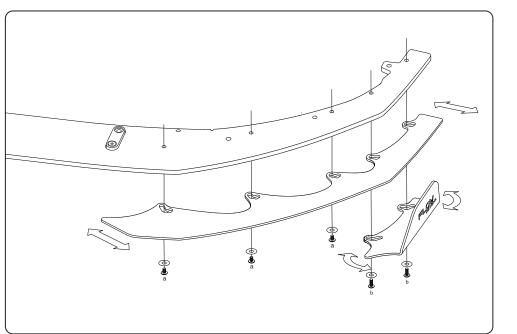

PLEASE NOTE : DO **NOT** OVERTIGHTEN - These bolts do not need to be very tight.

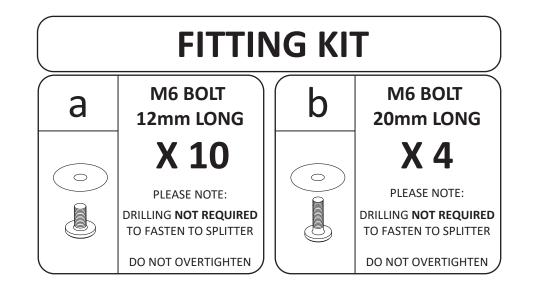



BUMPER REMOVAL NOT REQUIRED

CONFIGURATION 3 FRONT EXTENSIONS AND WINGLETS

 Insert bolts loosely into allocated brass thread locations. • Slide and pivot extensions and winglets to your liking. • Use a 4mm hex key to hand tighten.





TERMS AND CONDITIONS : MISUSE OF GOODS

This Product application is not intended for public road registered vehicles Regulatons may vary from Countries outide of Australia. Please check your Country's and State's road regulatons before installing c

ds are in its pos