

# FITTING DIAGRAM

HYUNDAI PD 1&2: REAR SPATS + ADJUSTABLE REAR WINGLETS


INSTALLATION AND FITTING SERVICES

If you are having any difficulties please seek professional advice from the listed International and Domestic Authorised Dealers on our website.

[www.flowdesignsaustralia.com](http://www.flowdesignsaustralia.com)

**BUMPER REMOVAL  
NOT REQUIRED**

OPTIONAL  
ADJUSTABLE REAR SPAT WINGLET  
(NOT INCLUDED)

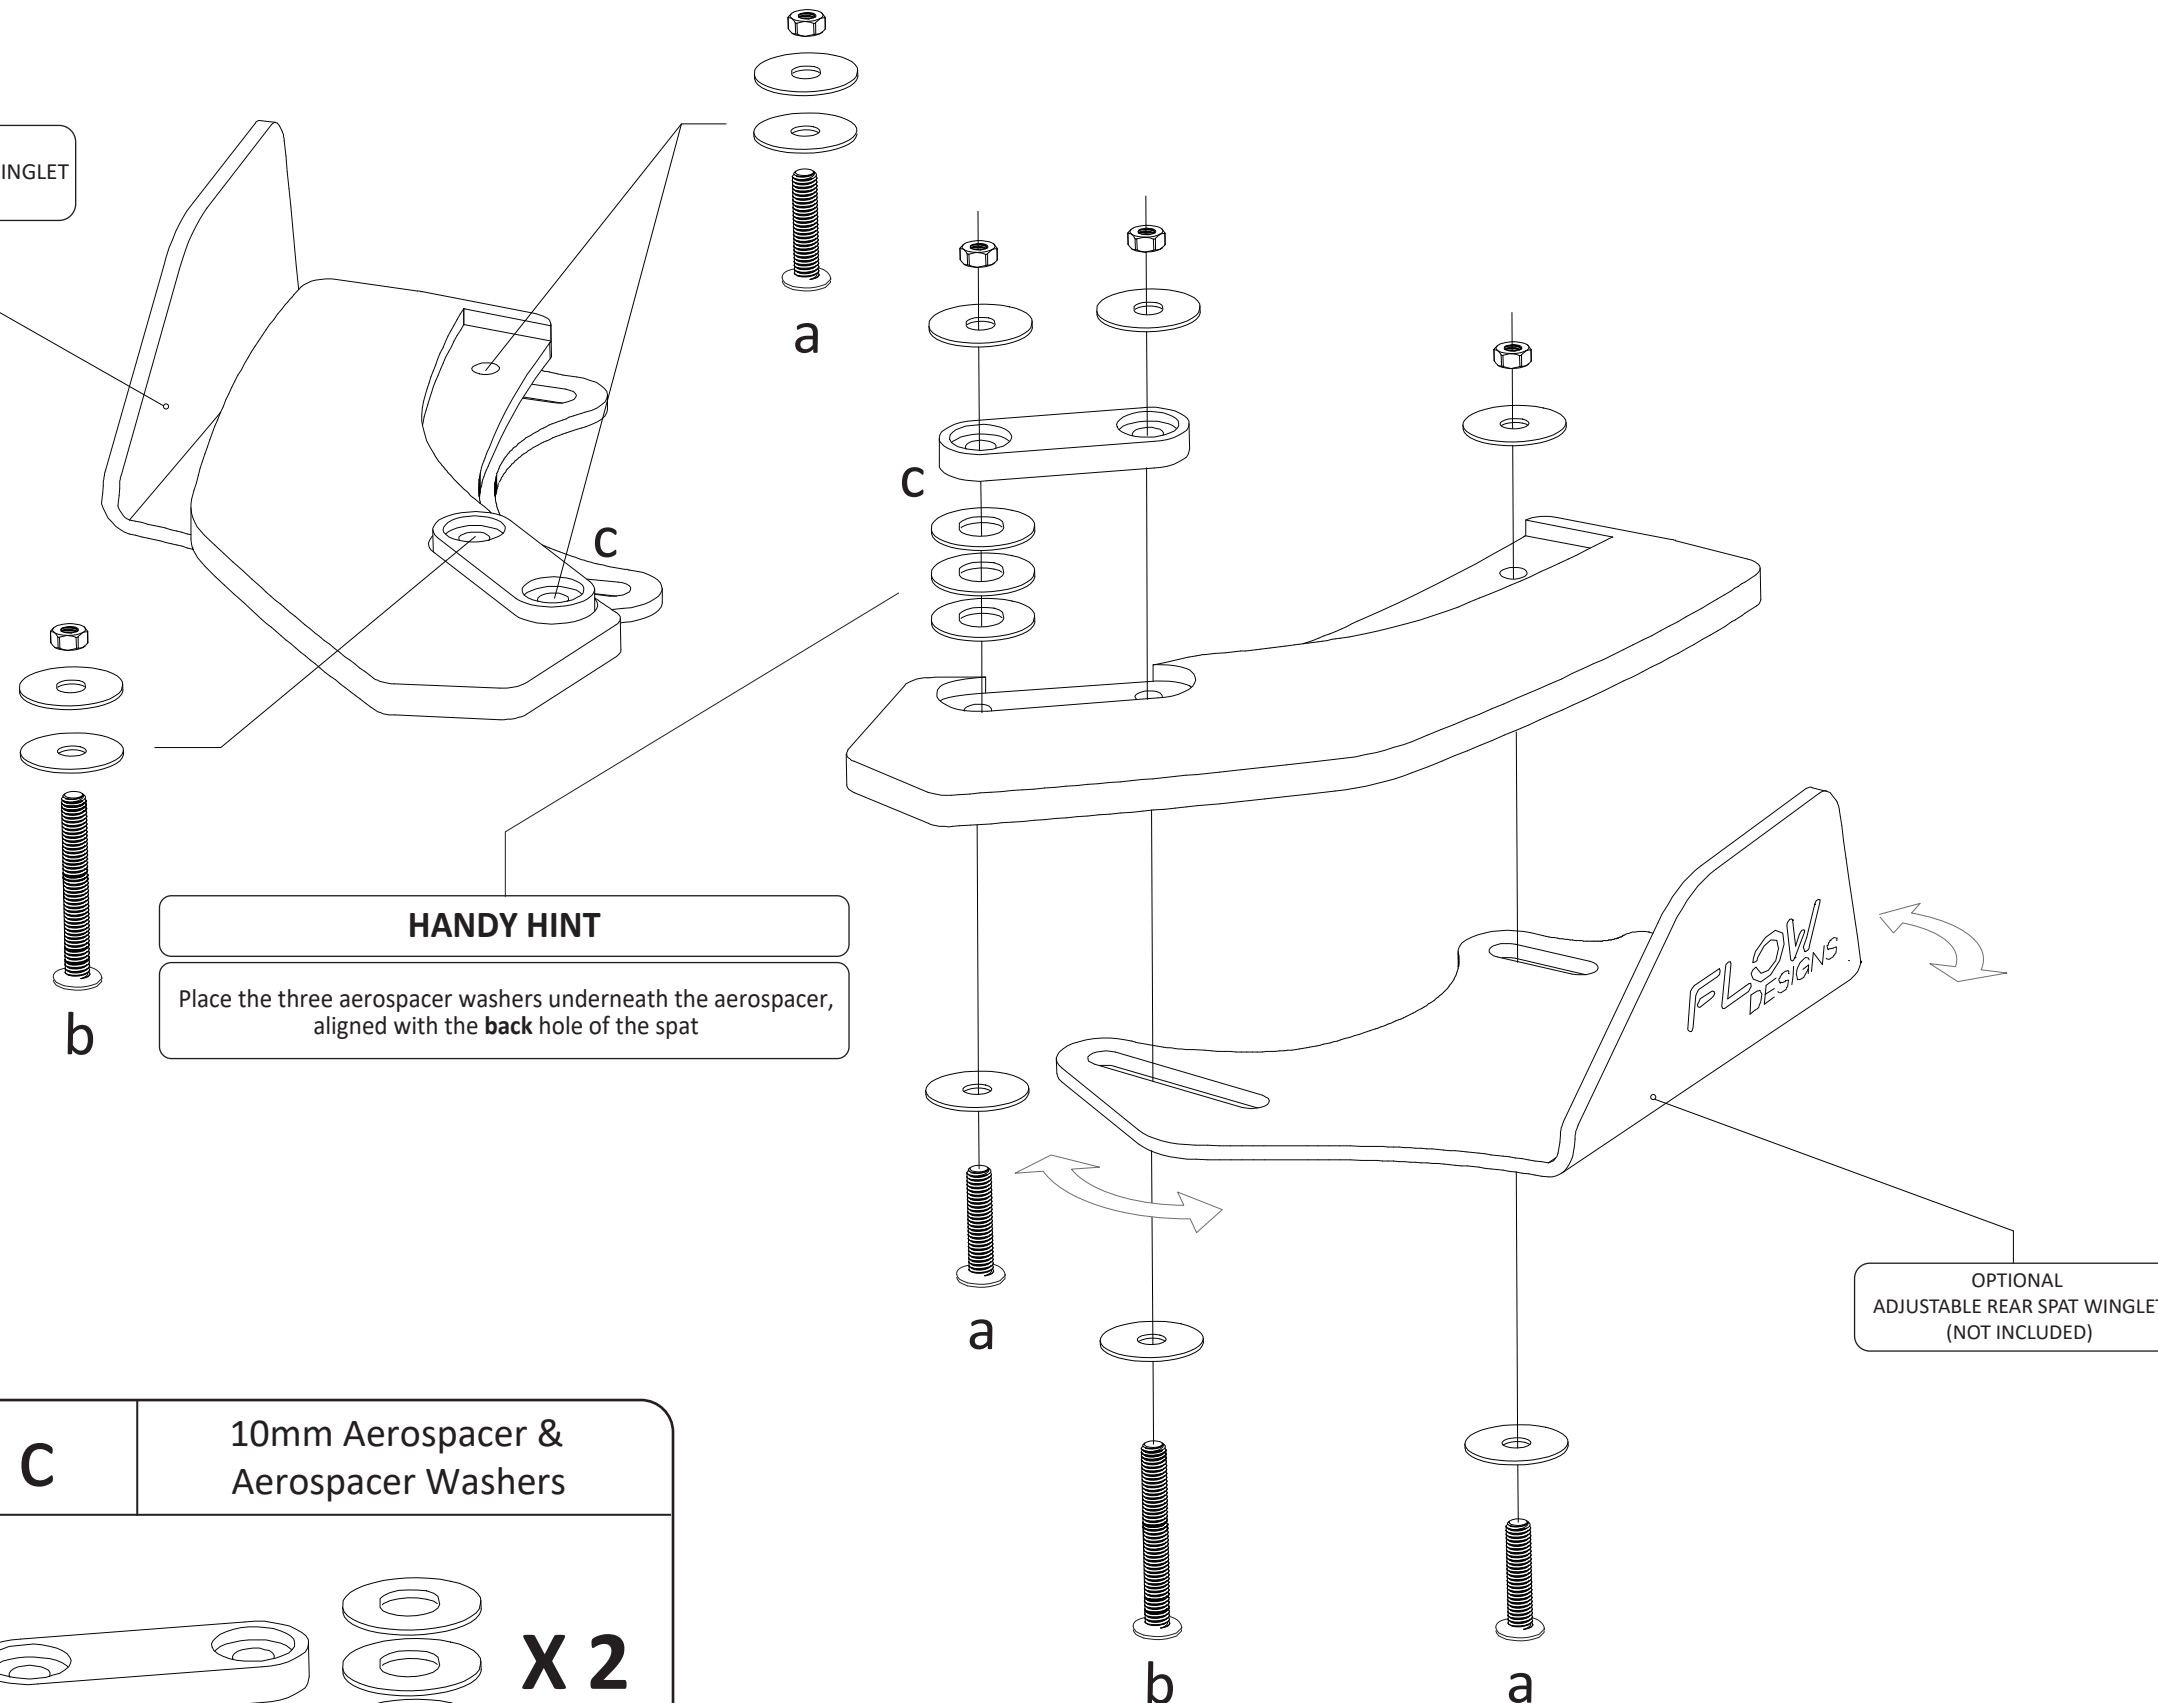

**HANDY HINT**  
Place the three aerospacer washers underneath the aerospacer, aligned with the **back** hole of the spat

OPTIONAL  
ADJUSTABLE REAR SPAT WINGLET  
(NOT INCLUDED)


## FITTING KIT

**a**

**M6 BOLT  
30mm LONG**

**X 4**

PLEASE NOTE:  
DRILLING REQUIRED  
TO FASTEN TO REAR BUMPER  
PLEASE USE 8mm DRILL BIT

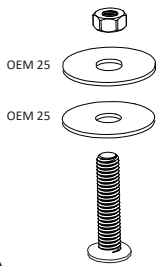


**b**

**M6 BOLT  
60mm LONG**

**X 2**

PLEASE NOTE:  
DRILLING REQUIRED  
TO FASTEN TO REAR BUMPER  
PLEASE USE 8mm DRILL BIT

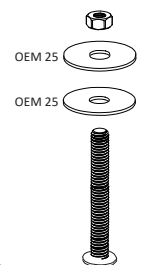

**C**

**10mm Aerospacer &  
Aerospacer Washers**

**X 2**

