FITTING DIAGRAM


HYUNDAI i30 PD 1,2,3 - SIDE WINGLET INSTRUCTIONS

INSTALLATION AND FITTING SERVICES

If you are having any difficulties please seek professional advice from the listed International and Domestic Authorised Dealers on our website.

www.flowdesignsaustralia.com

BUMPER REMOVAL NOT REQUIRED

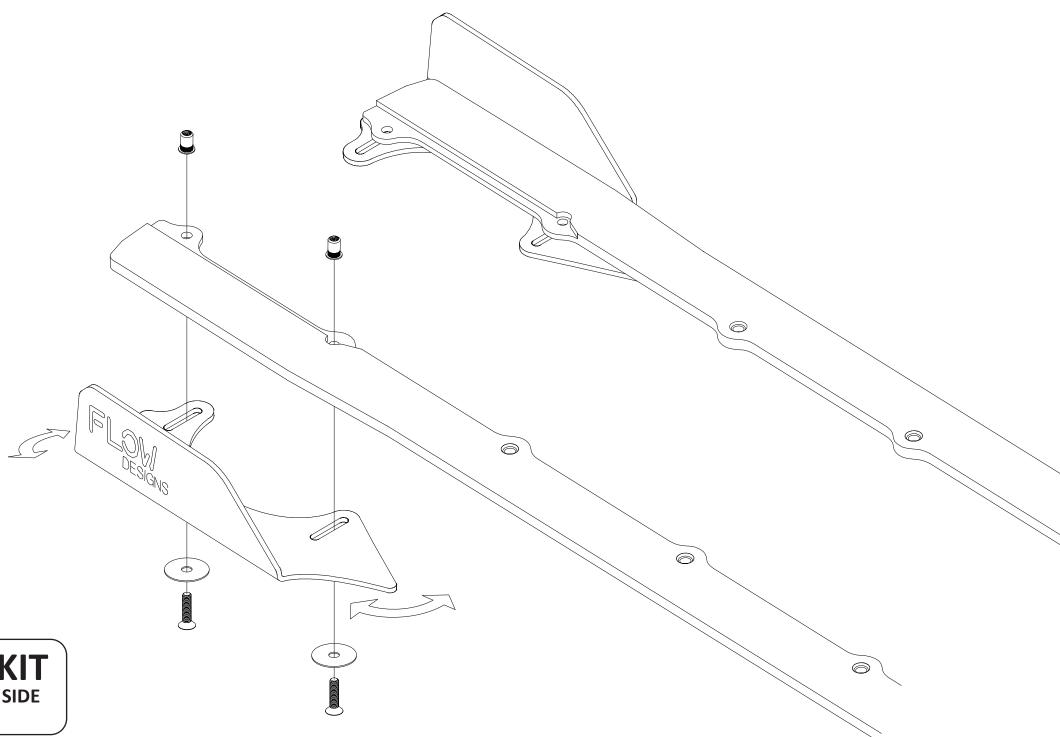

FITTING KIT SUPPLIED WITH SIDE SPLITTERS



M6 BOLT 25mm LONG

X4





 \bigcirc

DRILLING NOT **REQUIRED**TO FASTEN TO SPLITTER

PLEASE NOTE:

DO NOT OVERTIGHTEN









TERMS AND CONDITIONS : MISUSE OF GOODS

This Product application is not intended for public road registered vehicles within Australia. Regulatons may vary from Countries outide of Australia. Please check your Country's and State's road regulatons before installing on a vehicle inten public road use.